

The Cabin Eight Two-Tier


Assembly instructions · Waldenhaus


Electric and wood-fired editions

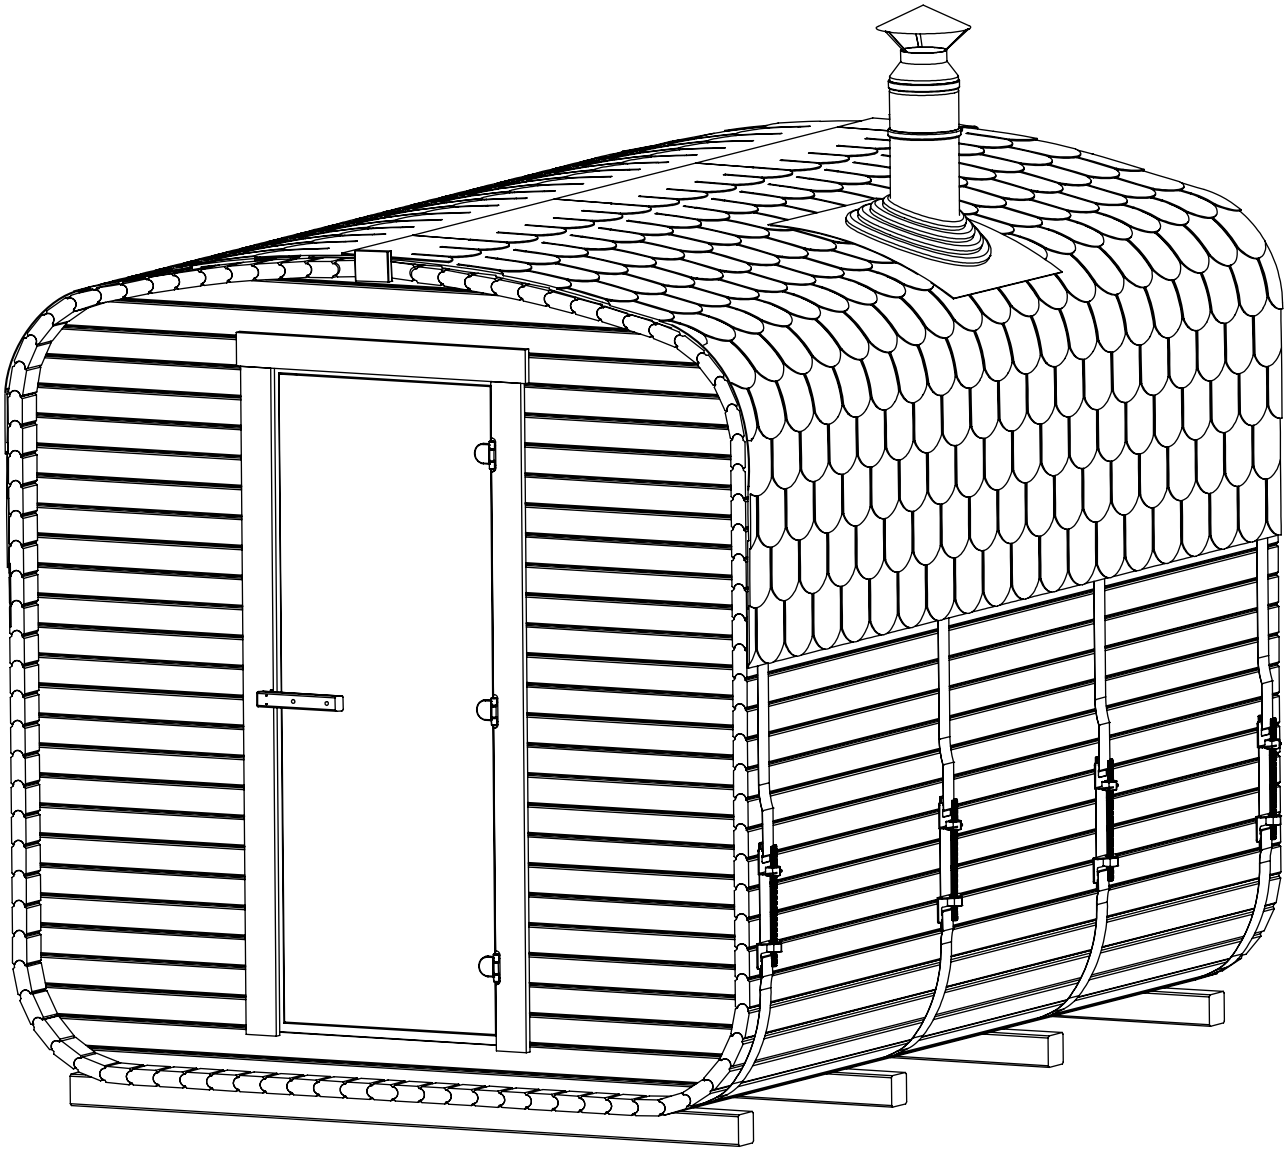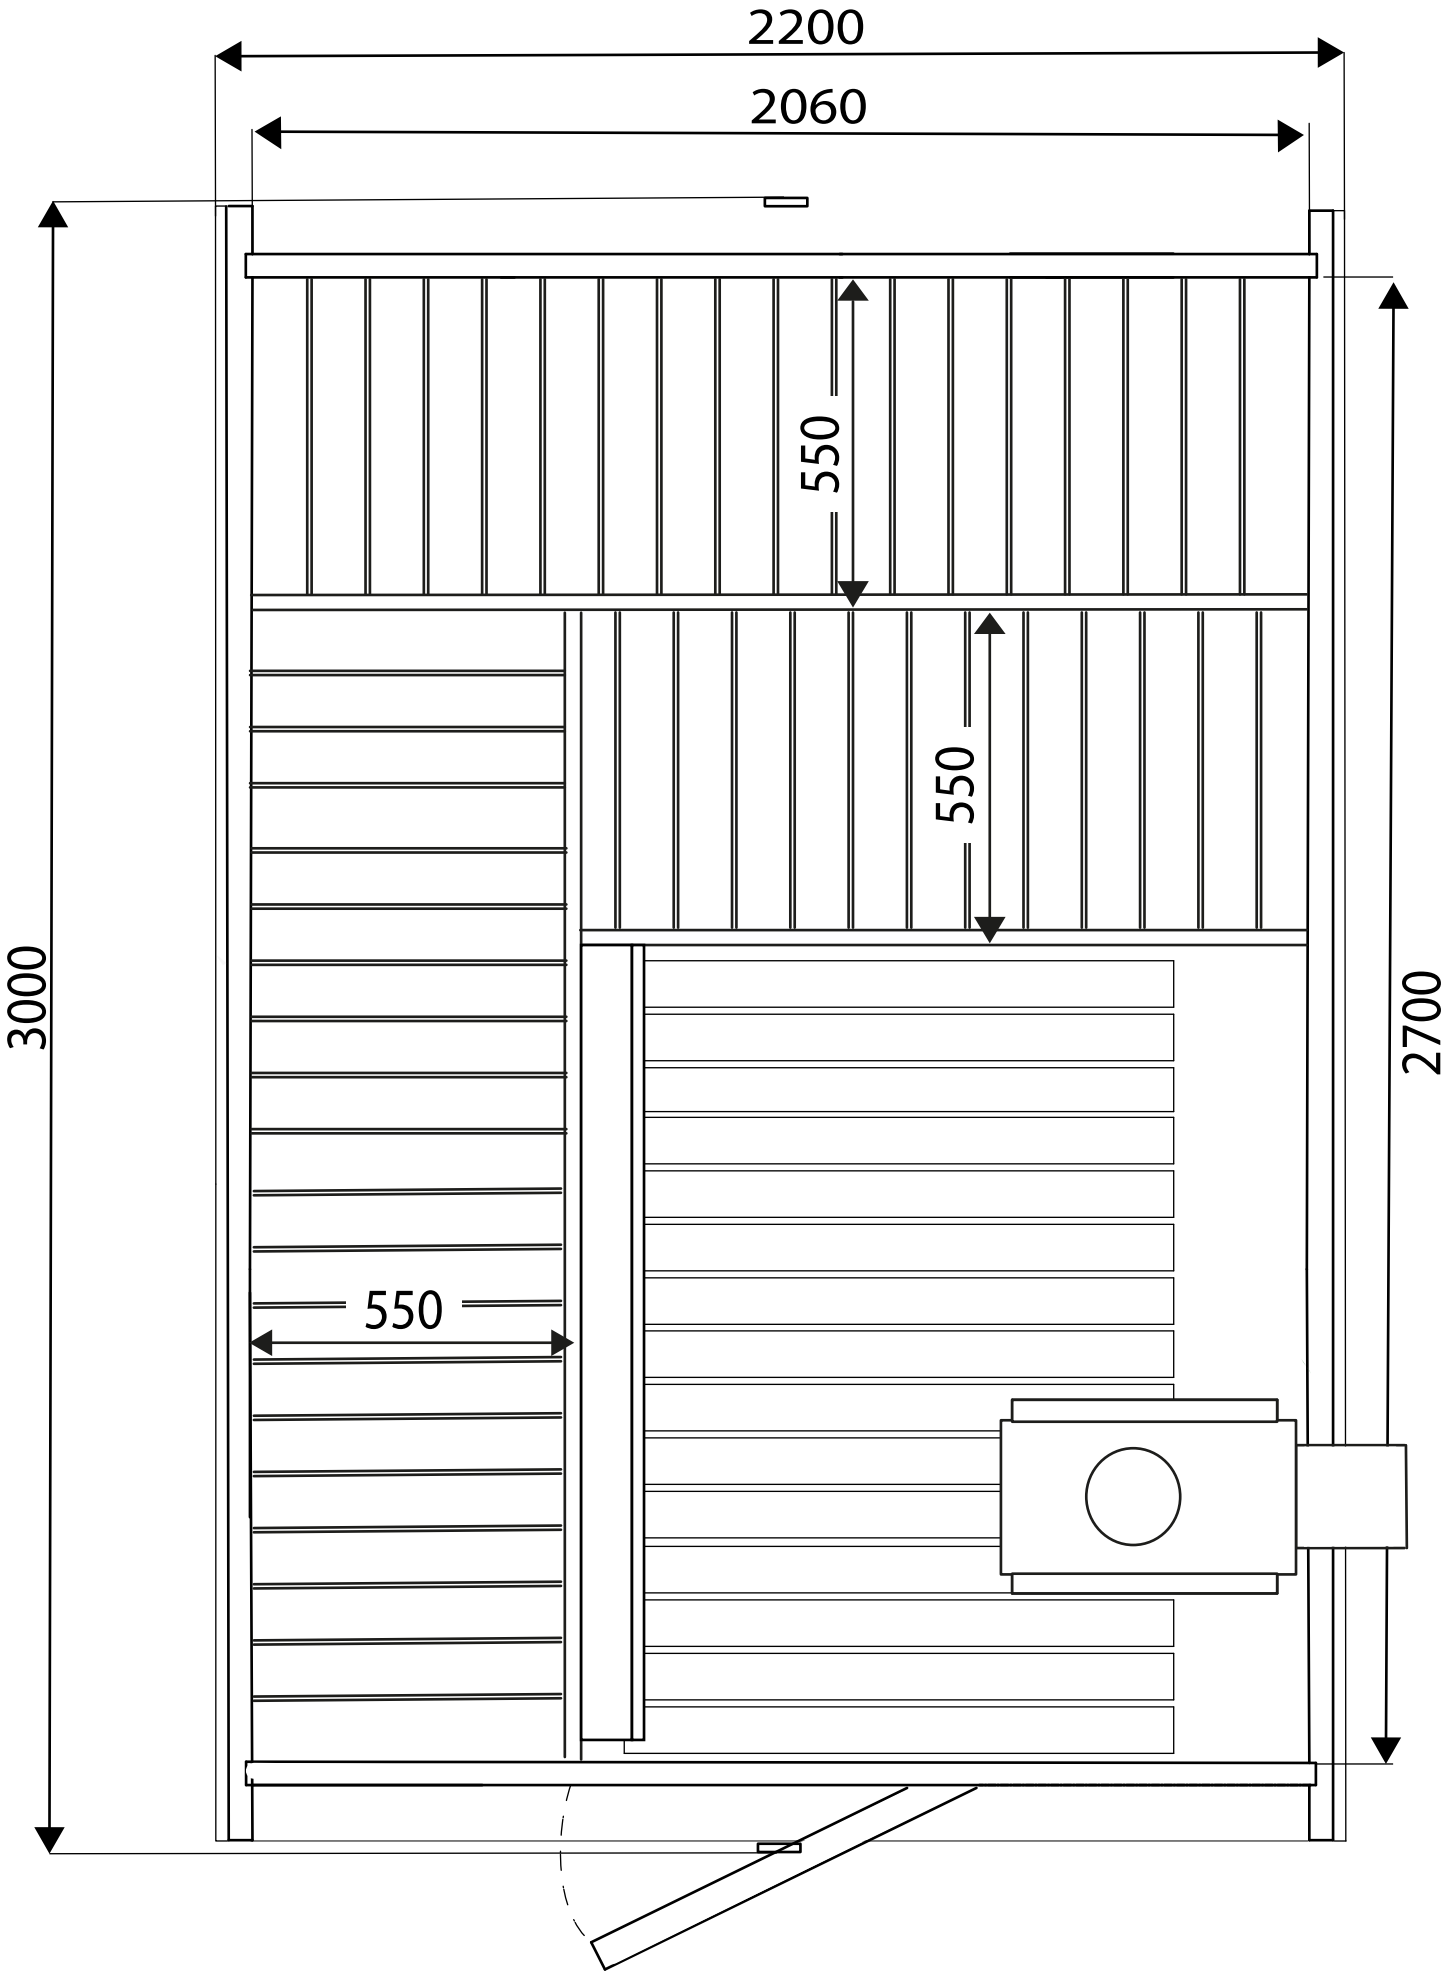




2200
2060
550
550
550
3000
2700

Tools you need

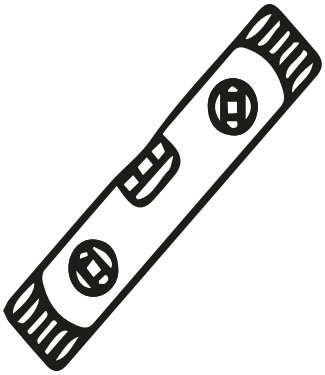

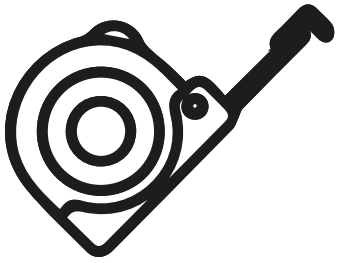


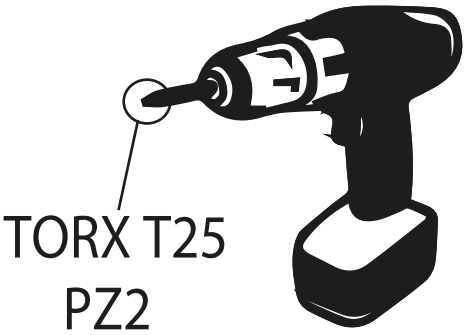


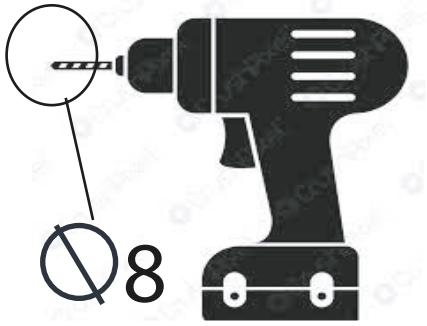






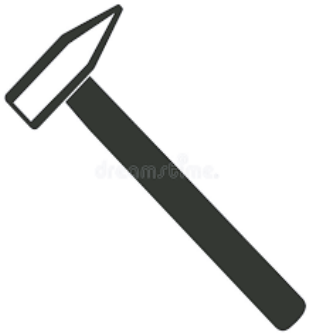

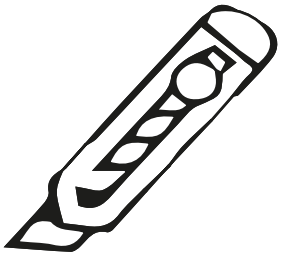

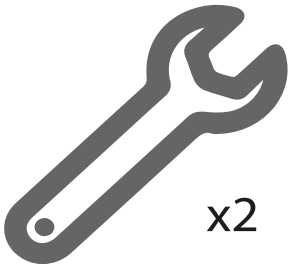




+




treatment




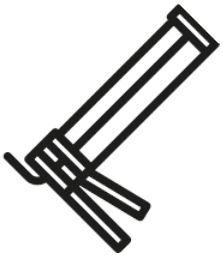

+

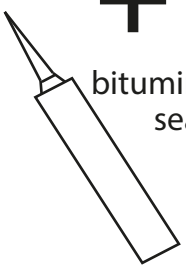



bituminous sealant

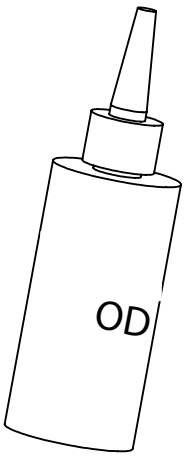


impregnating oil for benches


Not included

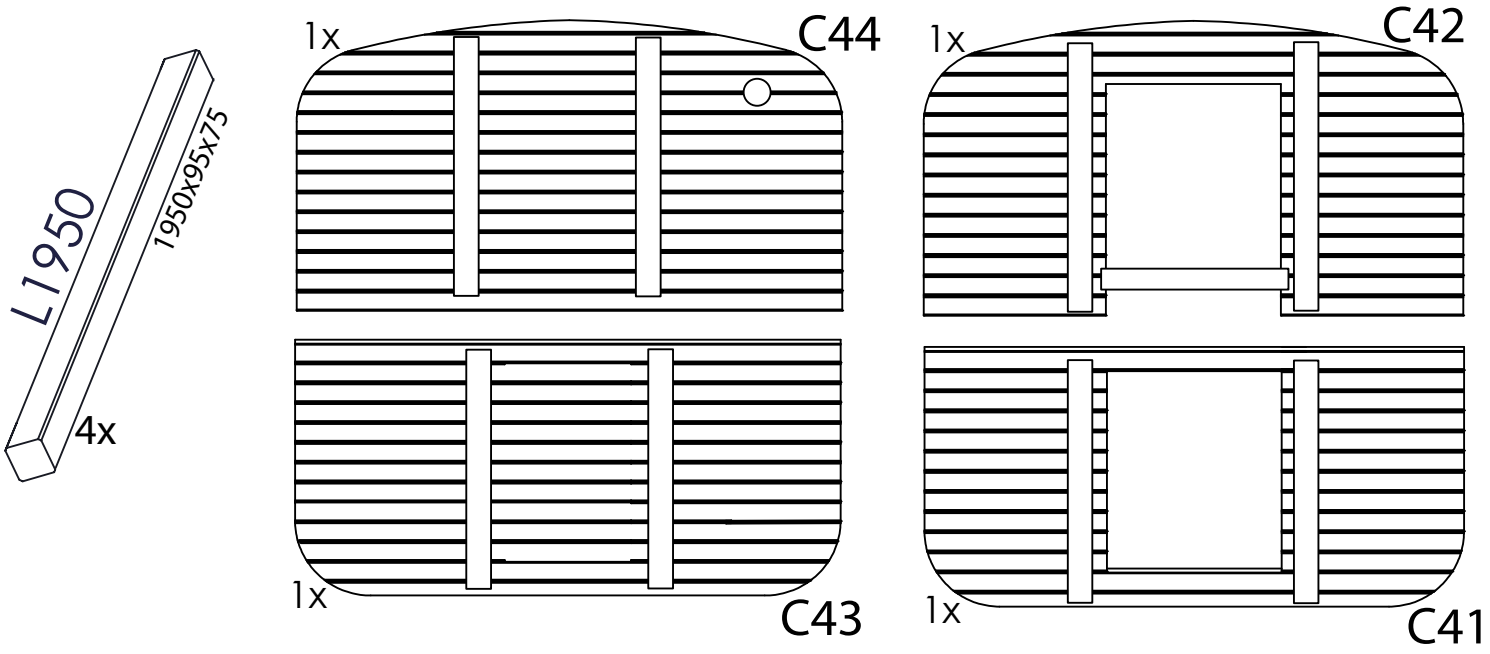

L1950
1950x95x75
4x
1x
C44
1x
C43
1x
C42
1x
C41

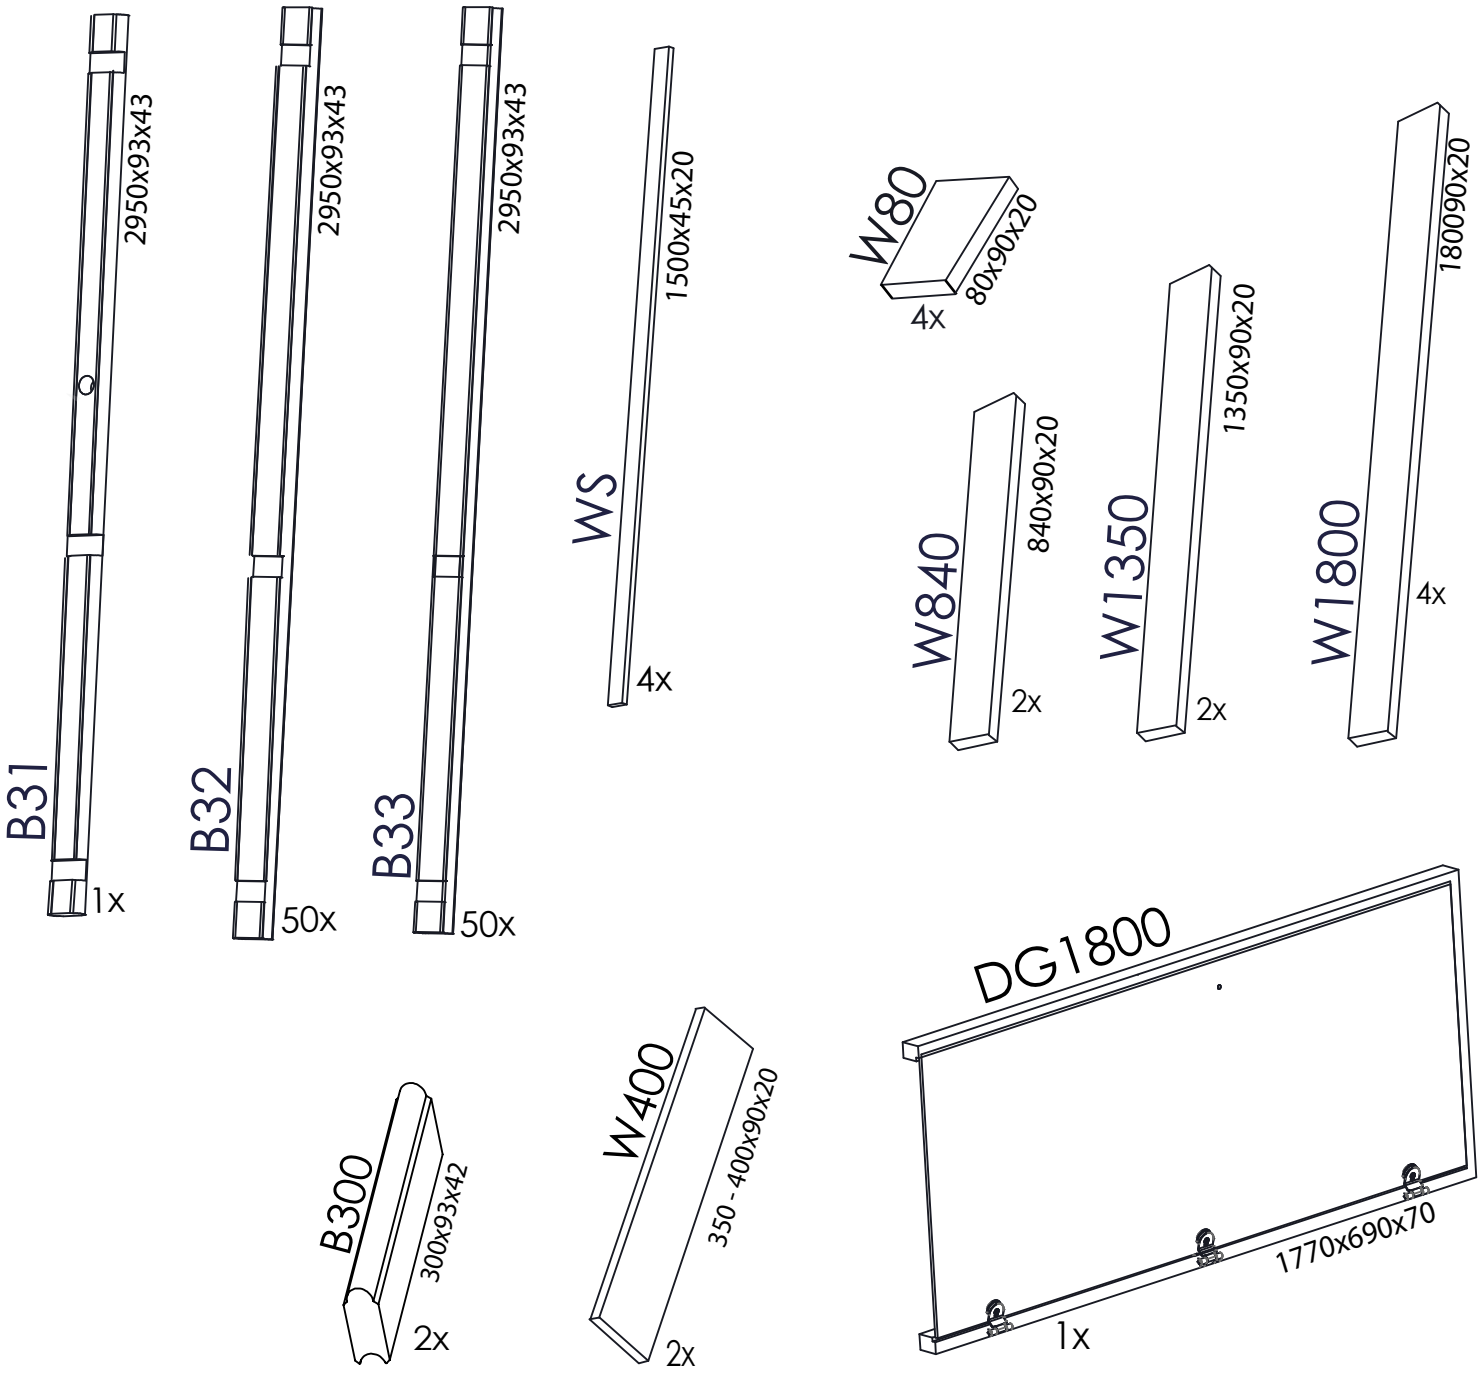

B31
2950x93x43
1x
B32
2950x93x43
50x
B33
2950x93x43
50x
WS
1500x45x20
4x
W80
80x90x20
4x
W840
840x90x20
2x
W1350
1350x90x20
2x
W1800
180090x20
4x


B300
300x93x42
2x
W400
350 - 400x90x20
2x
DG1800
1770x690x70
1x

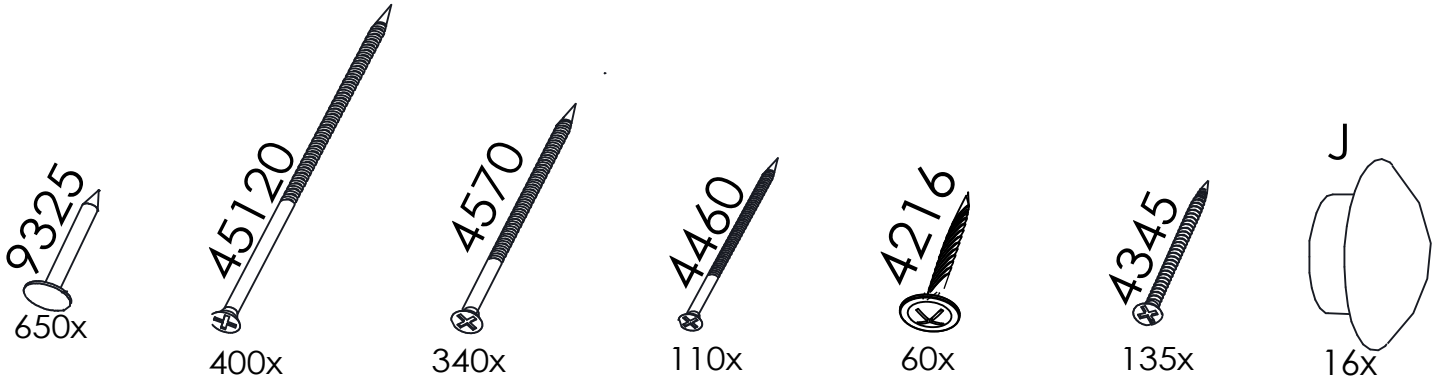
9325
650x
45120
400x
4570
340x
4460
110x
4216
60x
4345
135x
J
16x

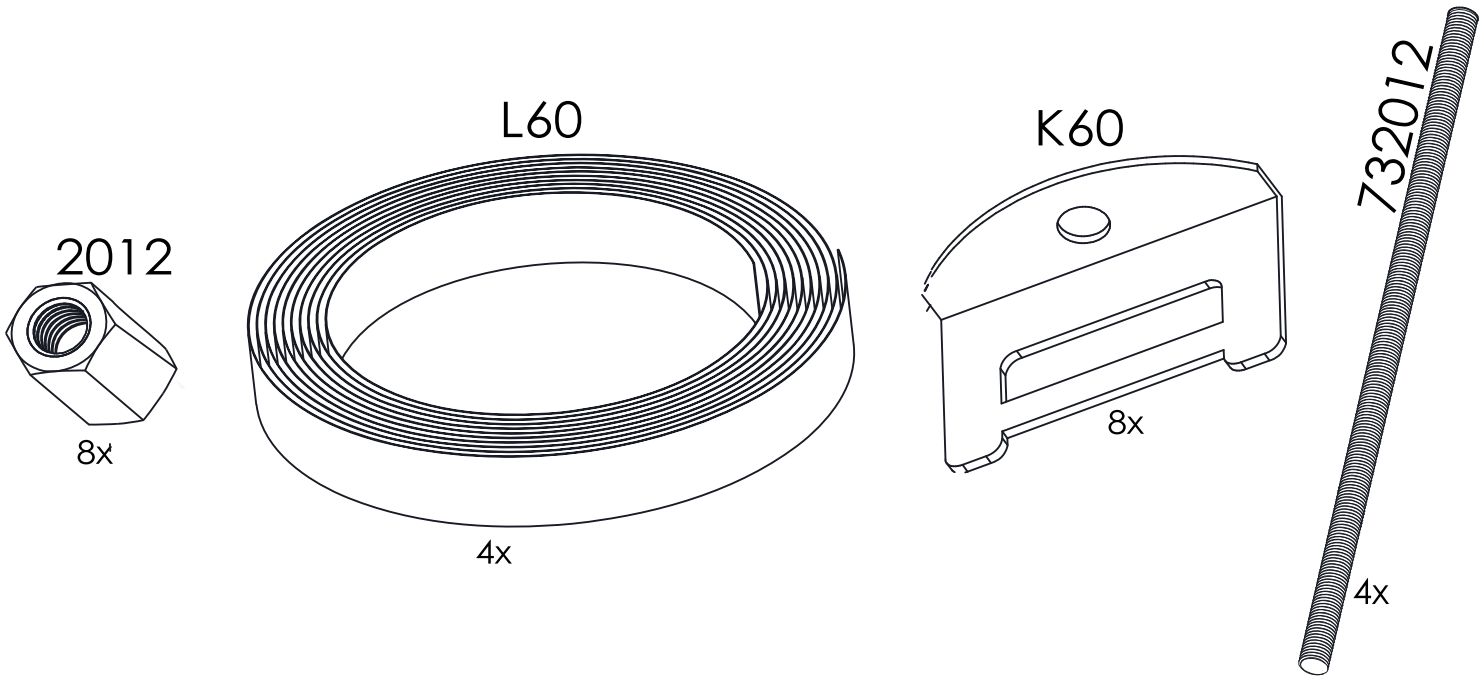
2012
8x
L60
4x
K60
8x
732012
4x

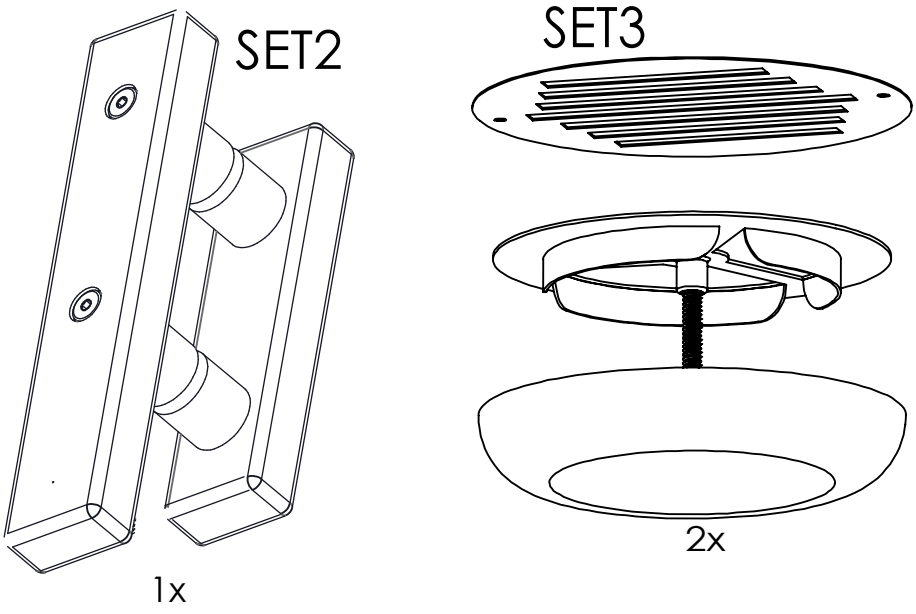

SET2
1x
SET3
2x
Q1
1x

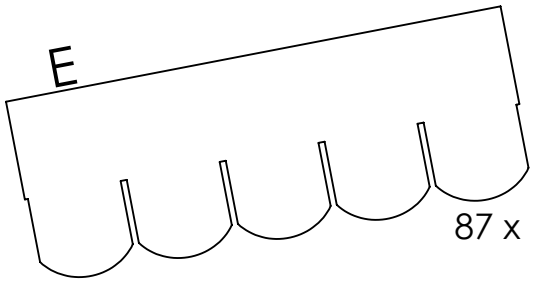
E
87 x

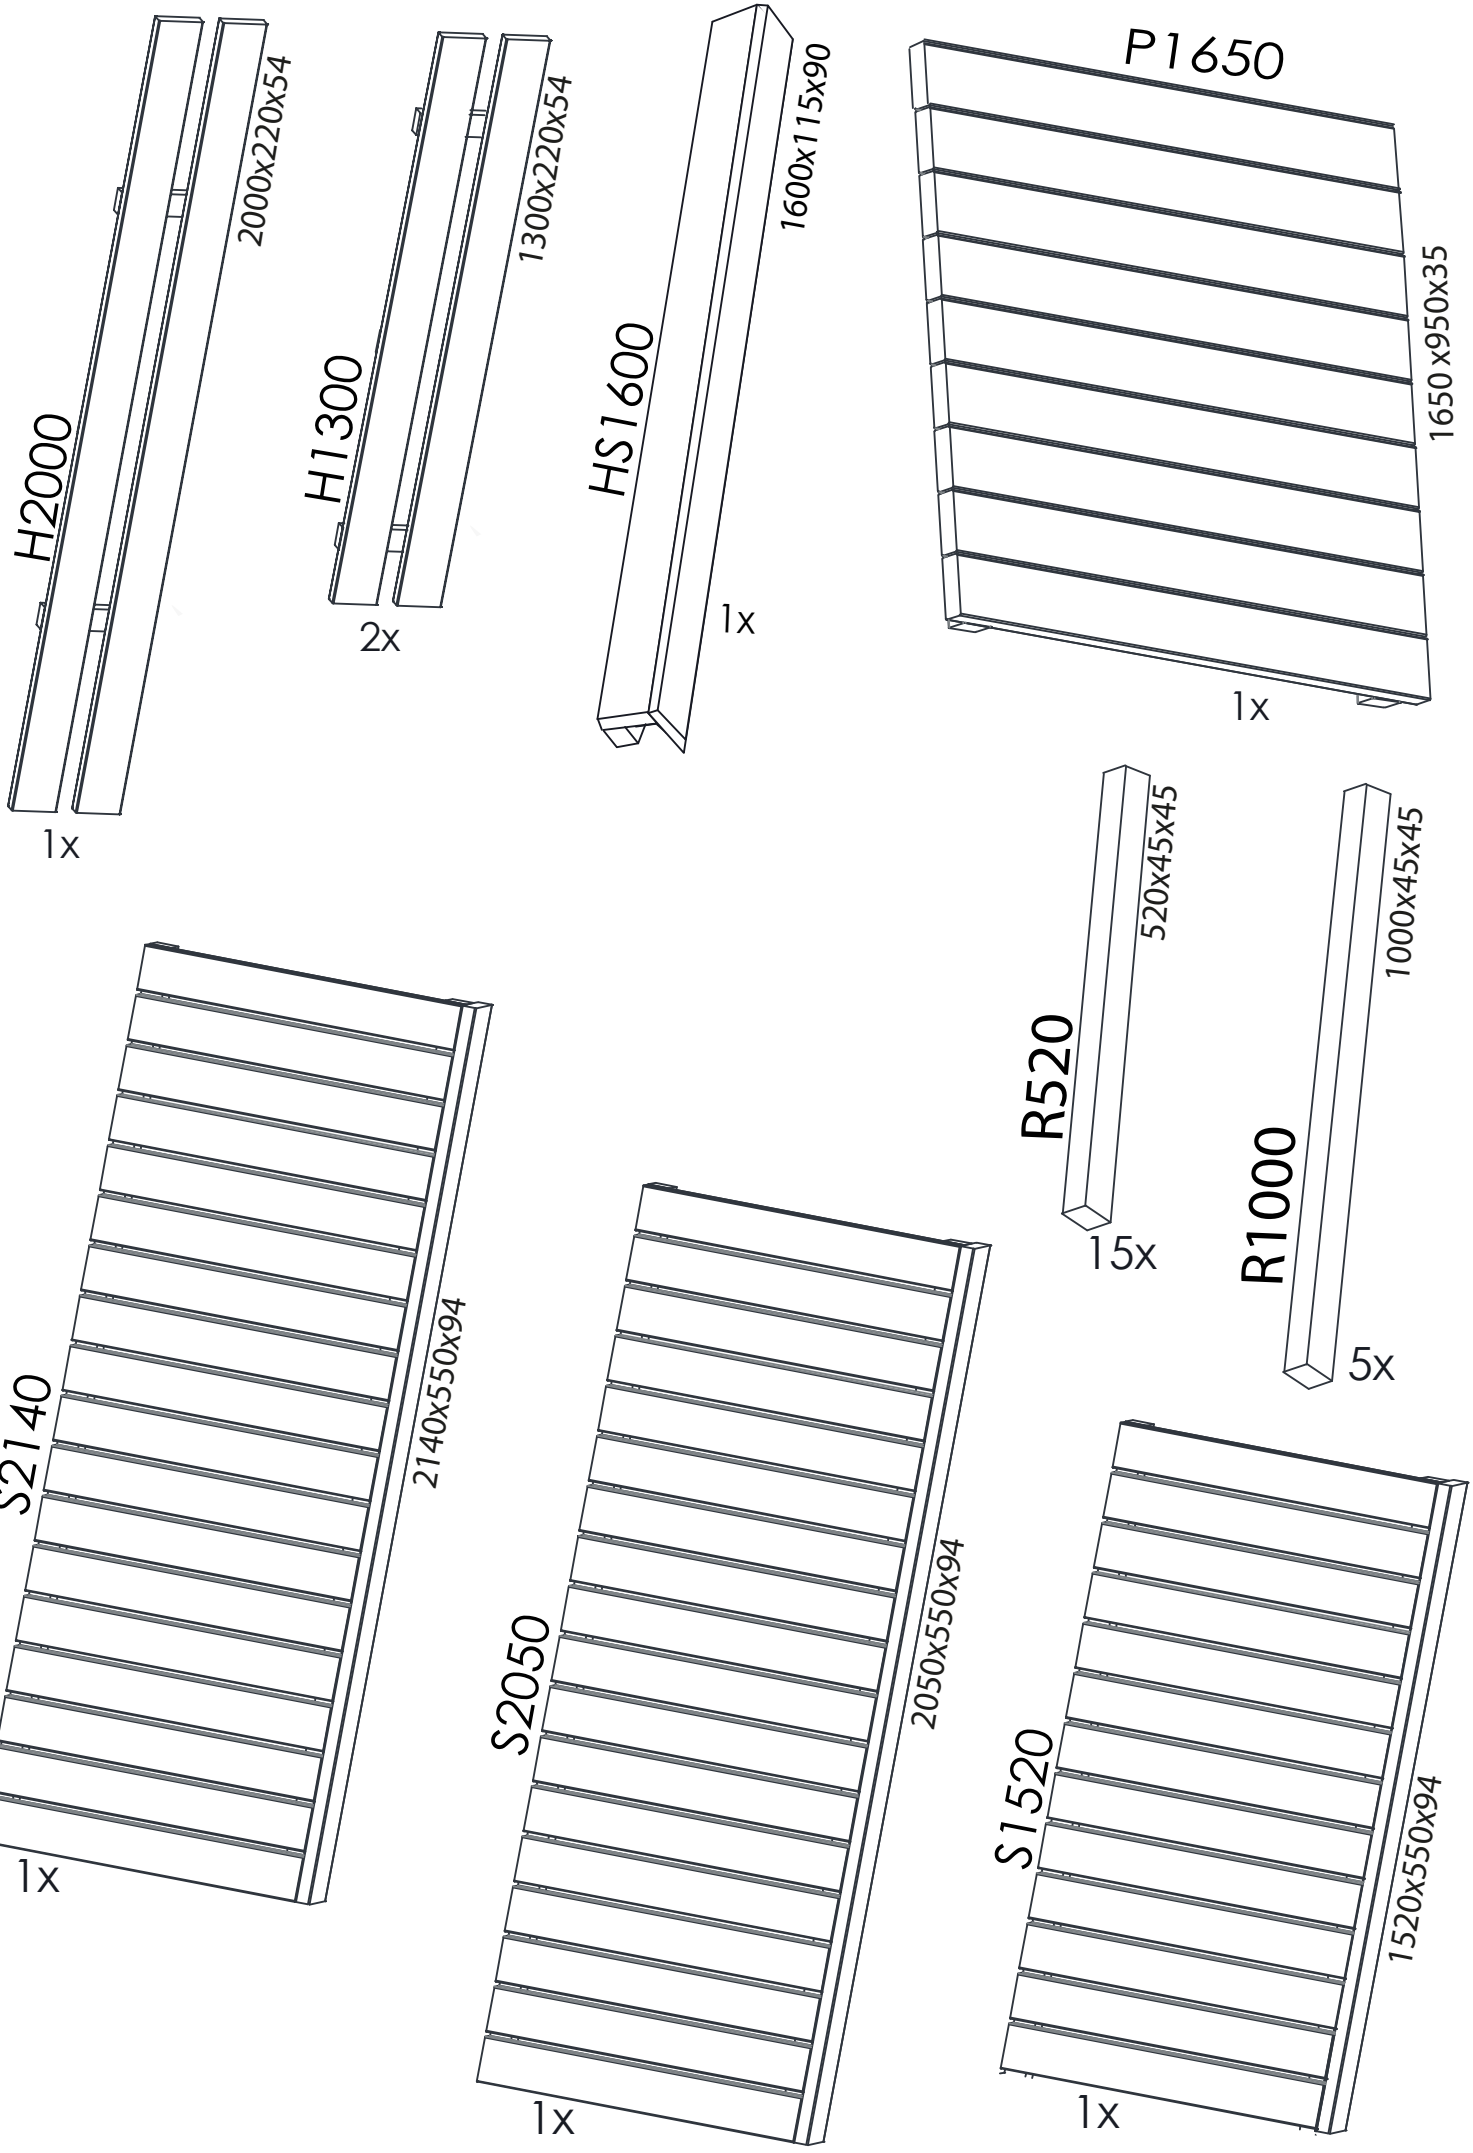
H2000
2000x220x54
1x
H1300
1300x220x54
2x
HS1600
1600x115x90
1x
P1650
1650 x950x35
1x
R520
520x45x45
15x
R1000
1000x45x45
5x
S2140
2140x550x94
1x
S2050
2050x550x94
1x
S1520
1520x550x94
1x

PANORAMA WINDOW: AN OPTIONAL EXTRA

for installation see **Appendix 2**

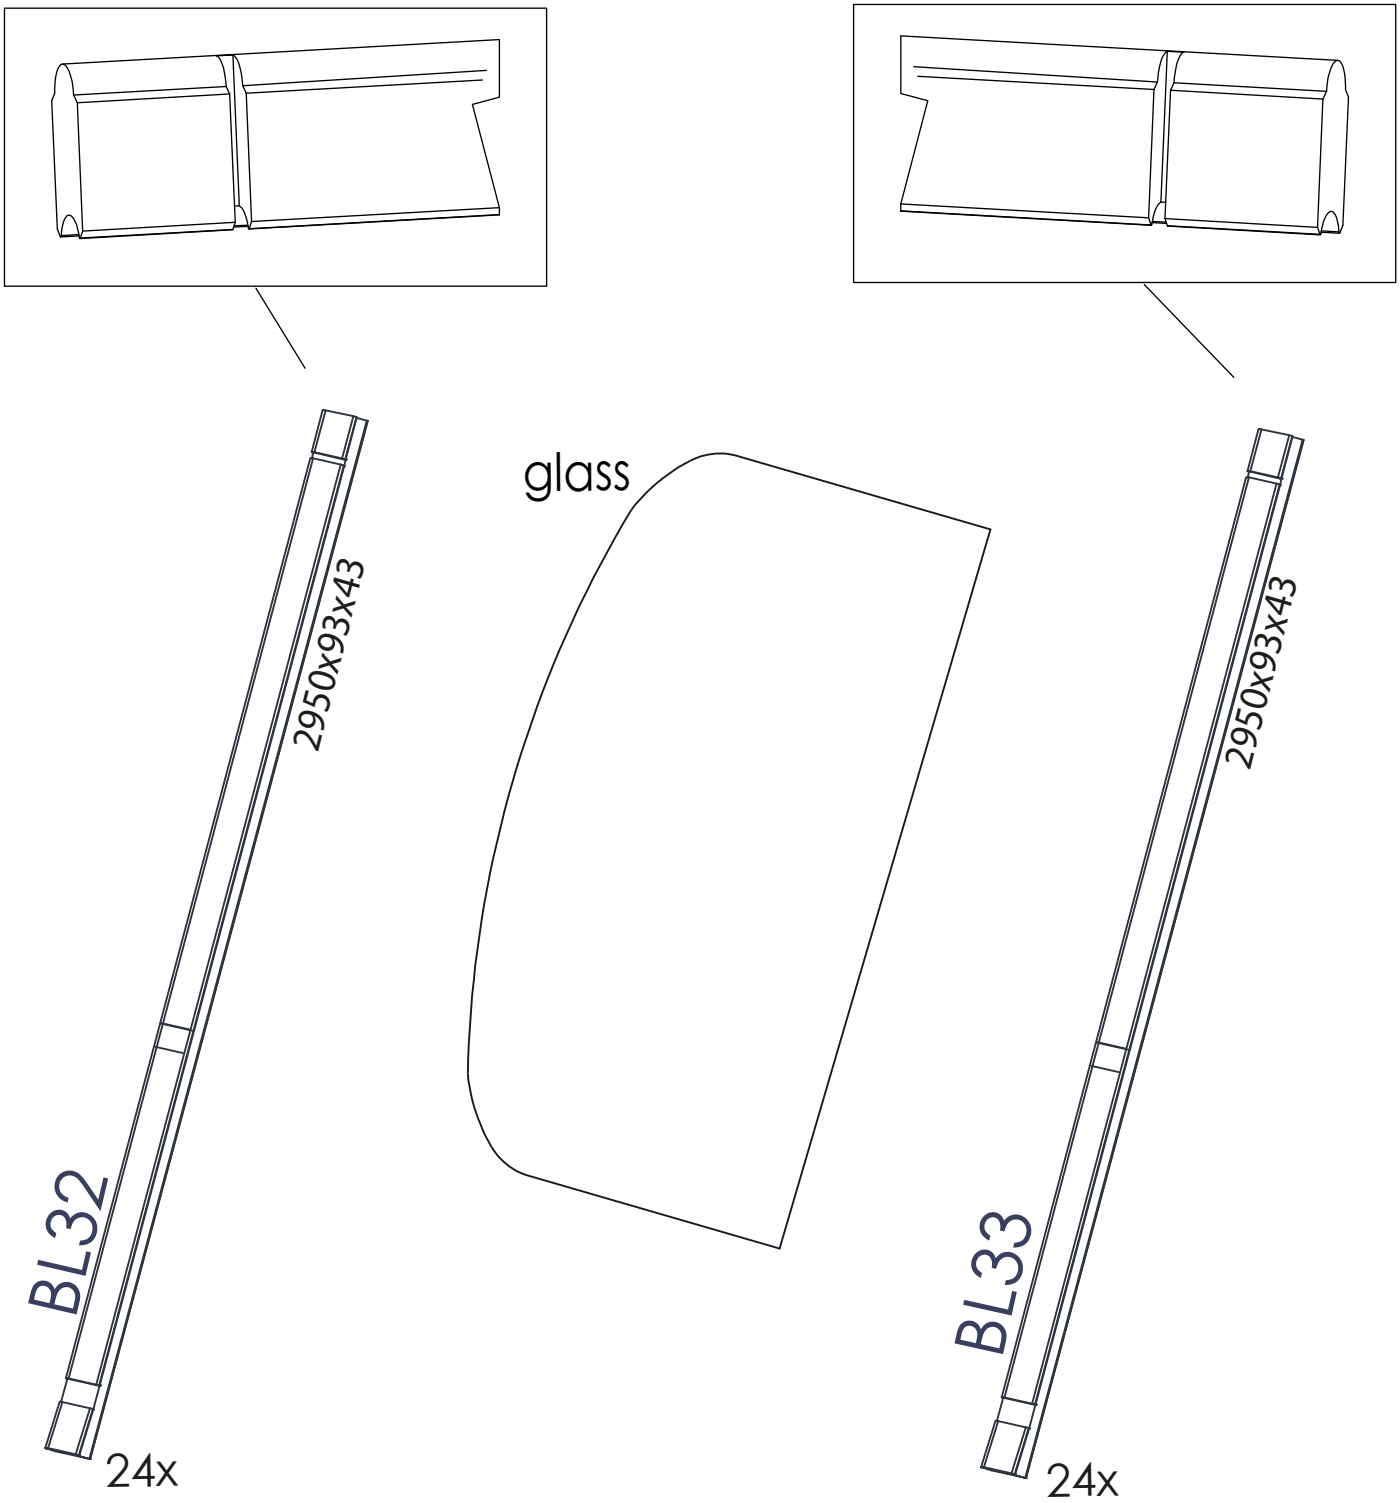


WOOD-FIRED VERSION: THE STOVE AND FLUE SET

ELECTRIC VERSION: THE HEATER ON THE RIGHT


for installation see **Appendix 3**

G12




1x

G7

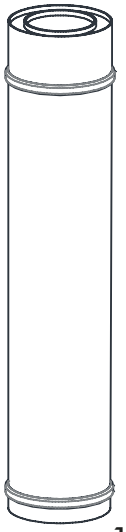


1x

G8

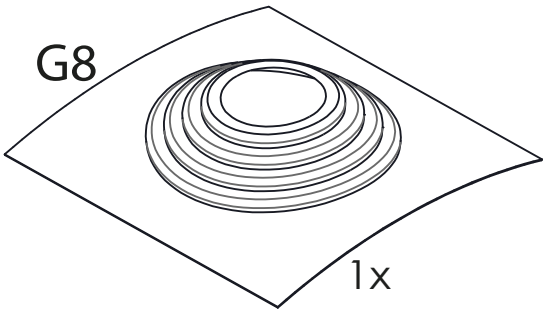


1x

G9

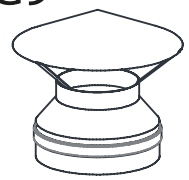


1x

G6

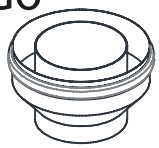


1x

Q2

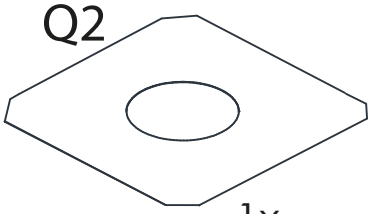


1x

Q5

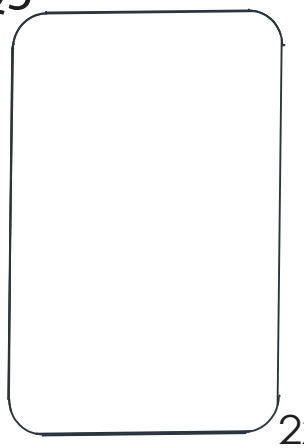


2x

Q4

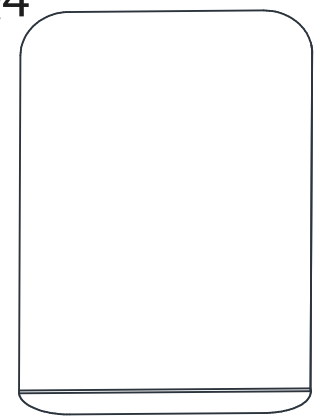


1x

ELECTRIC STOVE

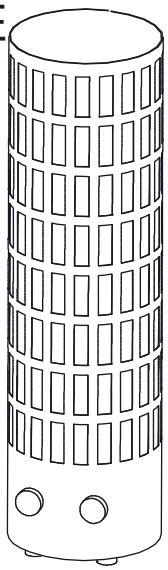


1x

G1

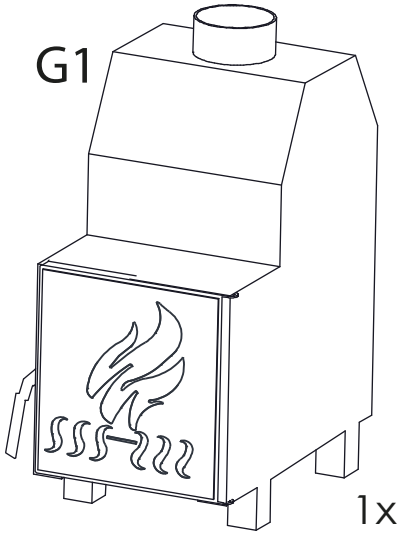


1x

G4

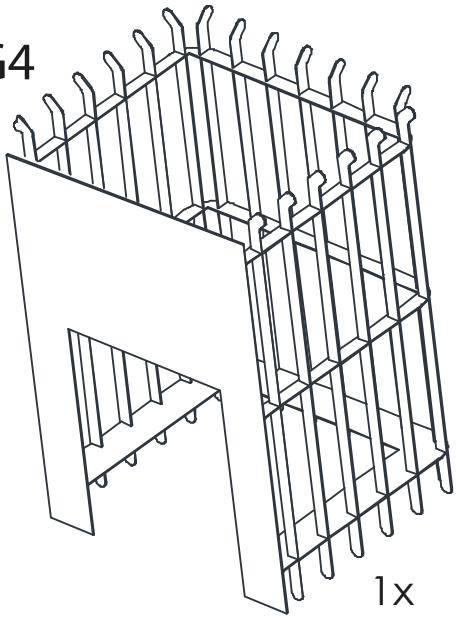

1x


G5

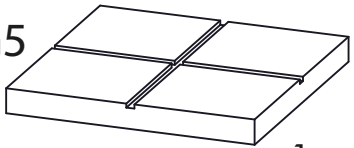



- for G1 only


1x

L1950 - 4

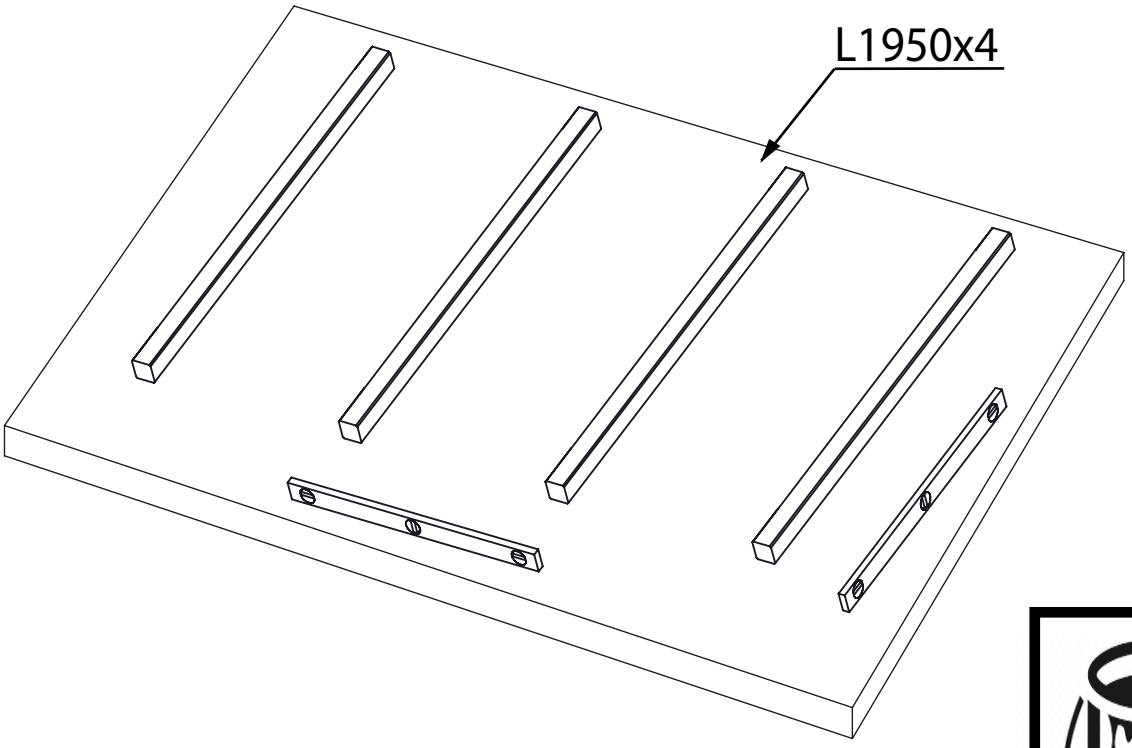


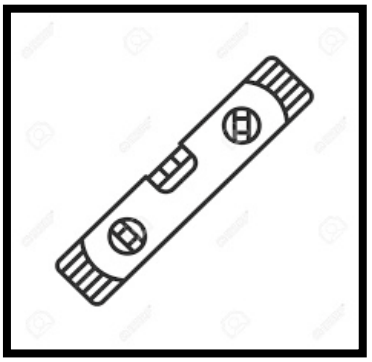


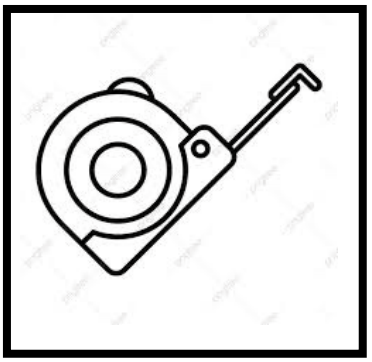

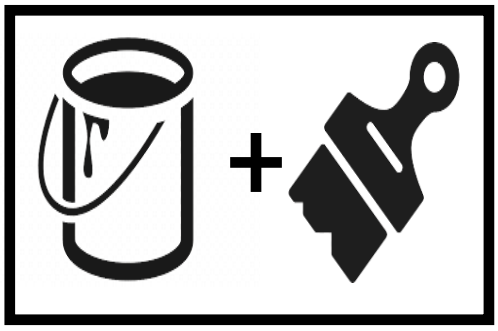



ENTER

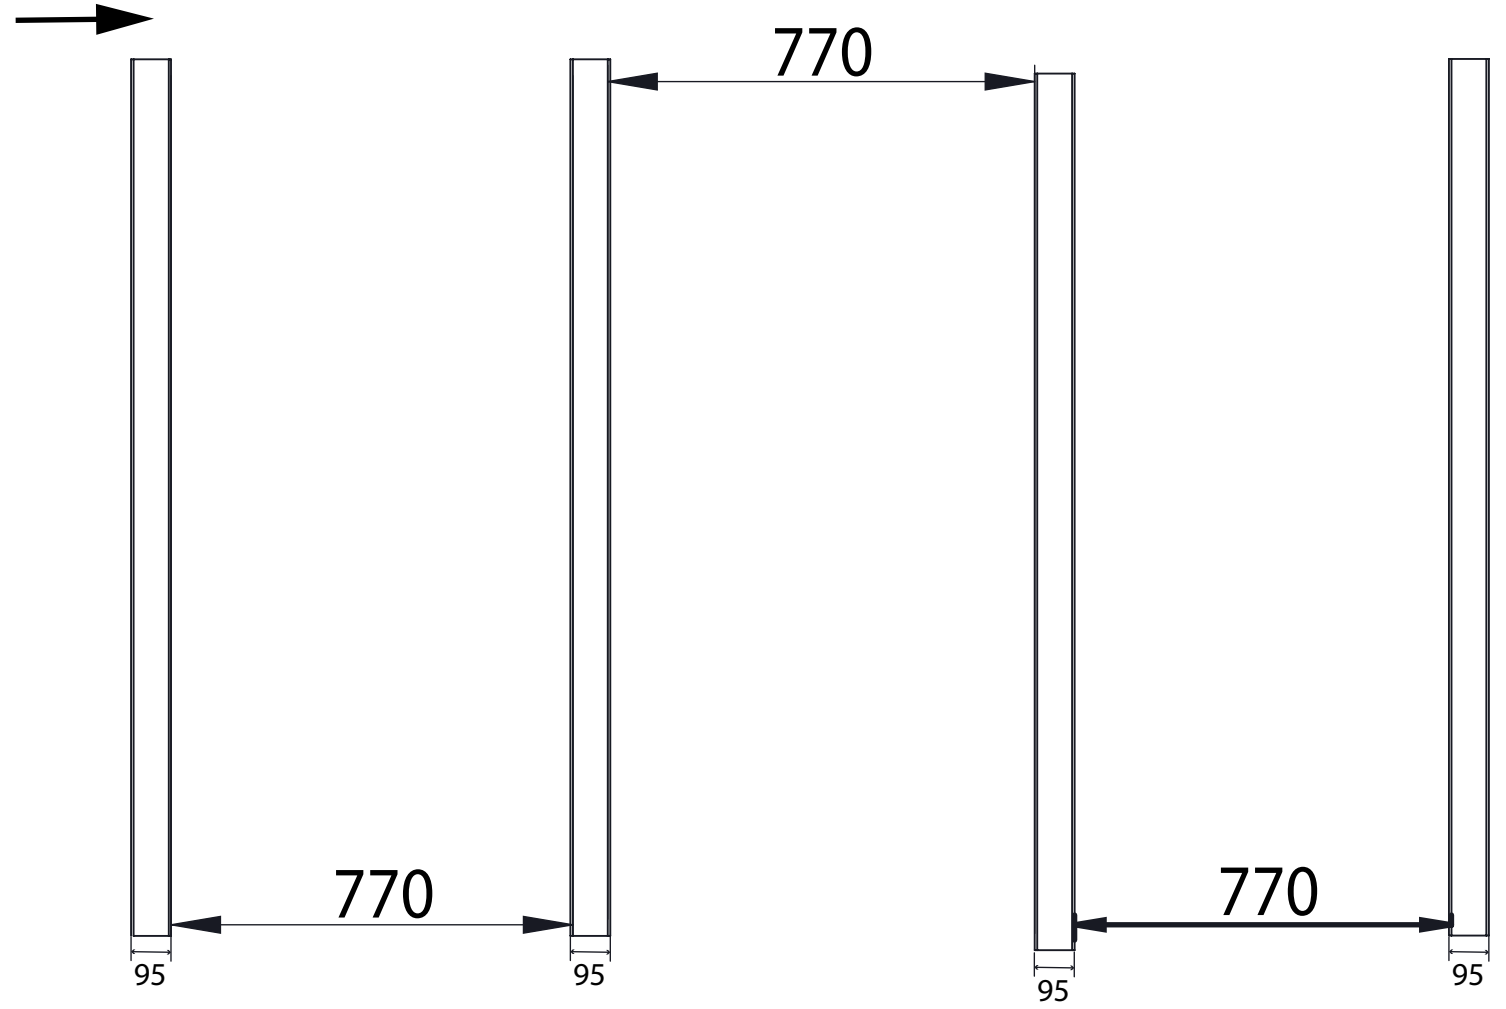

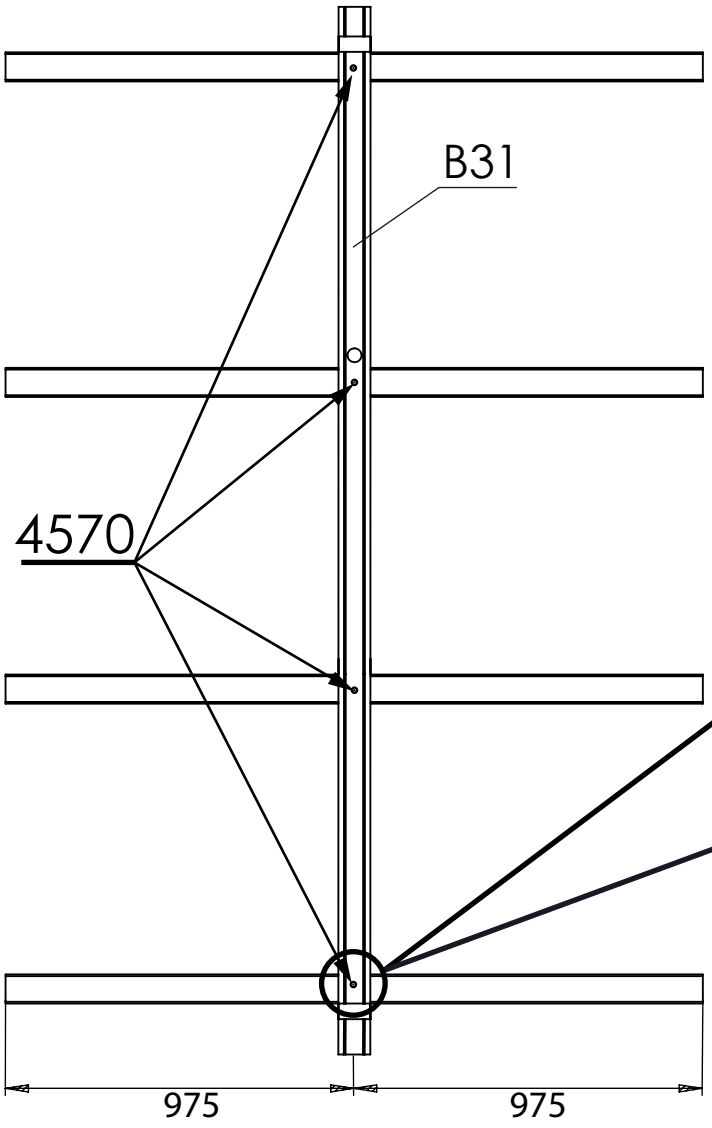



B31 - 1
B32 - 9
B33 - 9
4570 - 76
45120 - 90

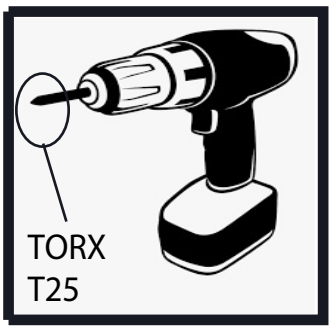


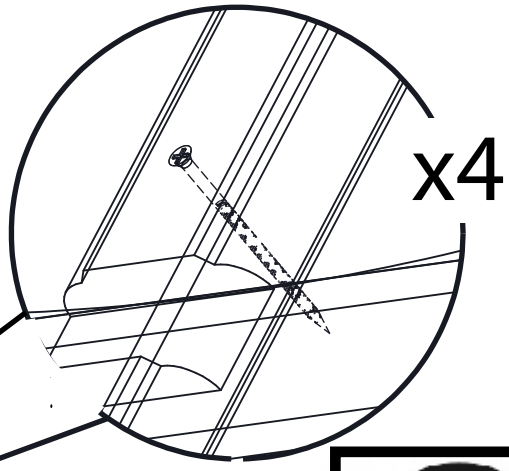



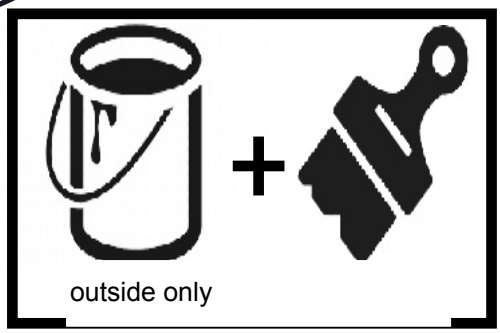


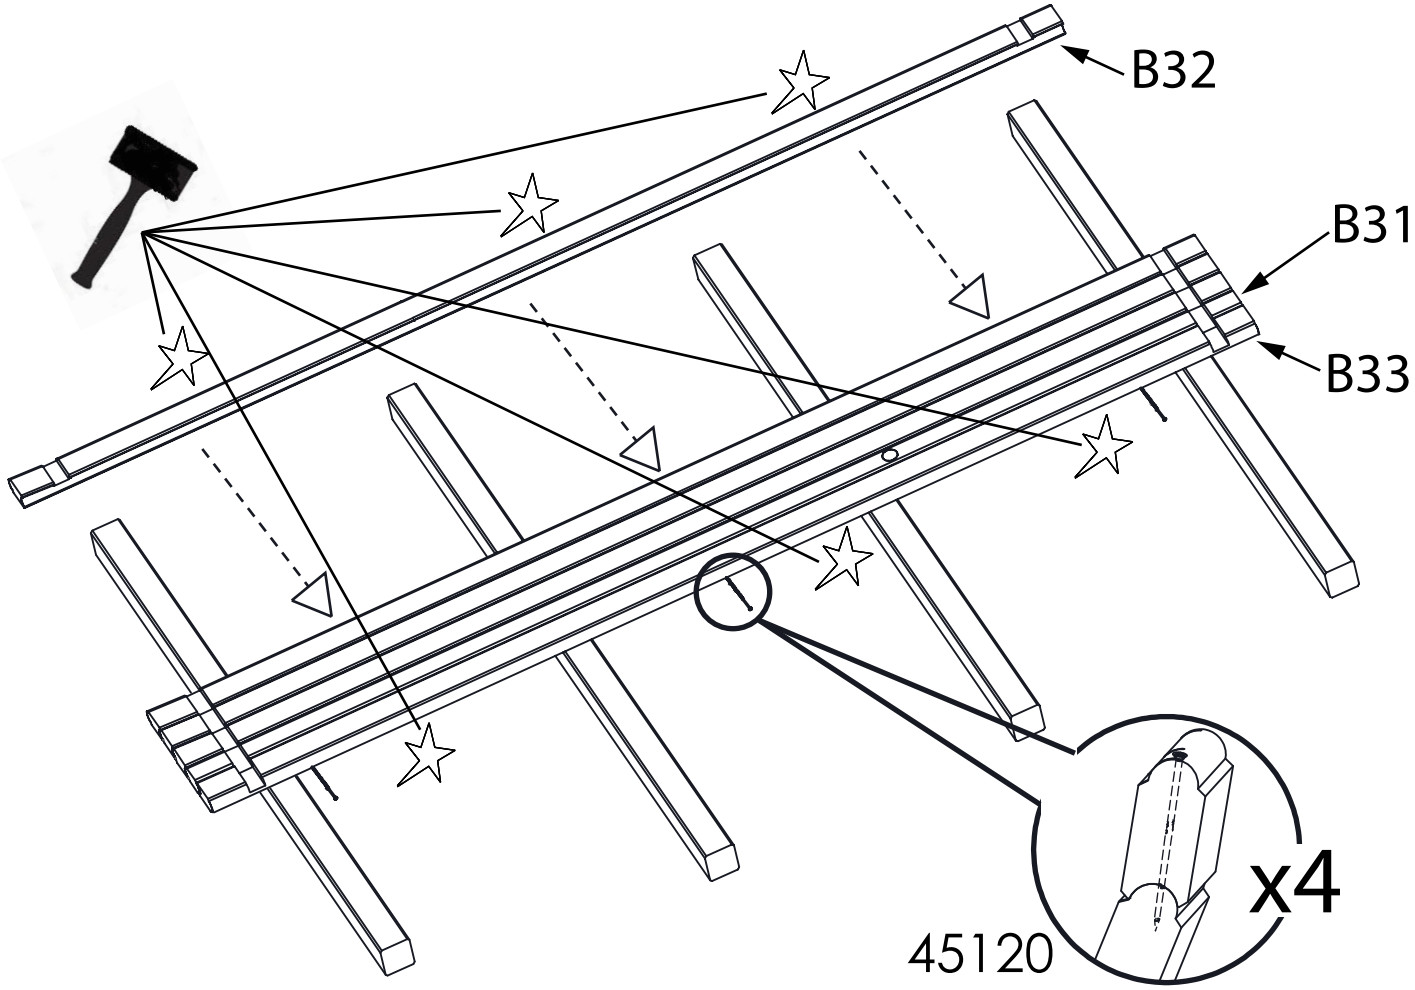


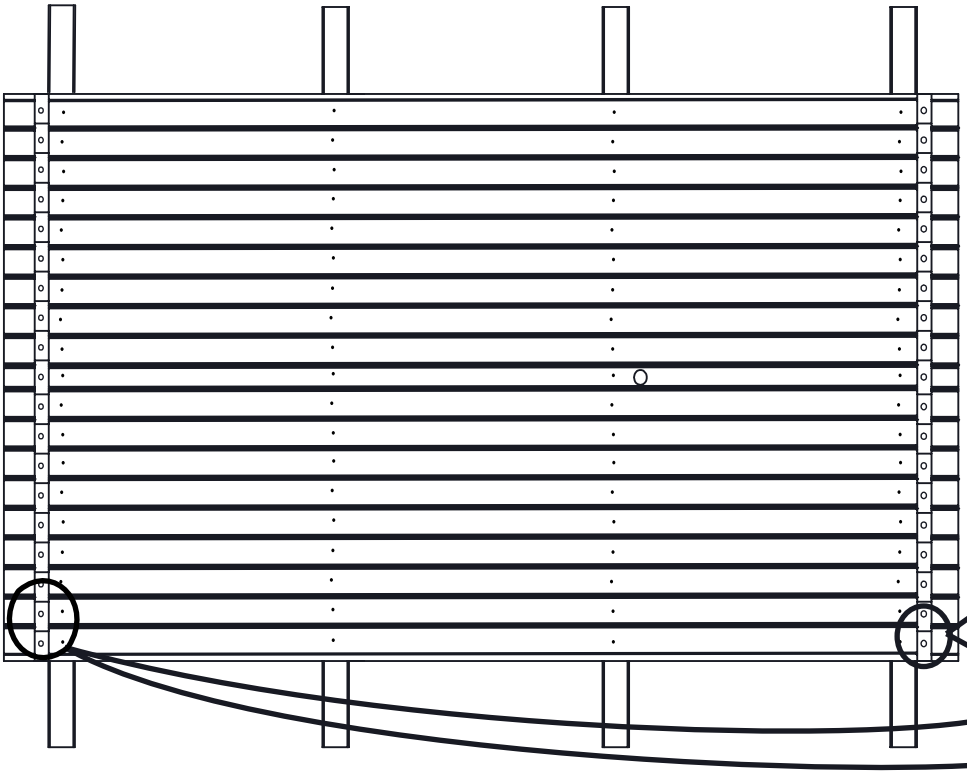




C41 - 1
C43 - 1
4570 - 4

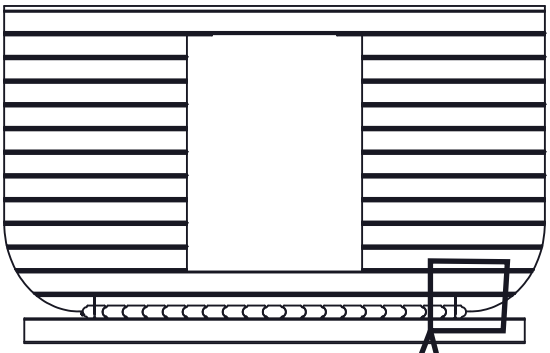


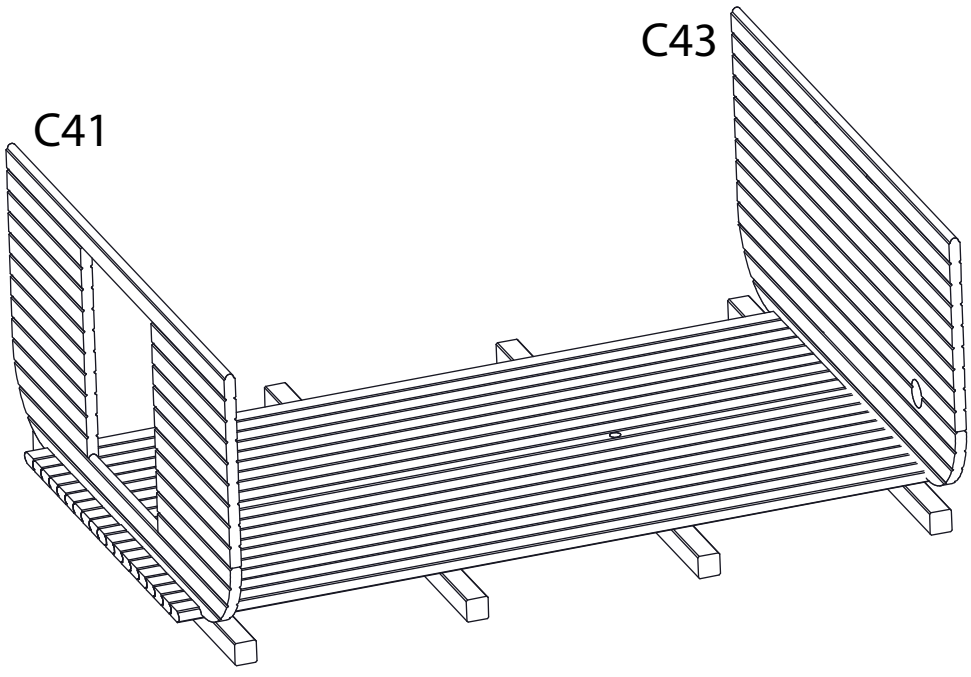

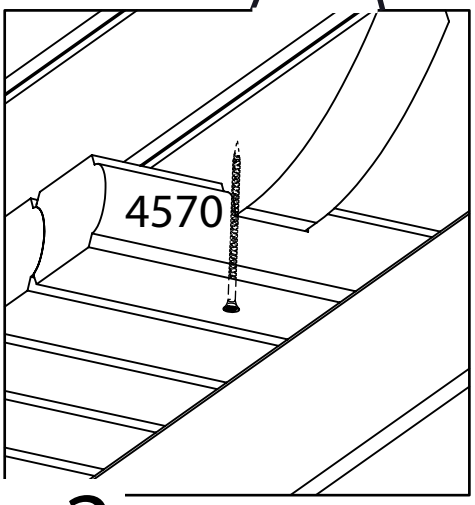


x2


C42 - 1
C44 - 1
B32 - 14
B33 - 14
4570 - 62
45120 - 112

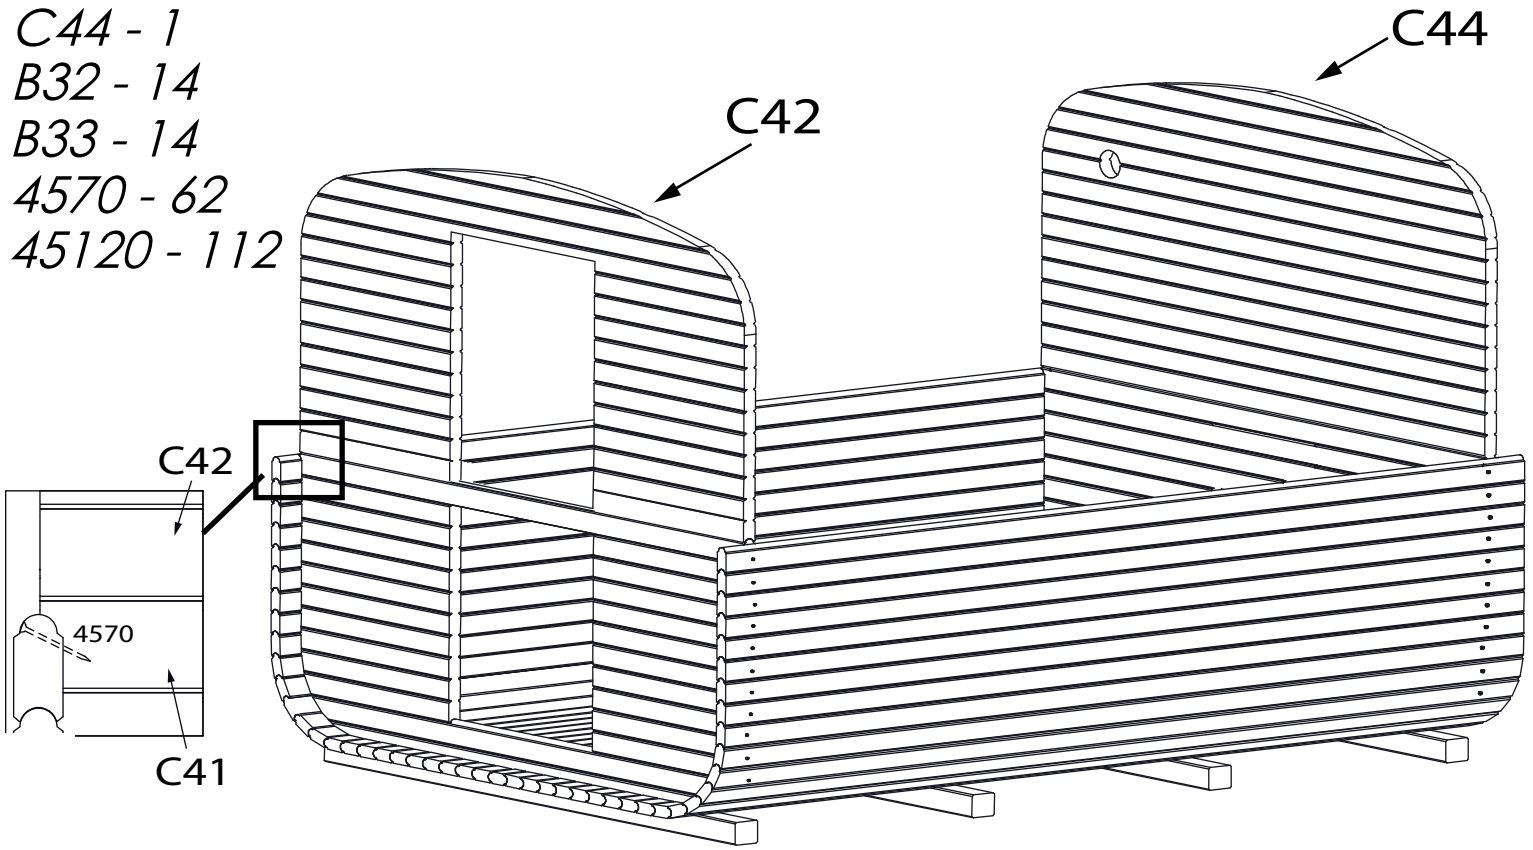


for panorama installing see **Appendix 2**

B32 - 25
B33 - 25
4570 - 150
45120 - 200

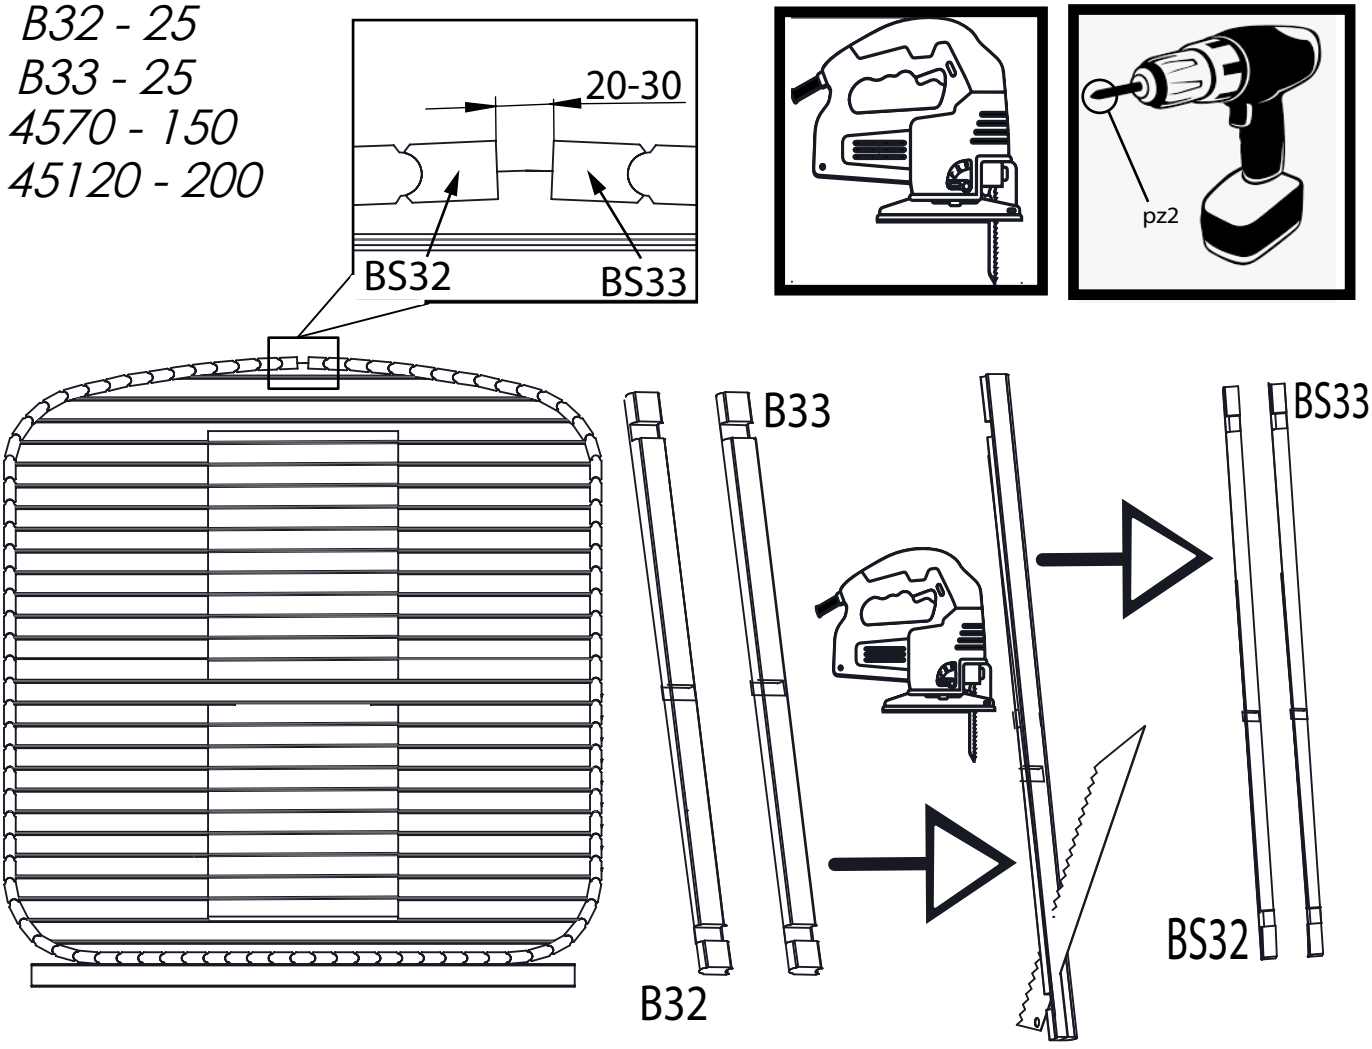


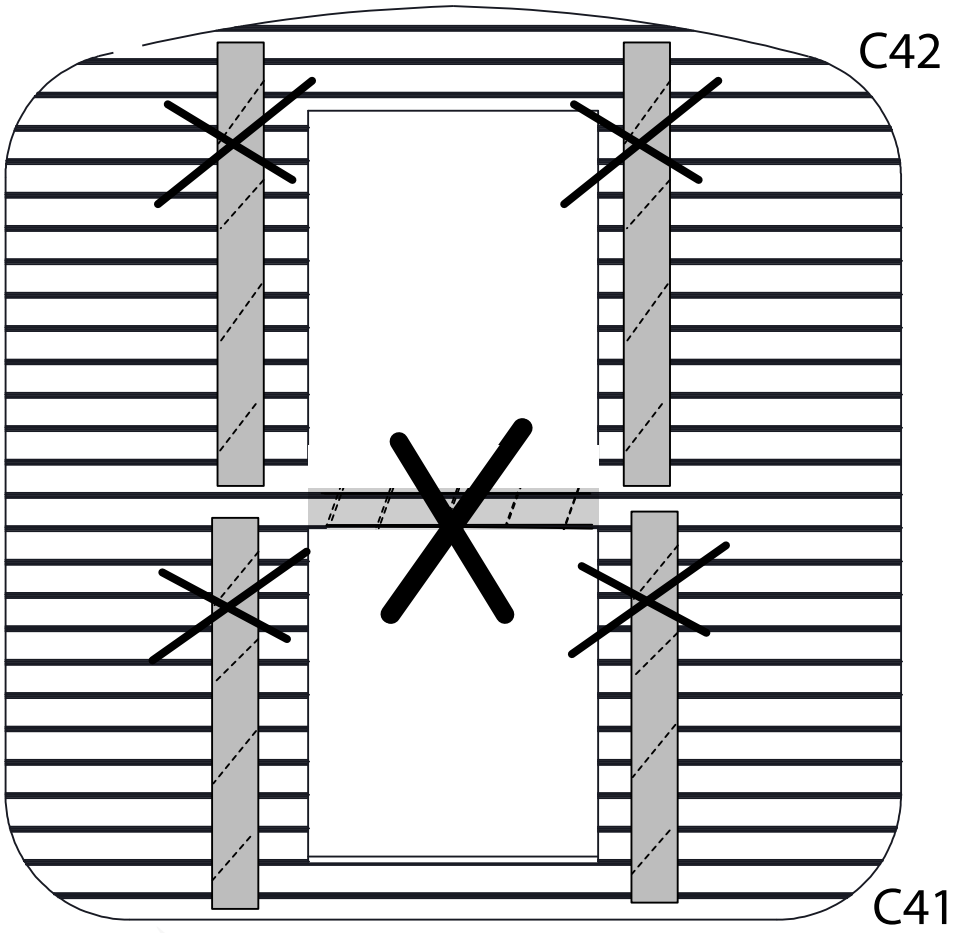


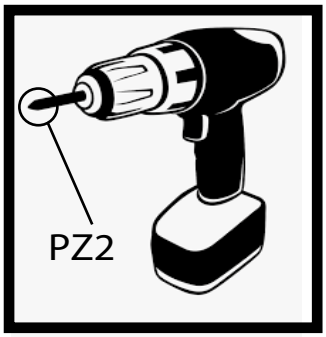




Q1 - 1
4345 - 4

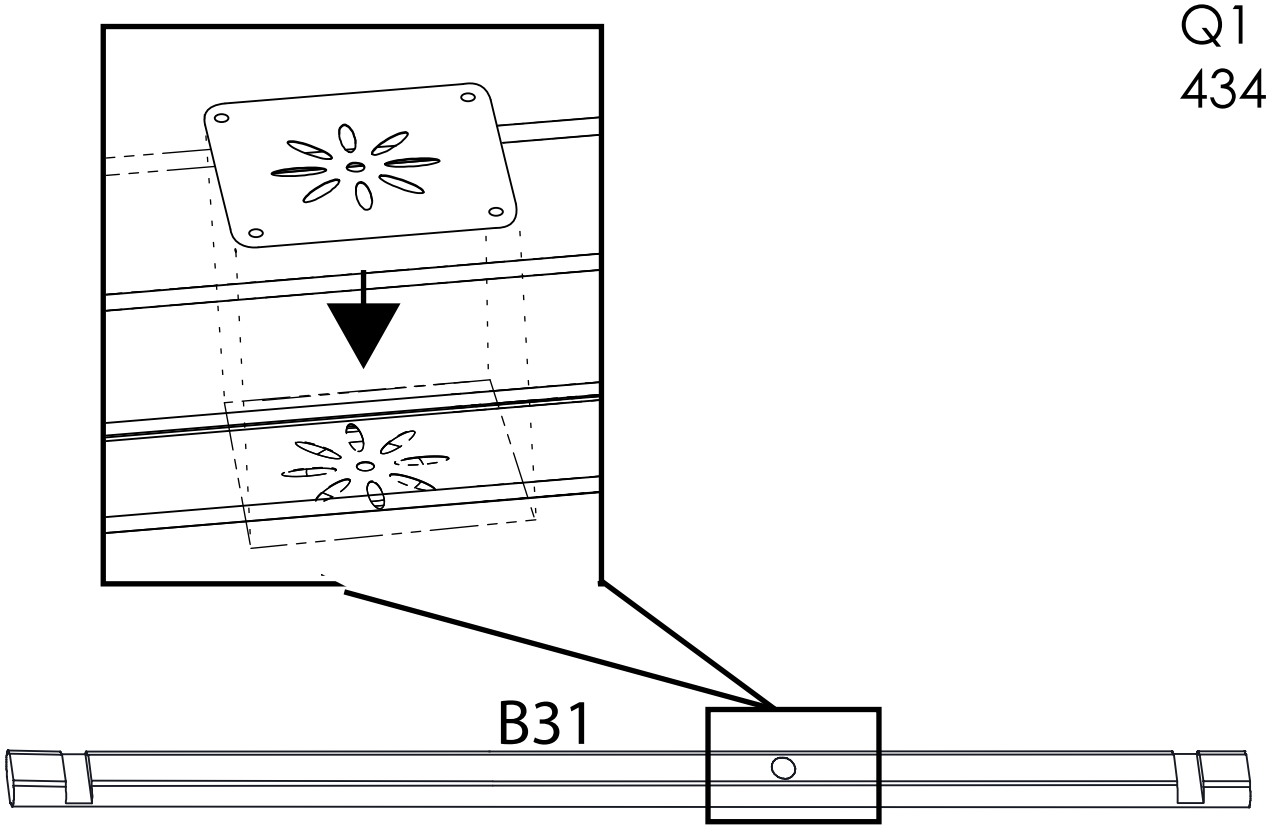


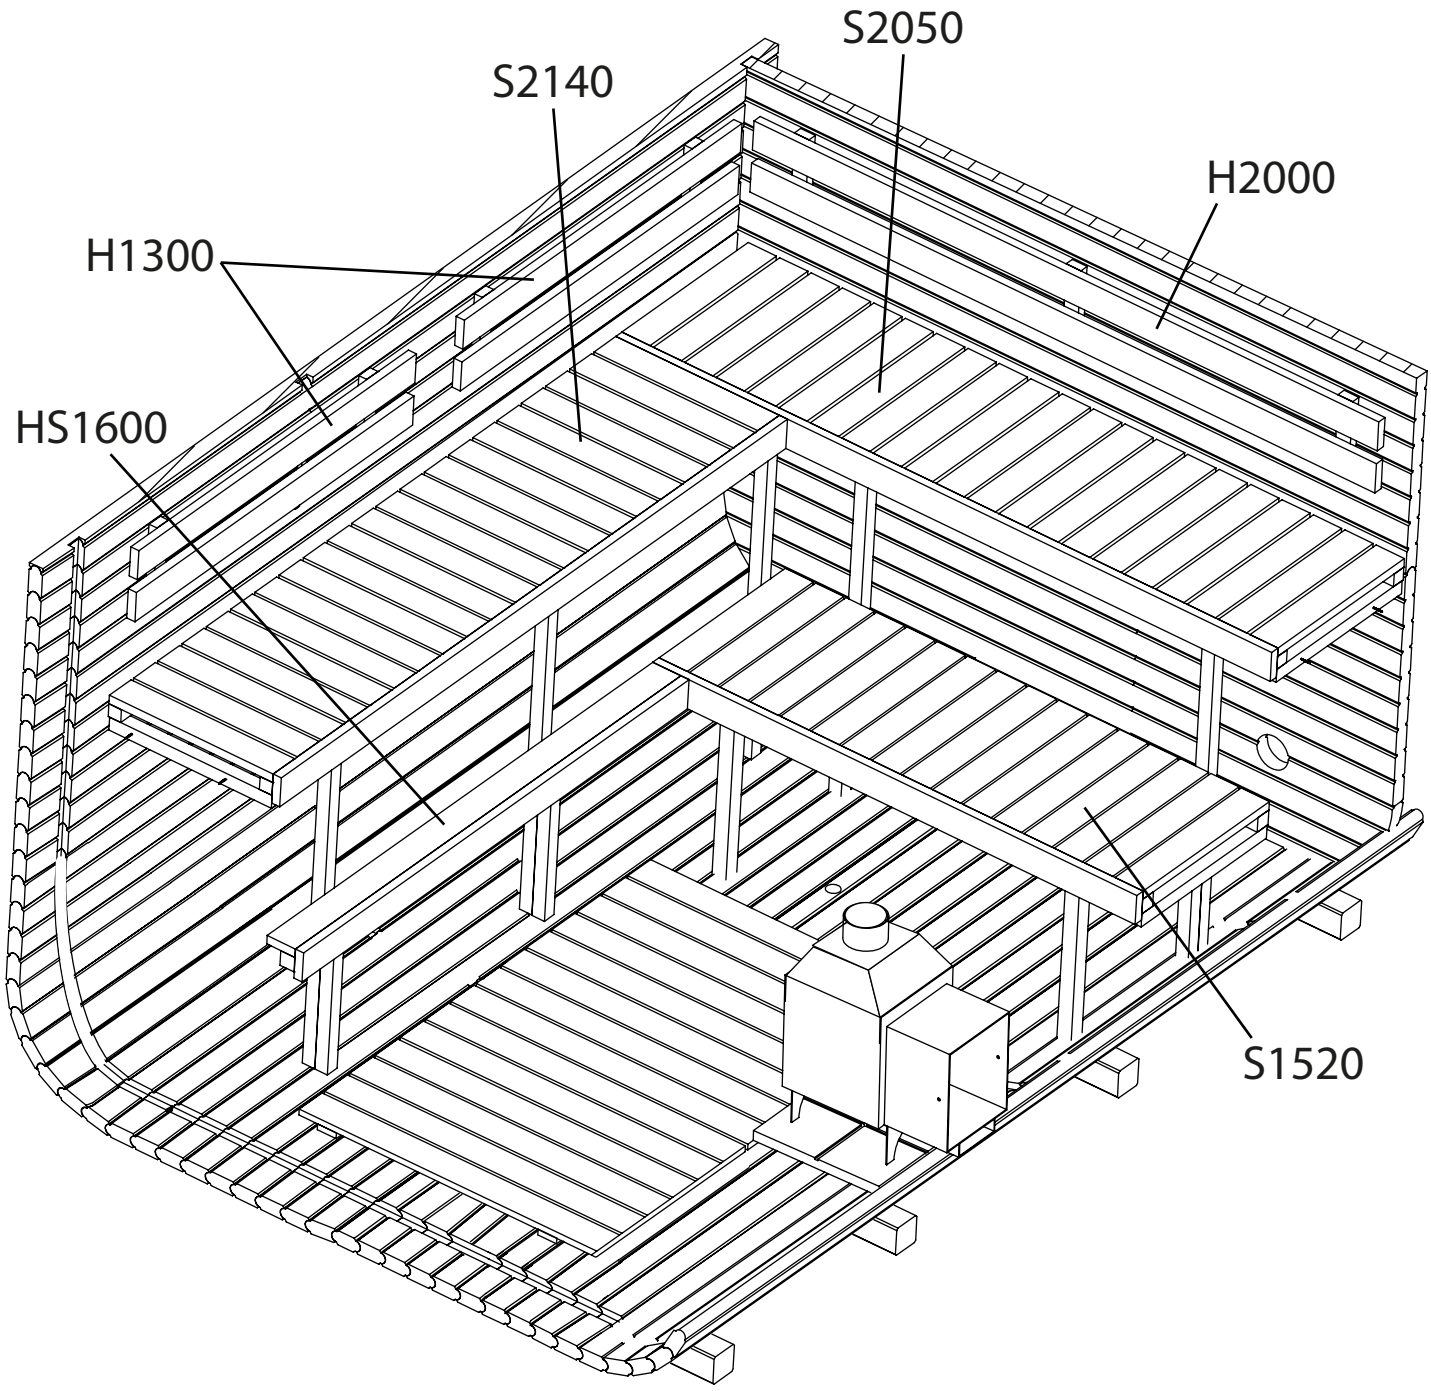

S2050
S2140
H2000
H1300
HS1600
S1520

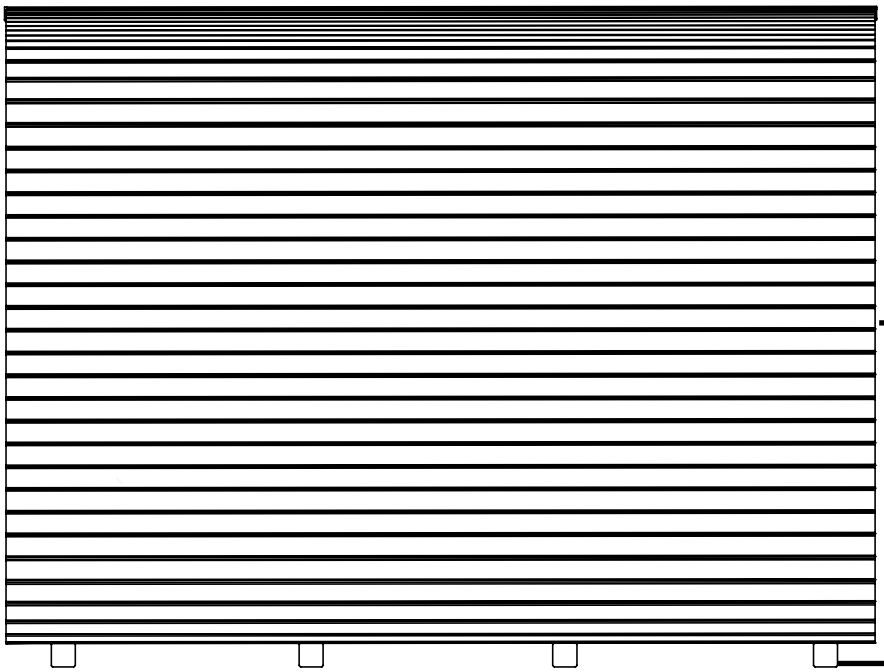





SET3

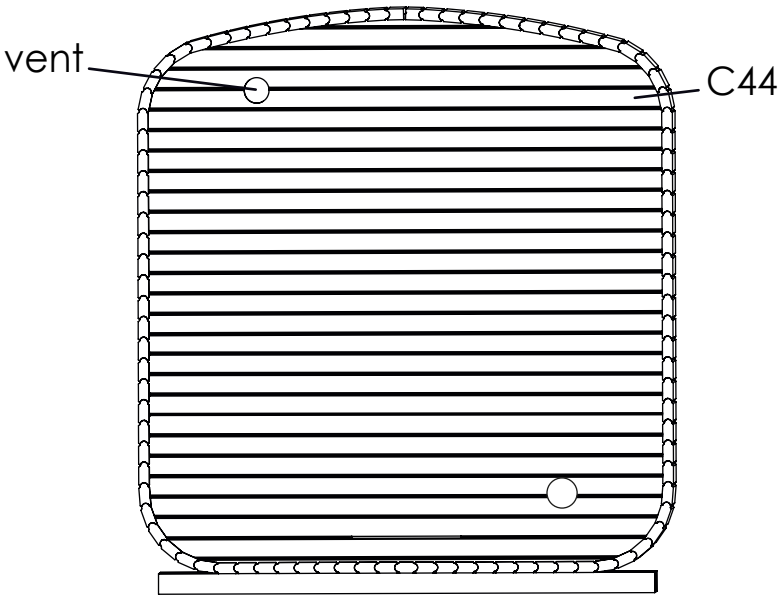


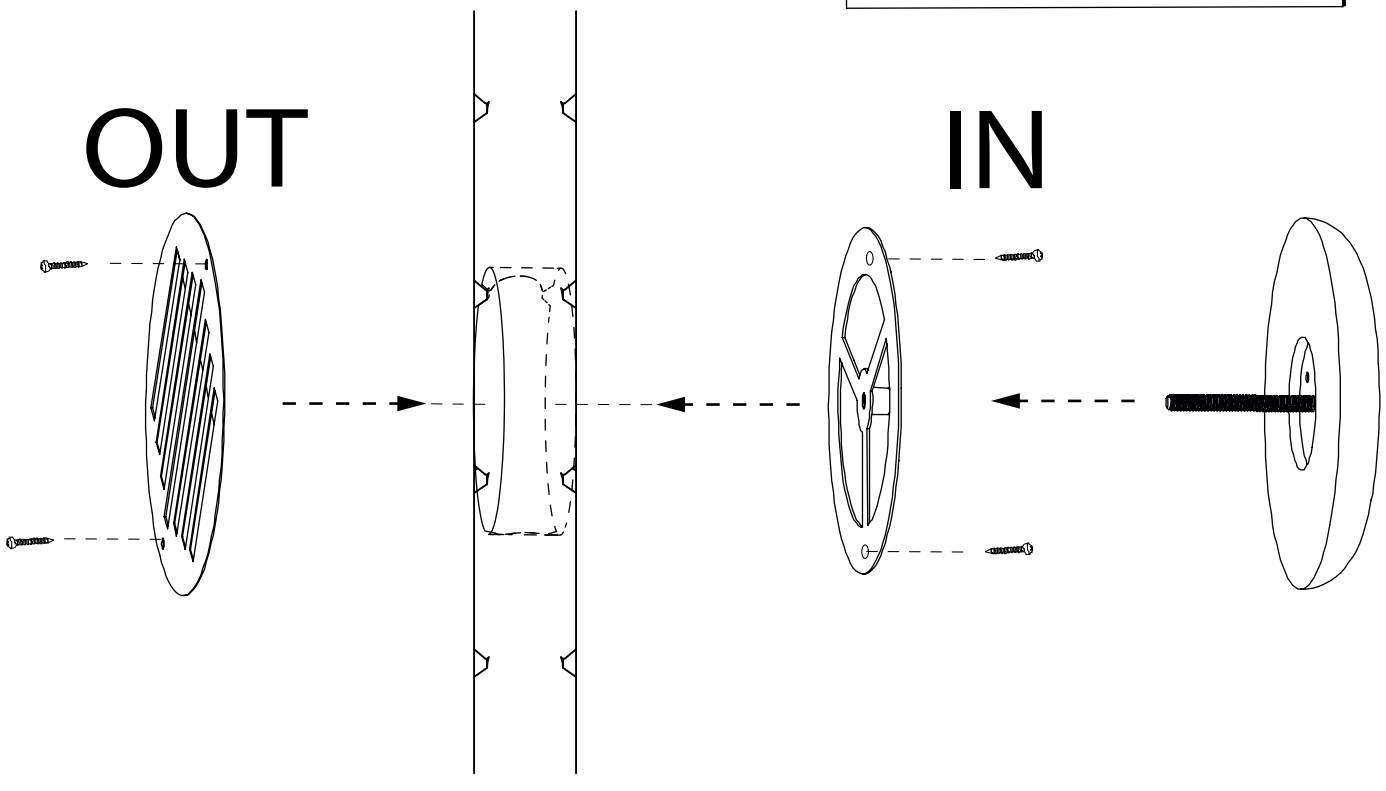


H2000 - 1
S2050 - 1
R520 - 4
R1000 - 2
4570 - 18

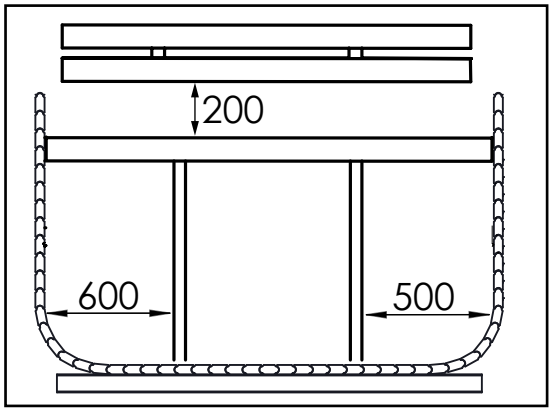

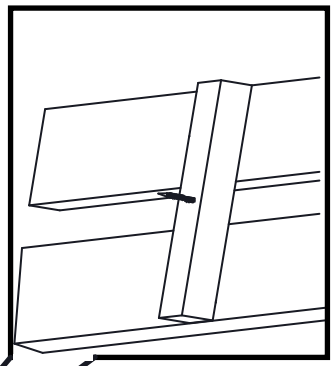


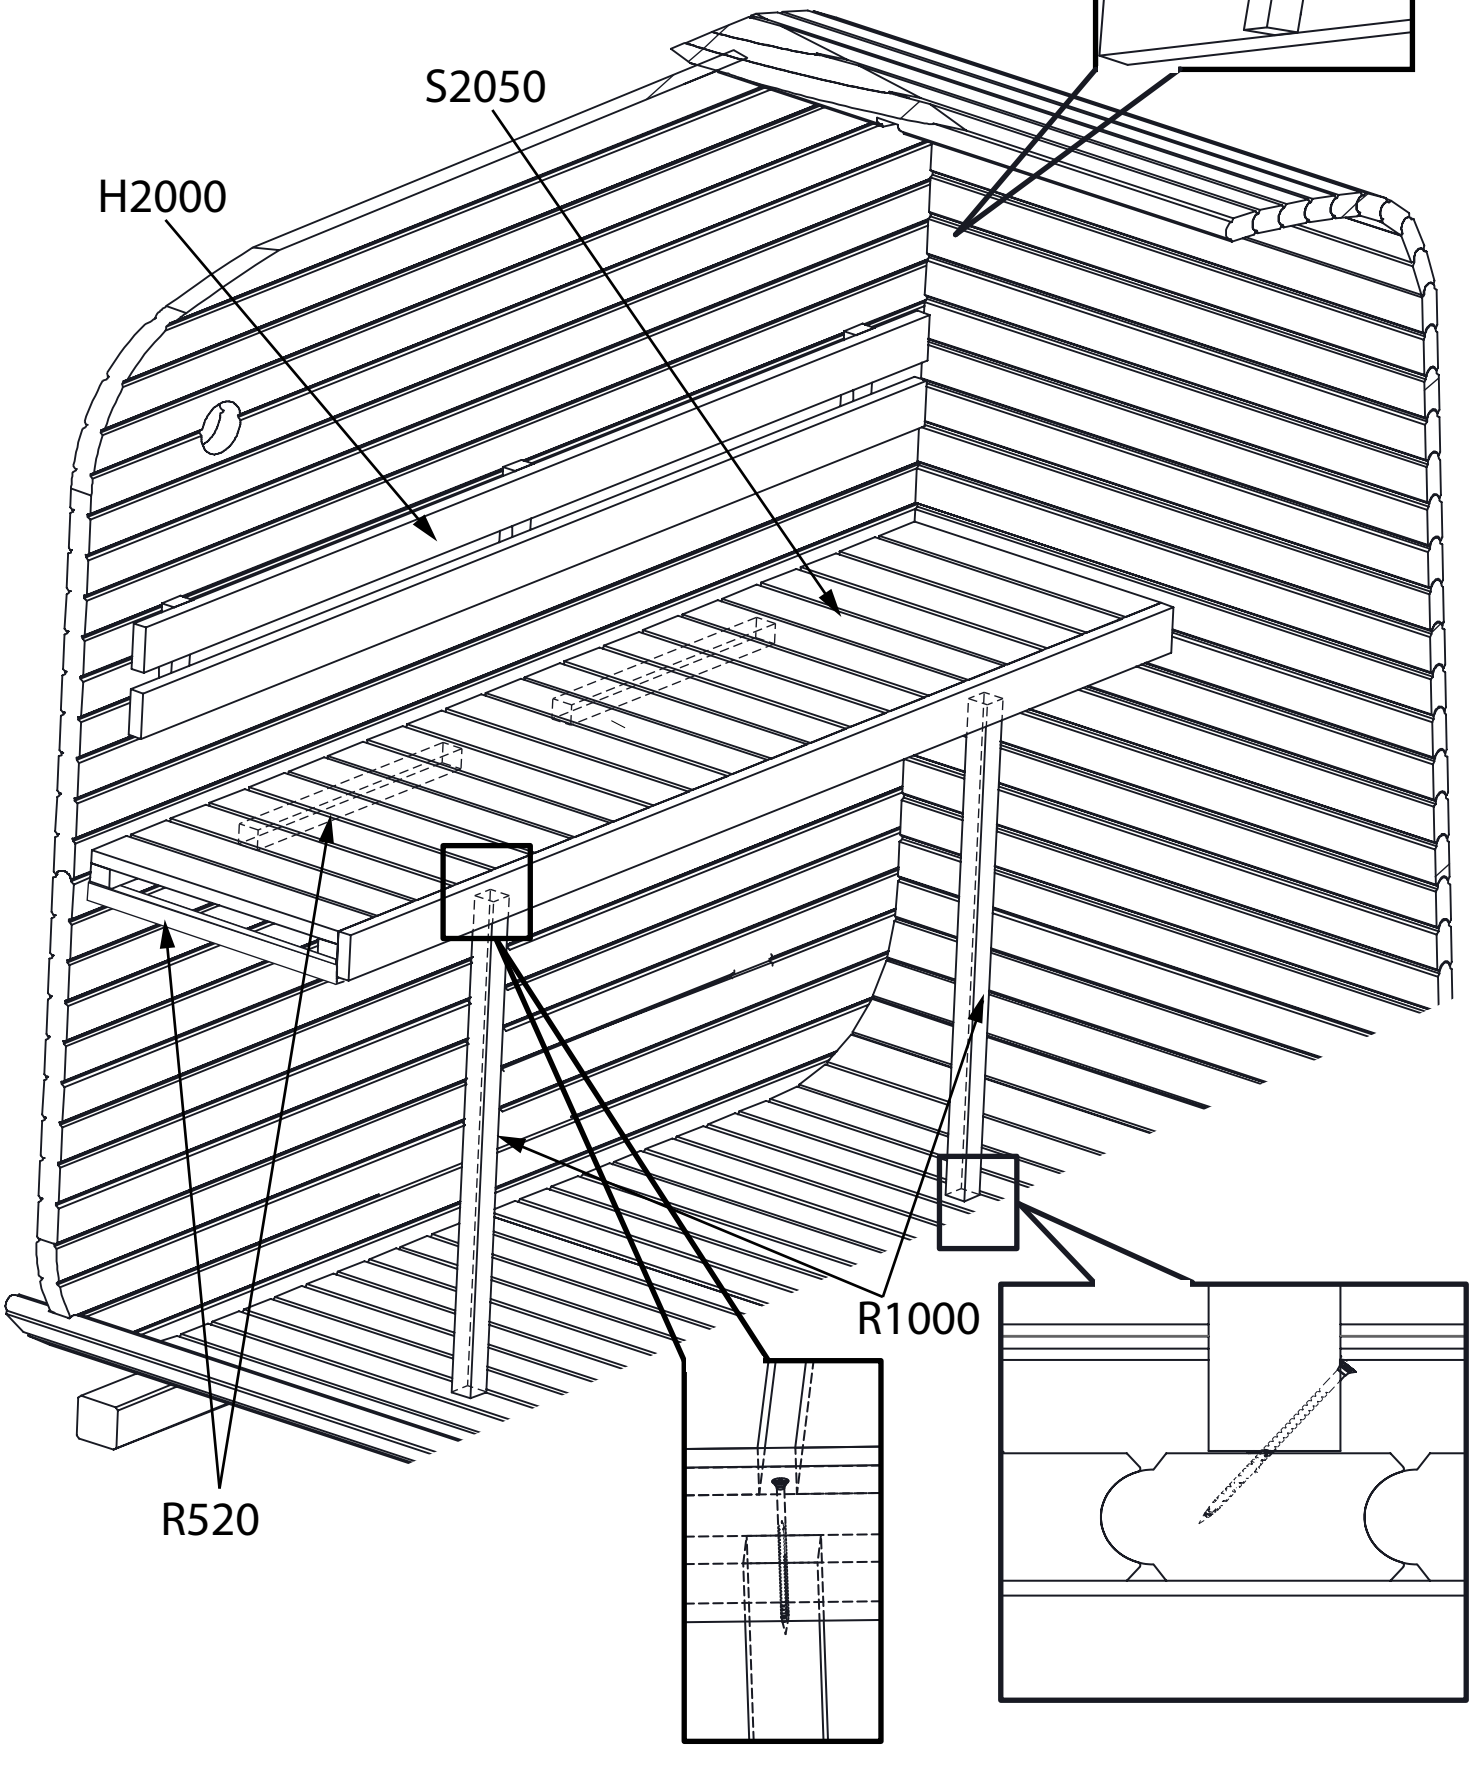



H1300 - 2
S1520 - 1
HS1600 - 1
R520 - 11
R1000 - 3
4570 - 30

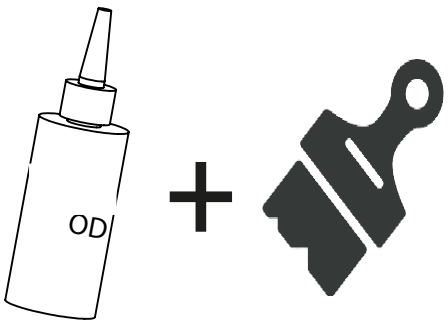


for benches and
back supports **only!**

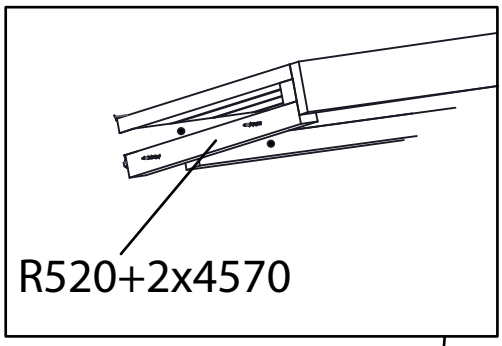


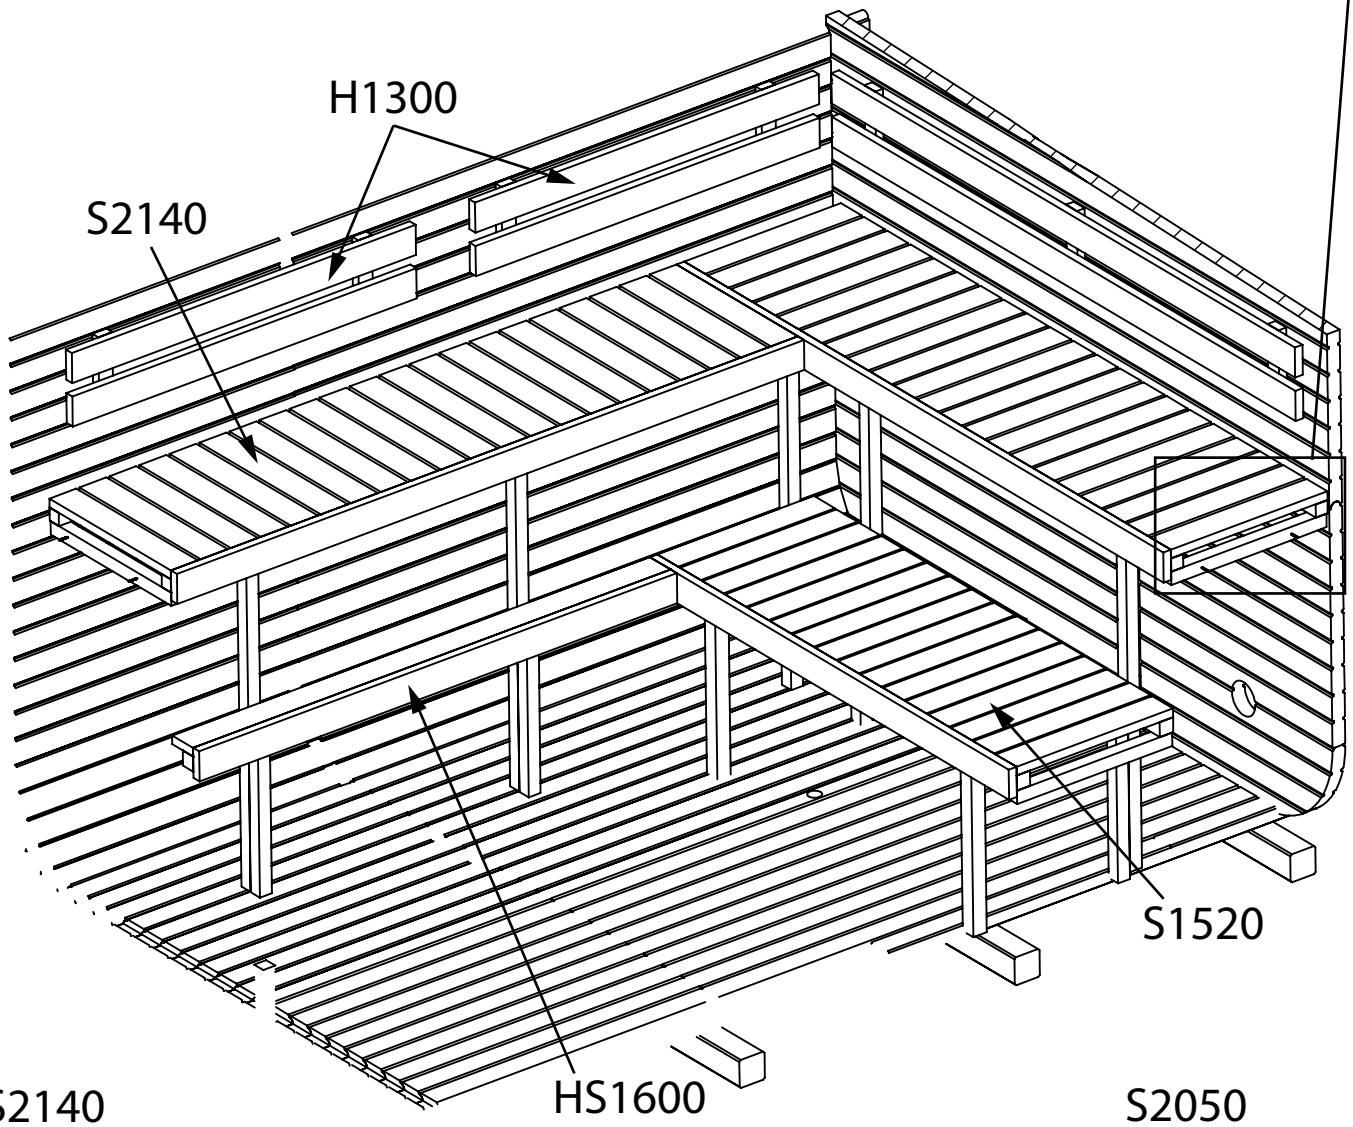


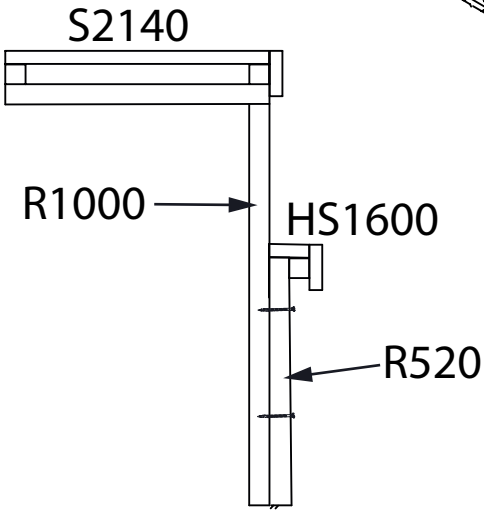


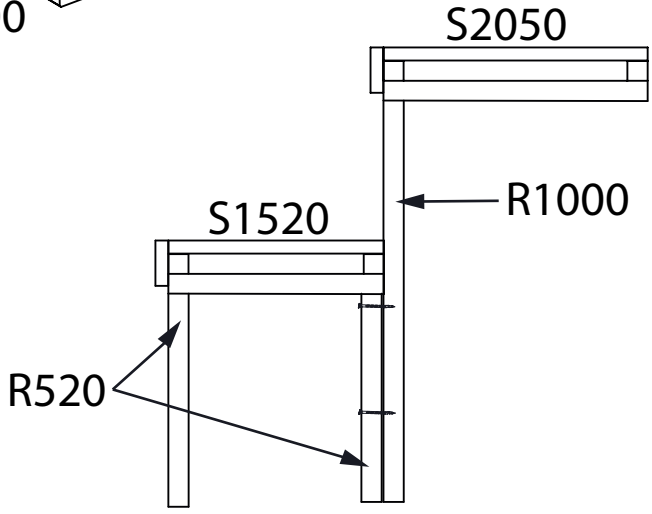



W1350 -2
W80 - 4
4345 - 22

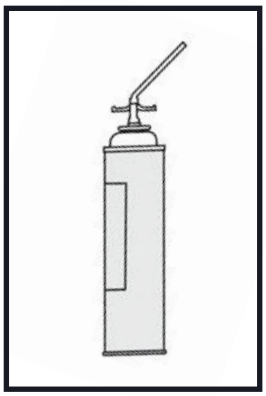

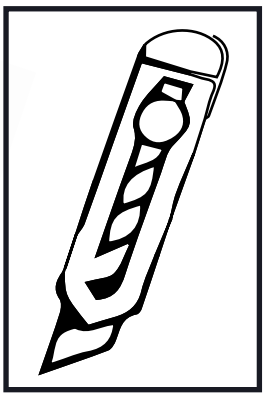

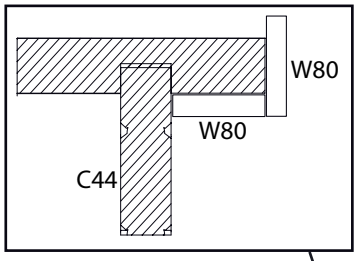


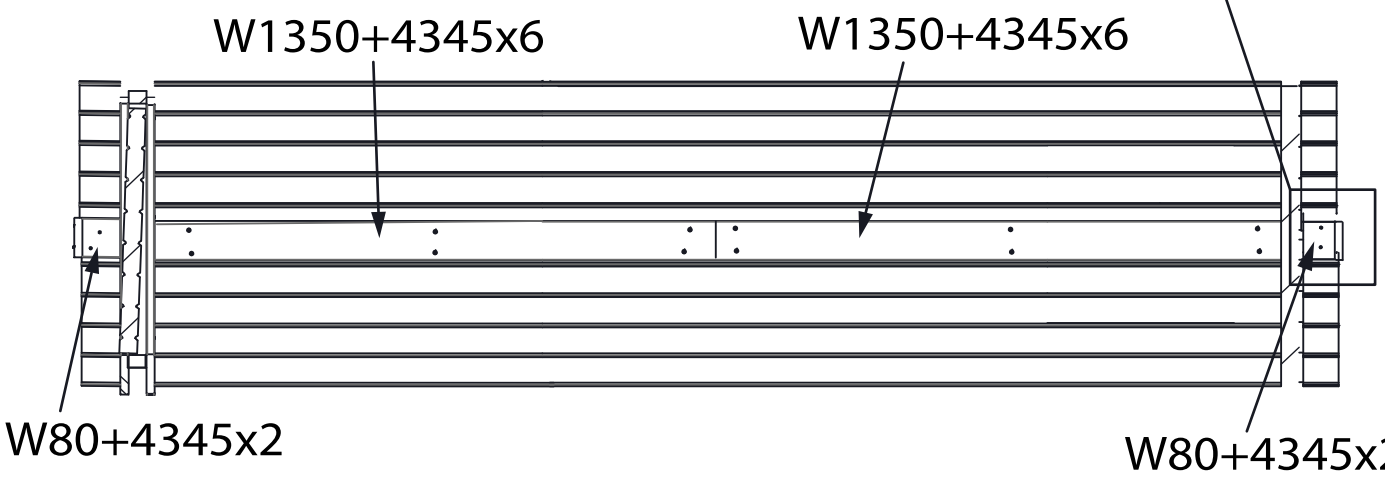


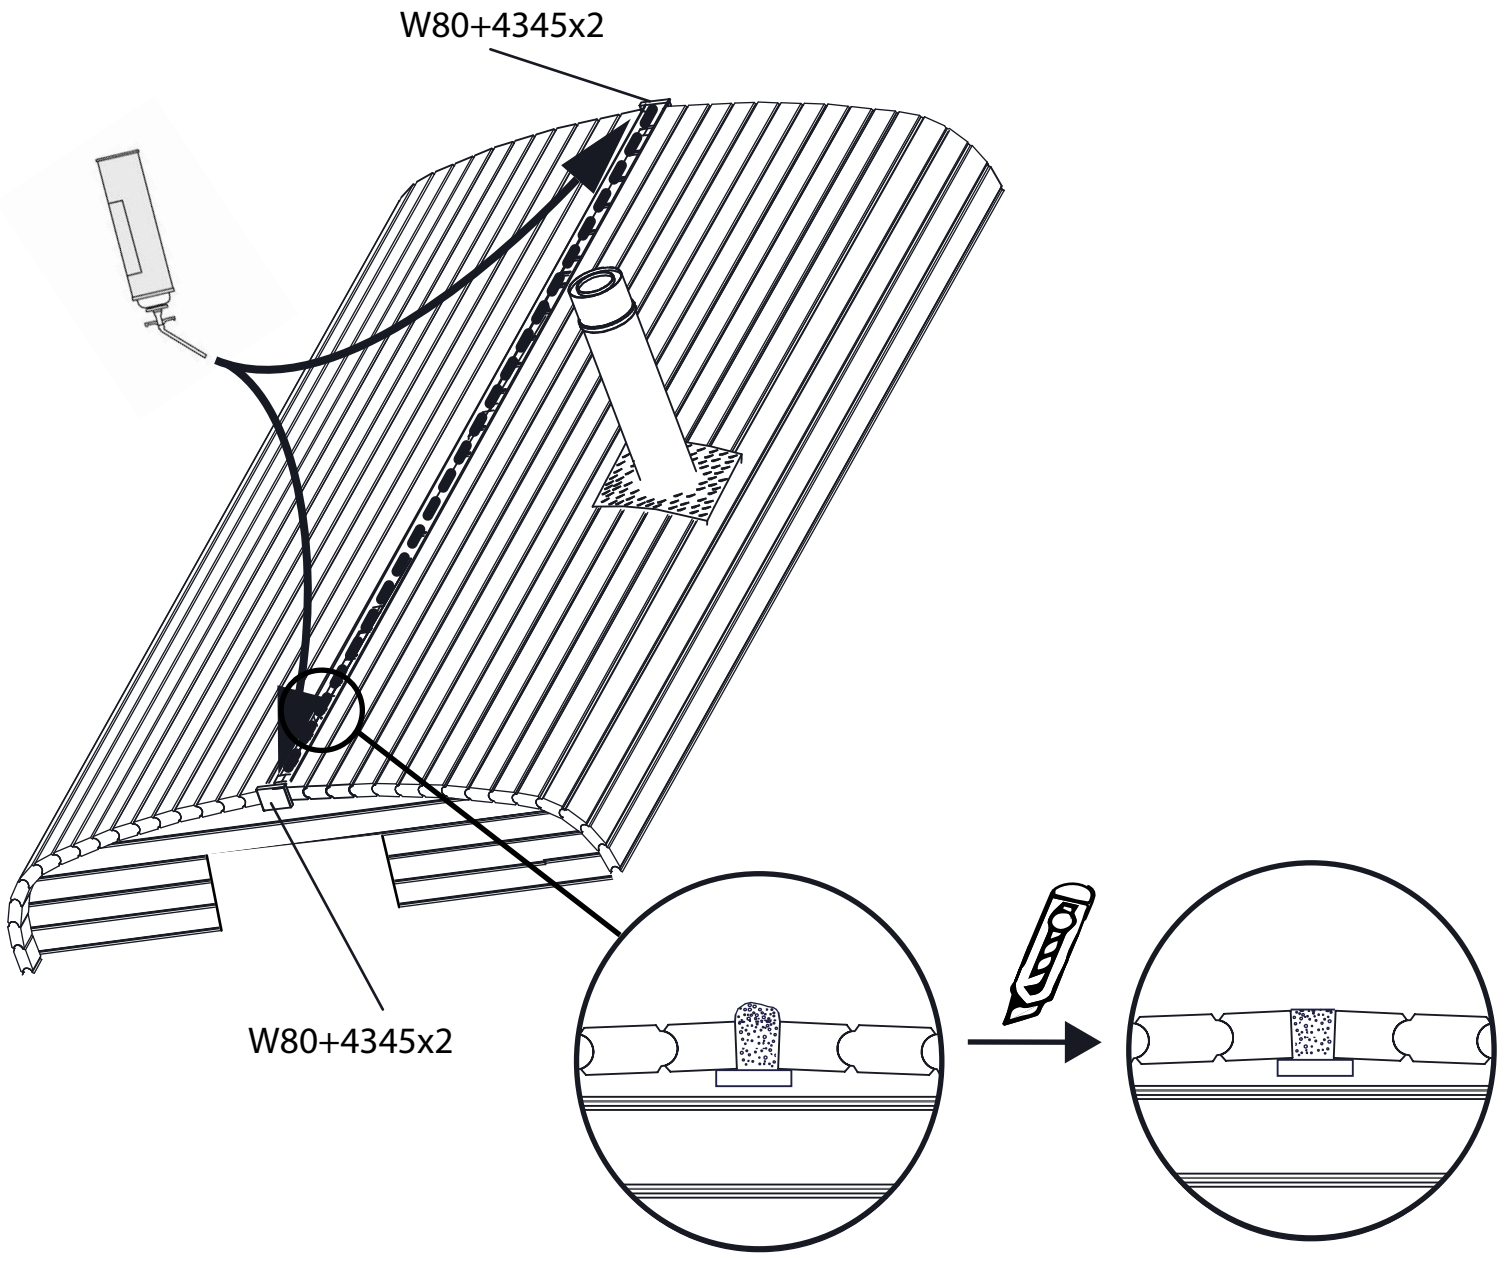


L60 - 4
K60 - 8
2012 - 8
732012 - 4



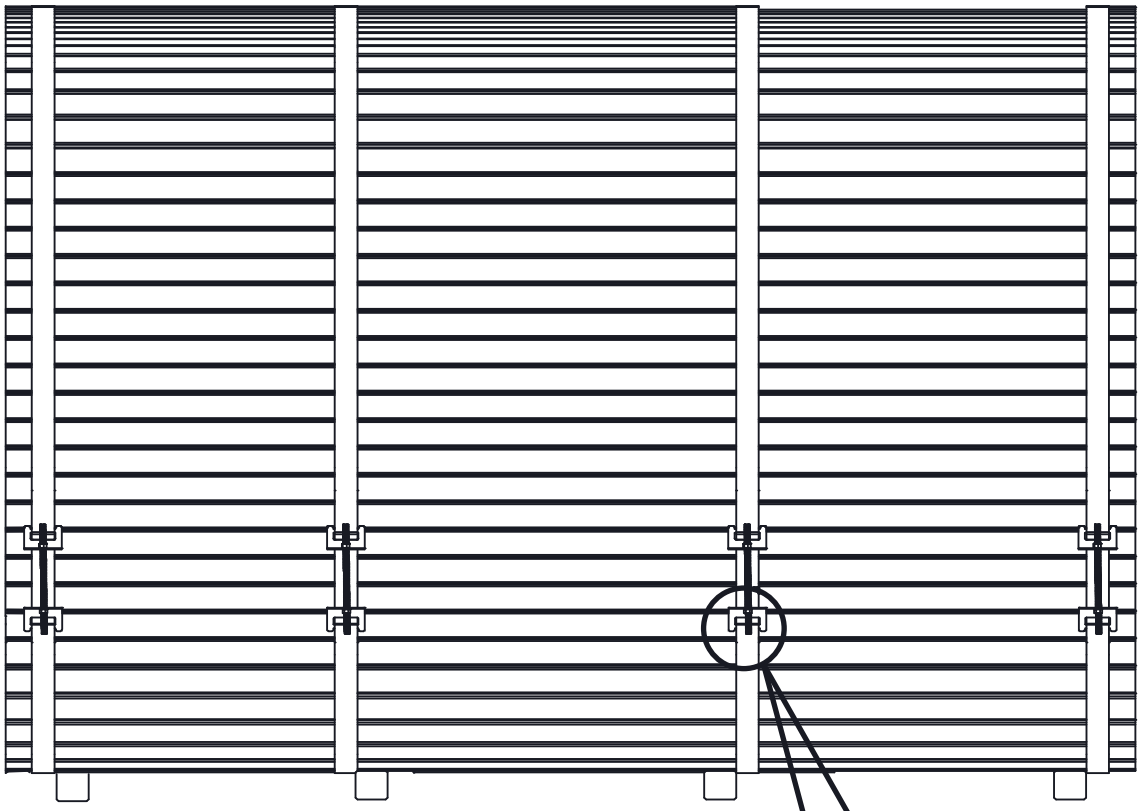


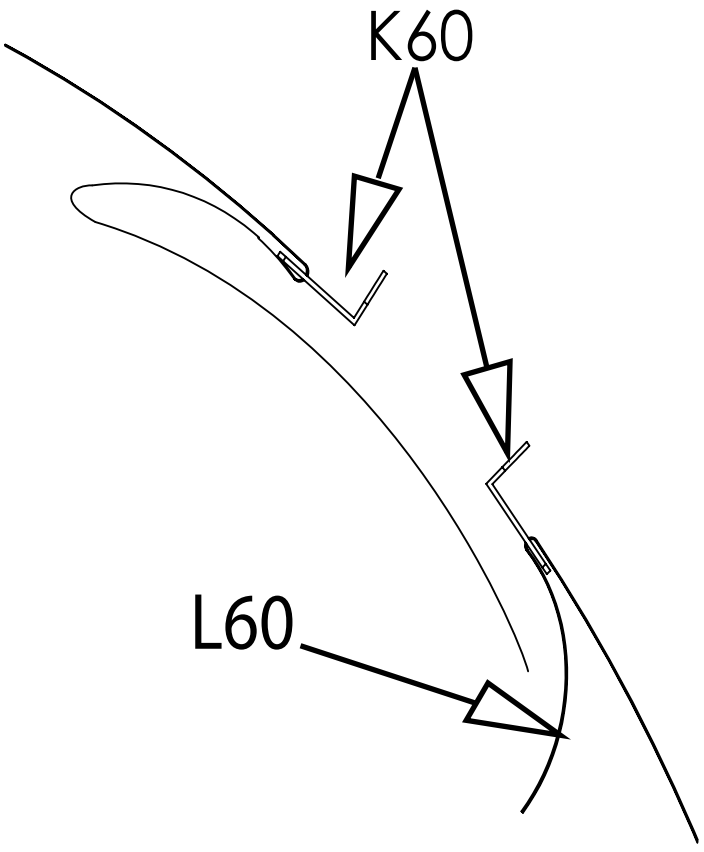


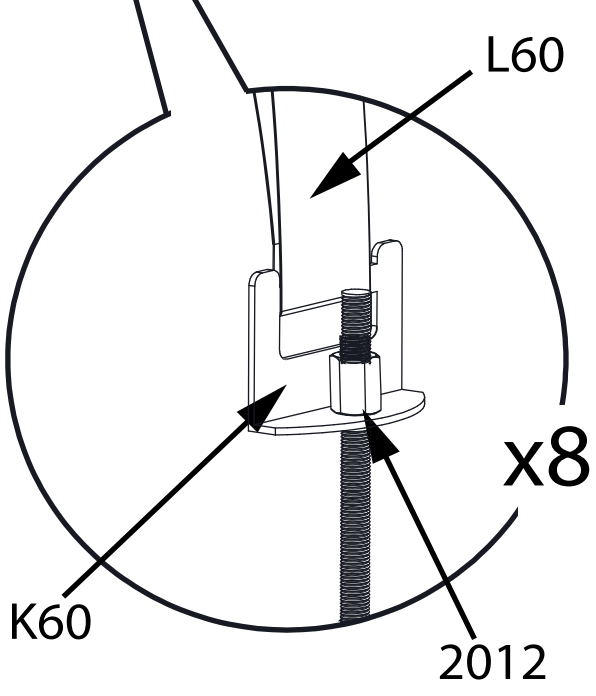


DG1800 - 1
4570 - 8
J - 8


DOOR INSTALLATION
outside view

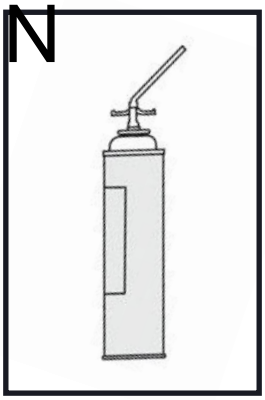


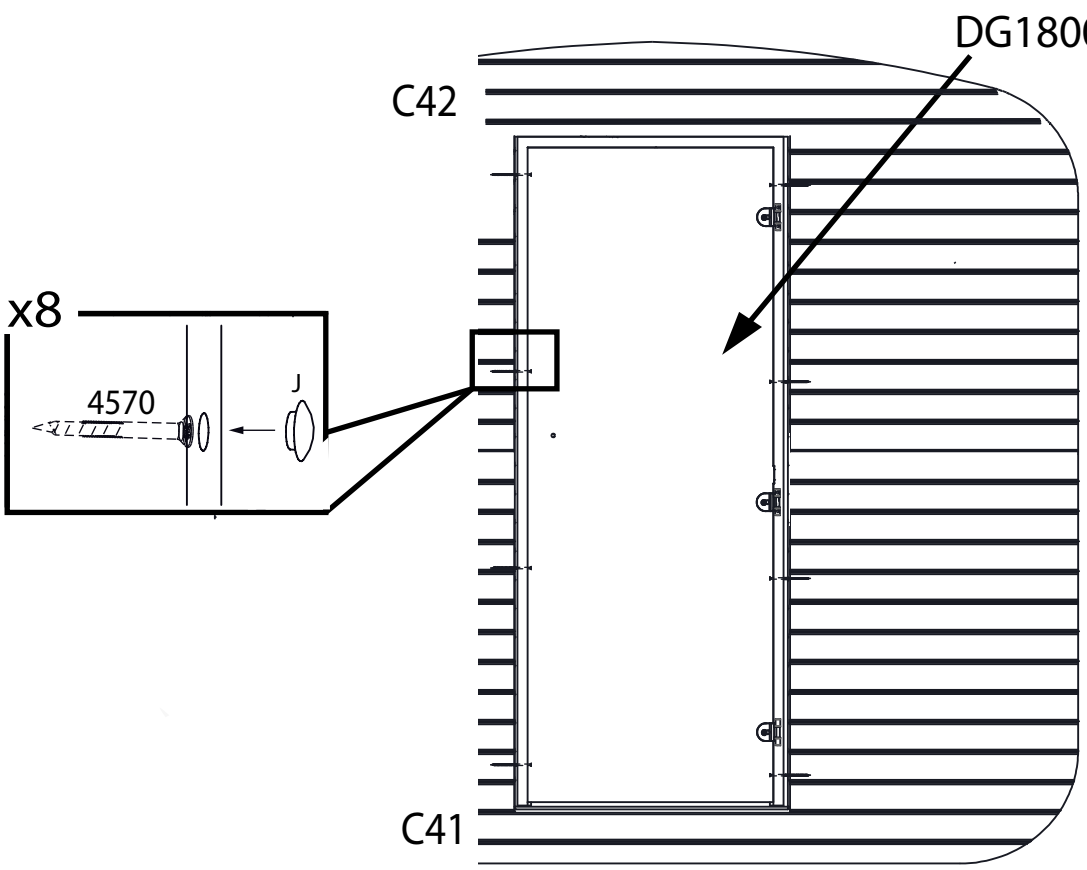


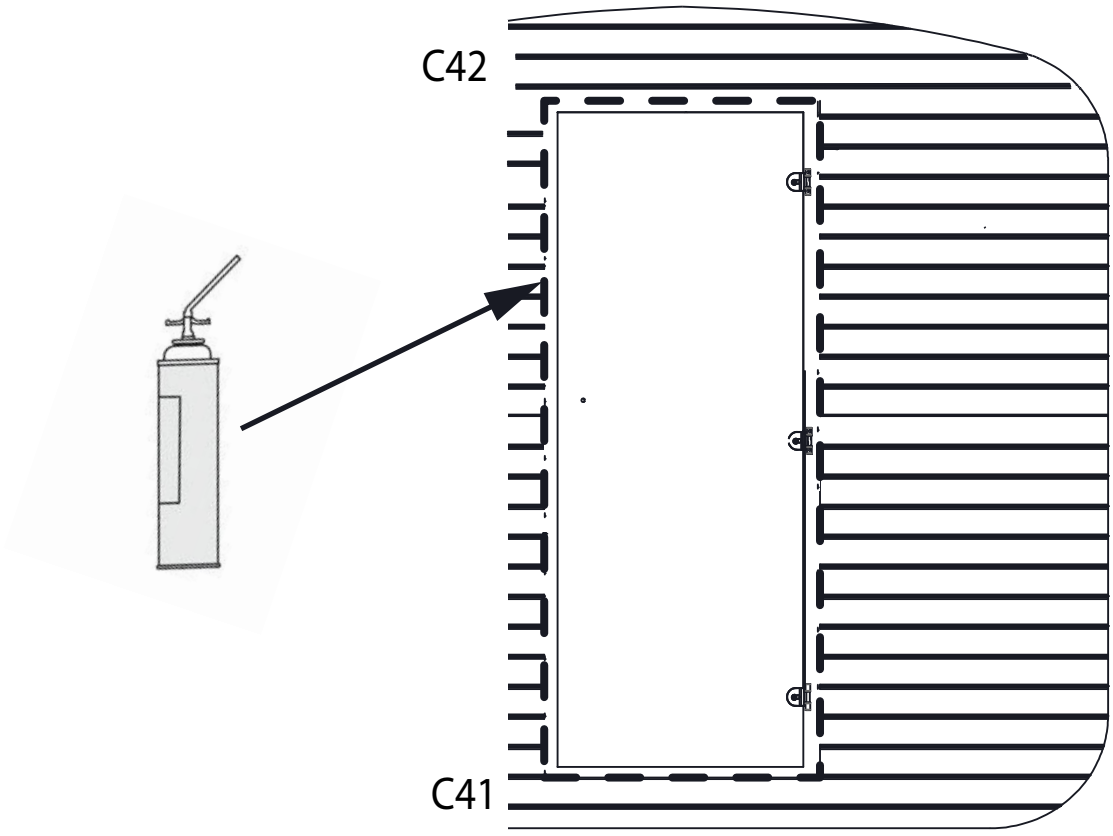

W1800 - 2
W840 - 1
4345 - 16

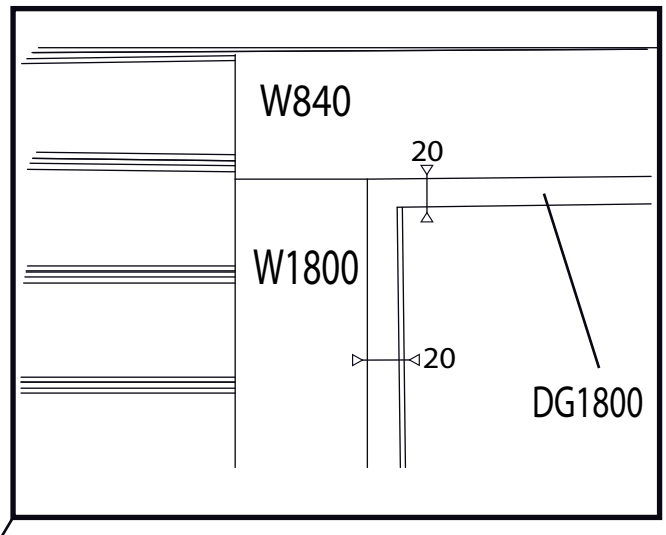


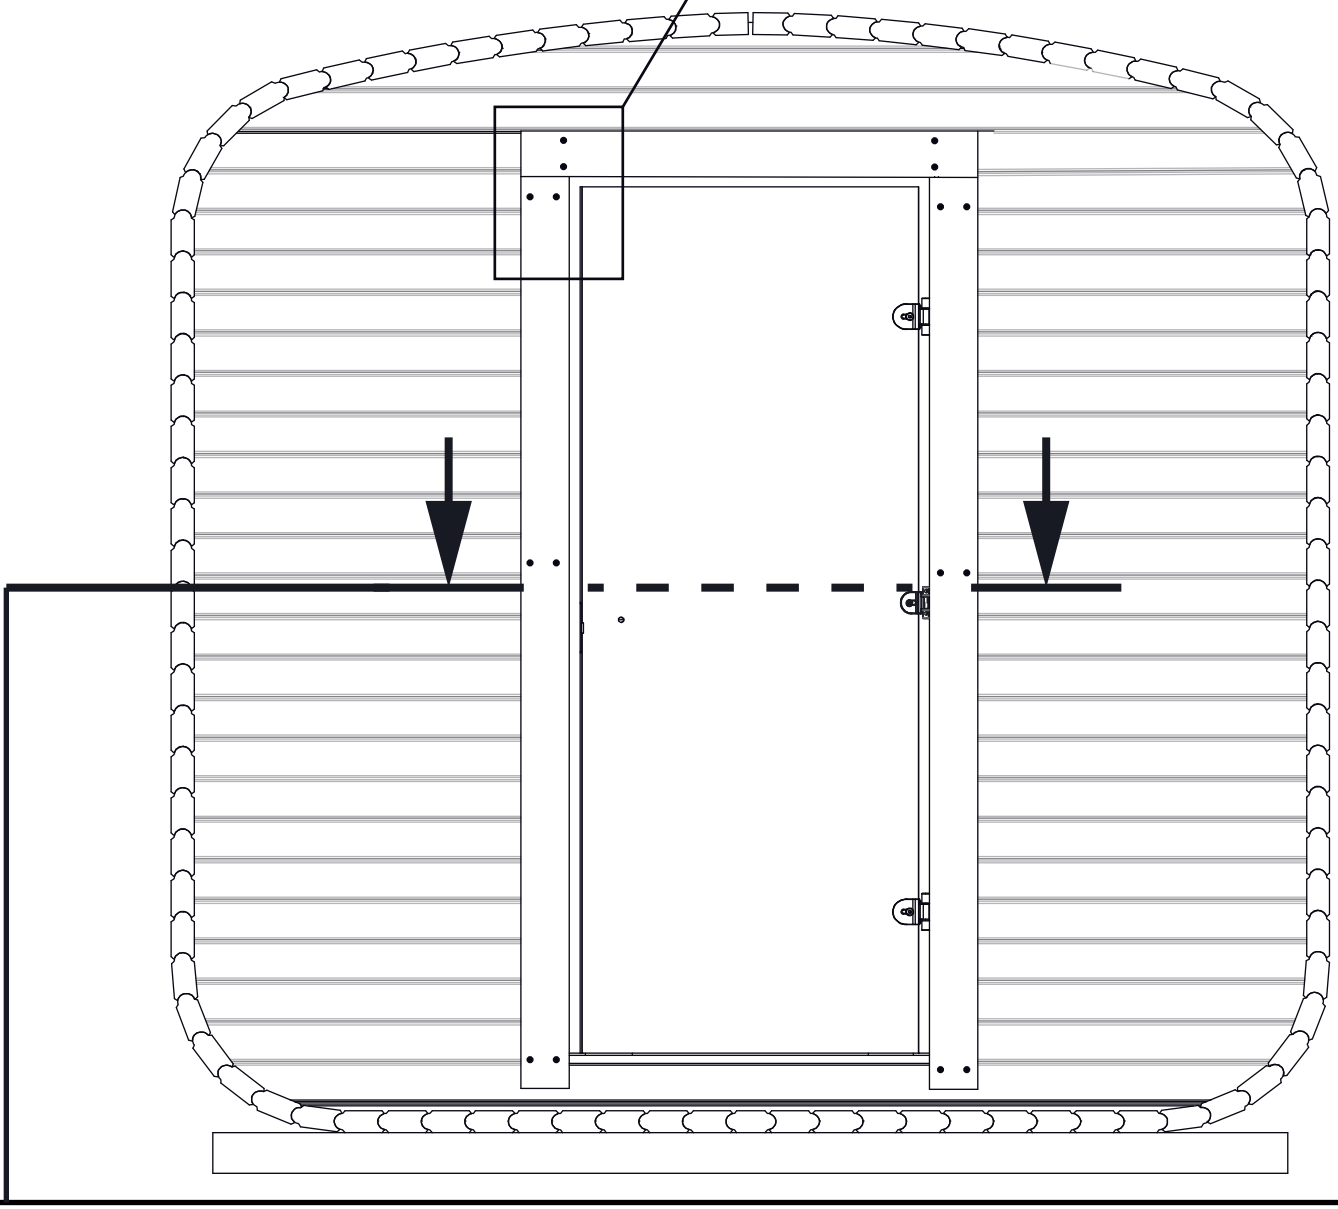

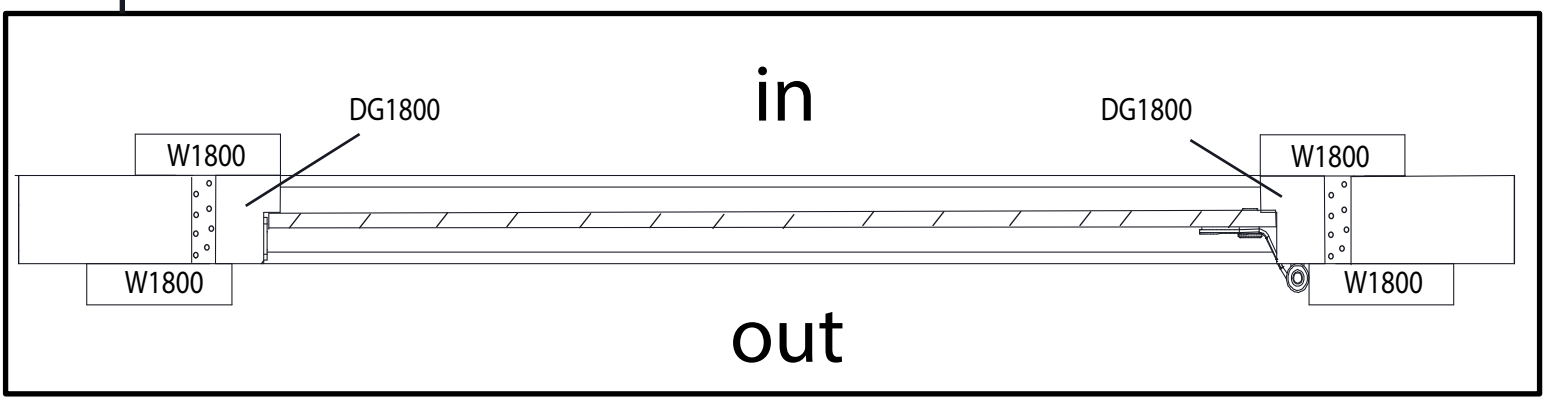



W840 - 1
W1800 - 2
4345 - 16


DOOR INSTALLATION
inside view

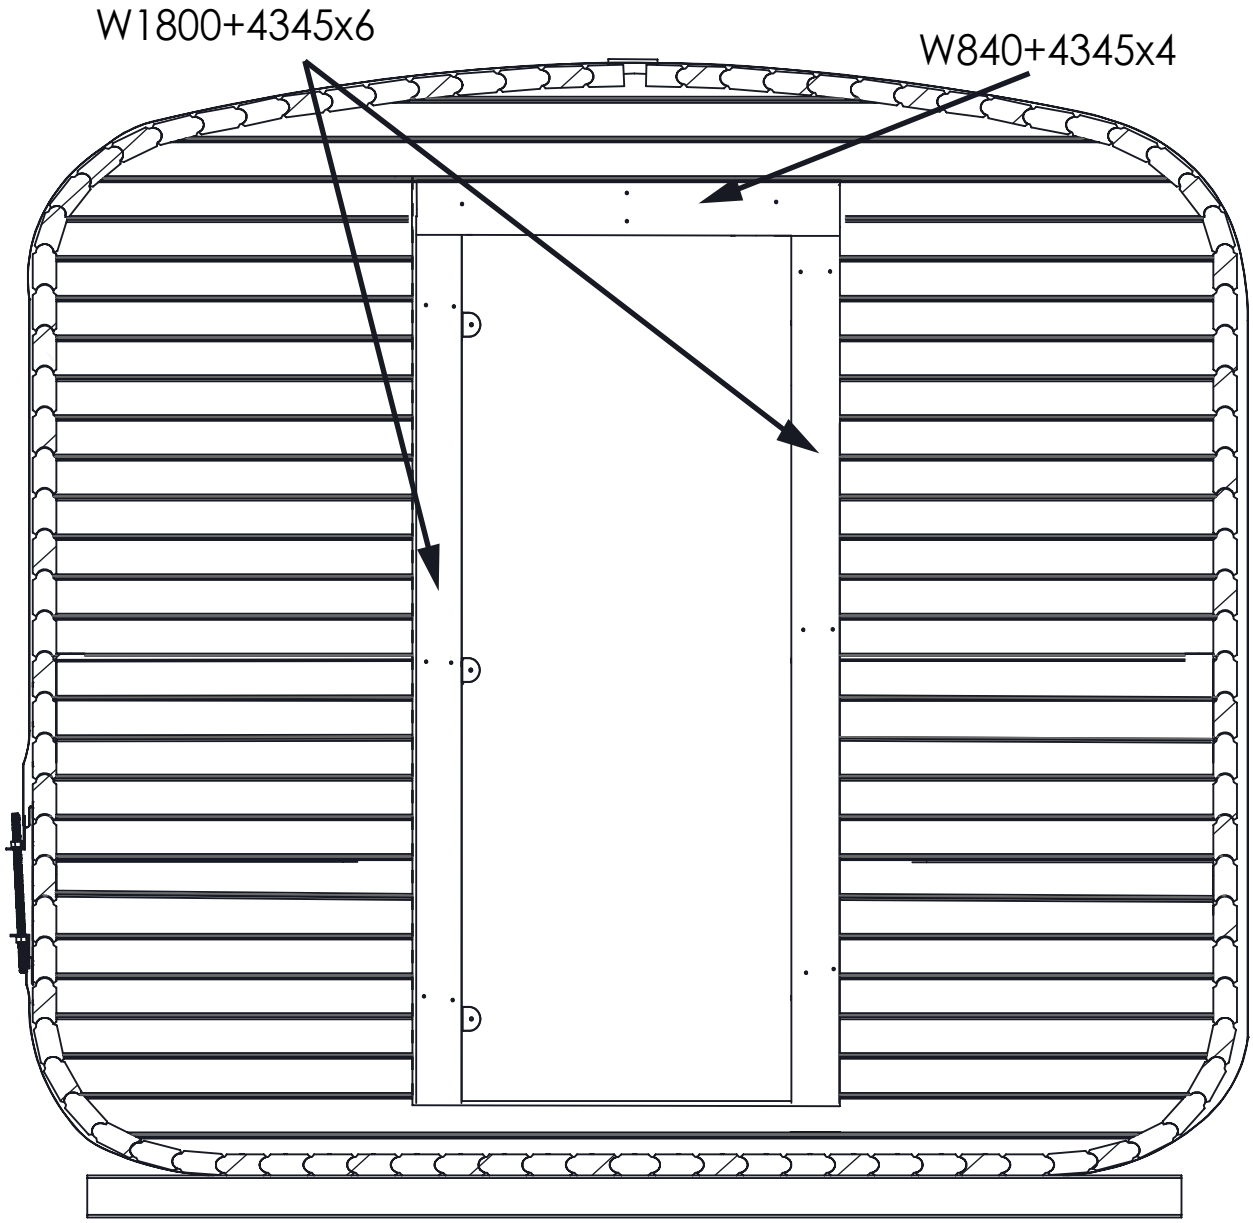


SET 2

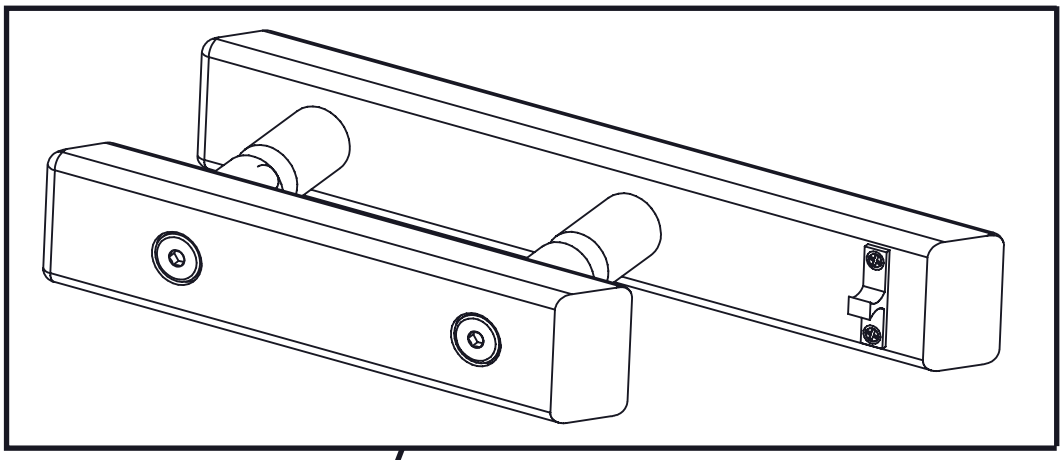


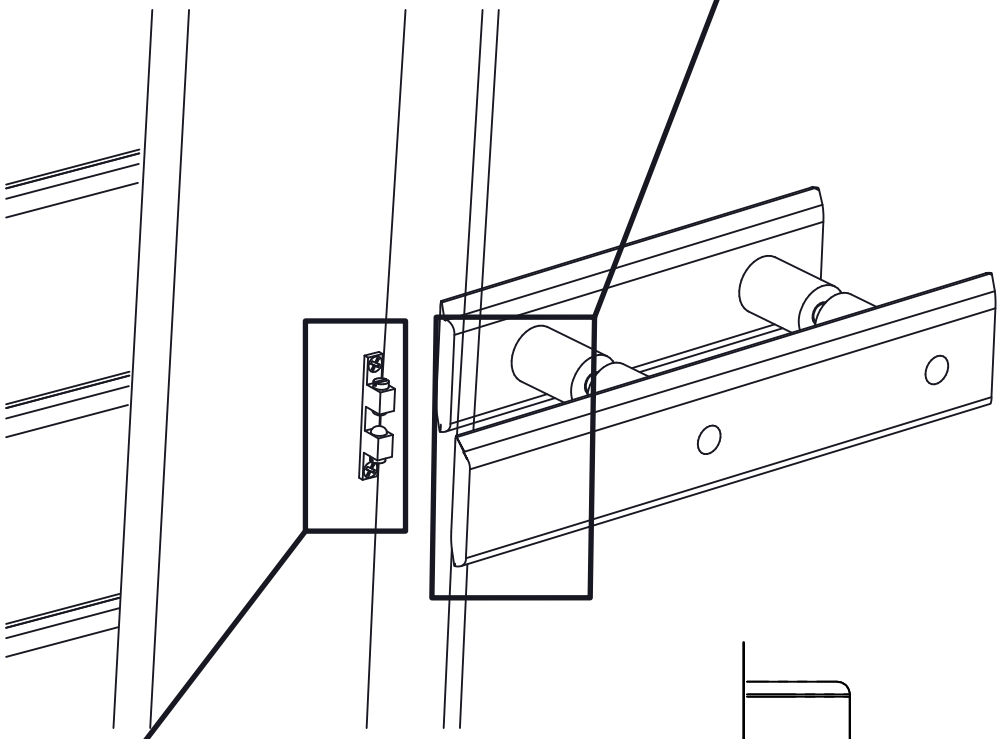


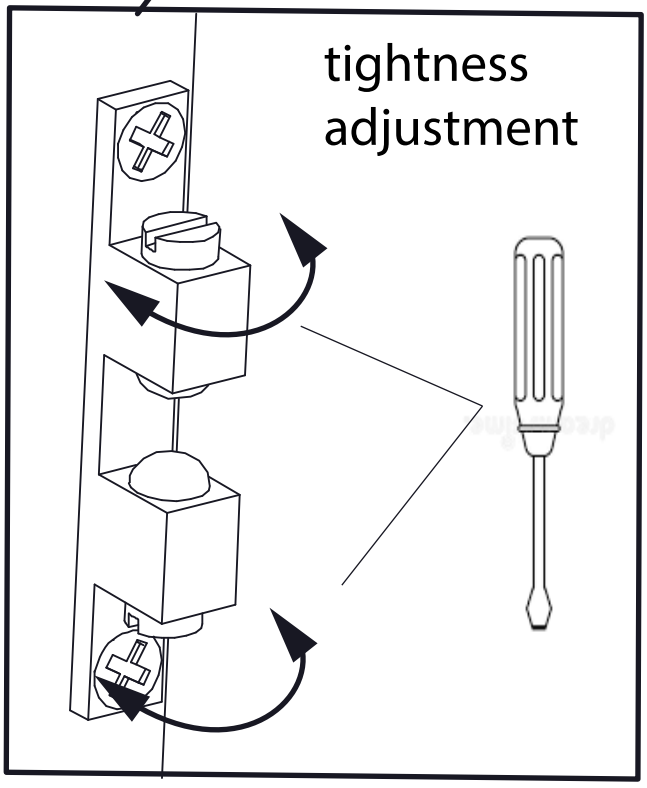


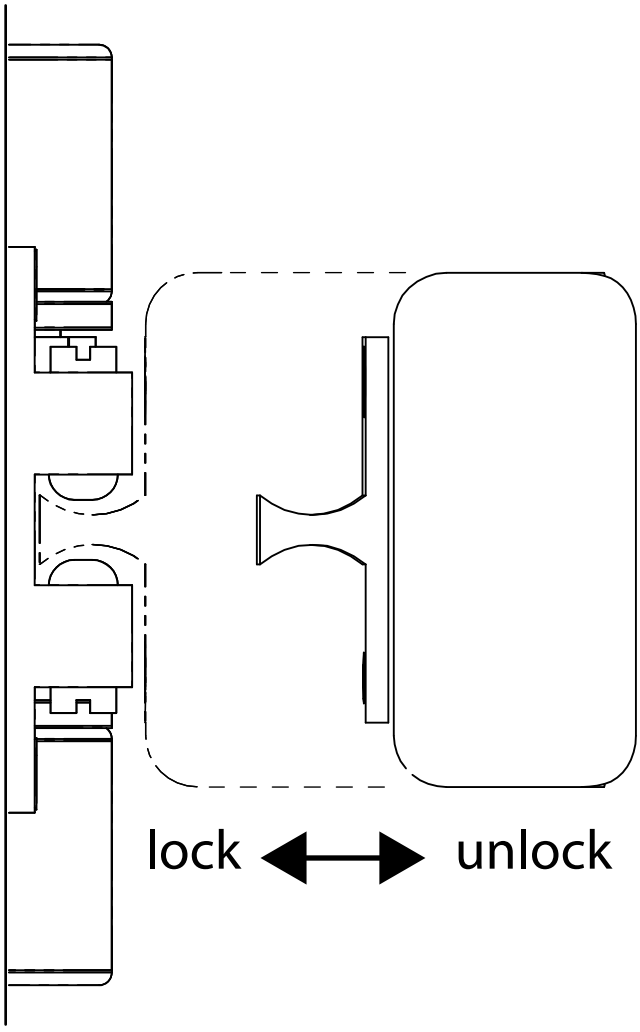


Appendix 1
ROOF FASTENING

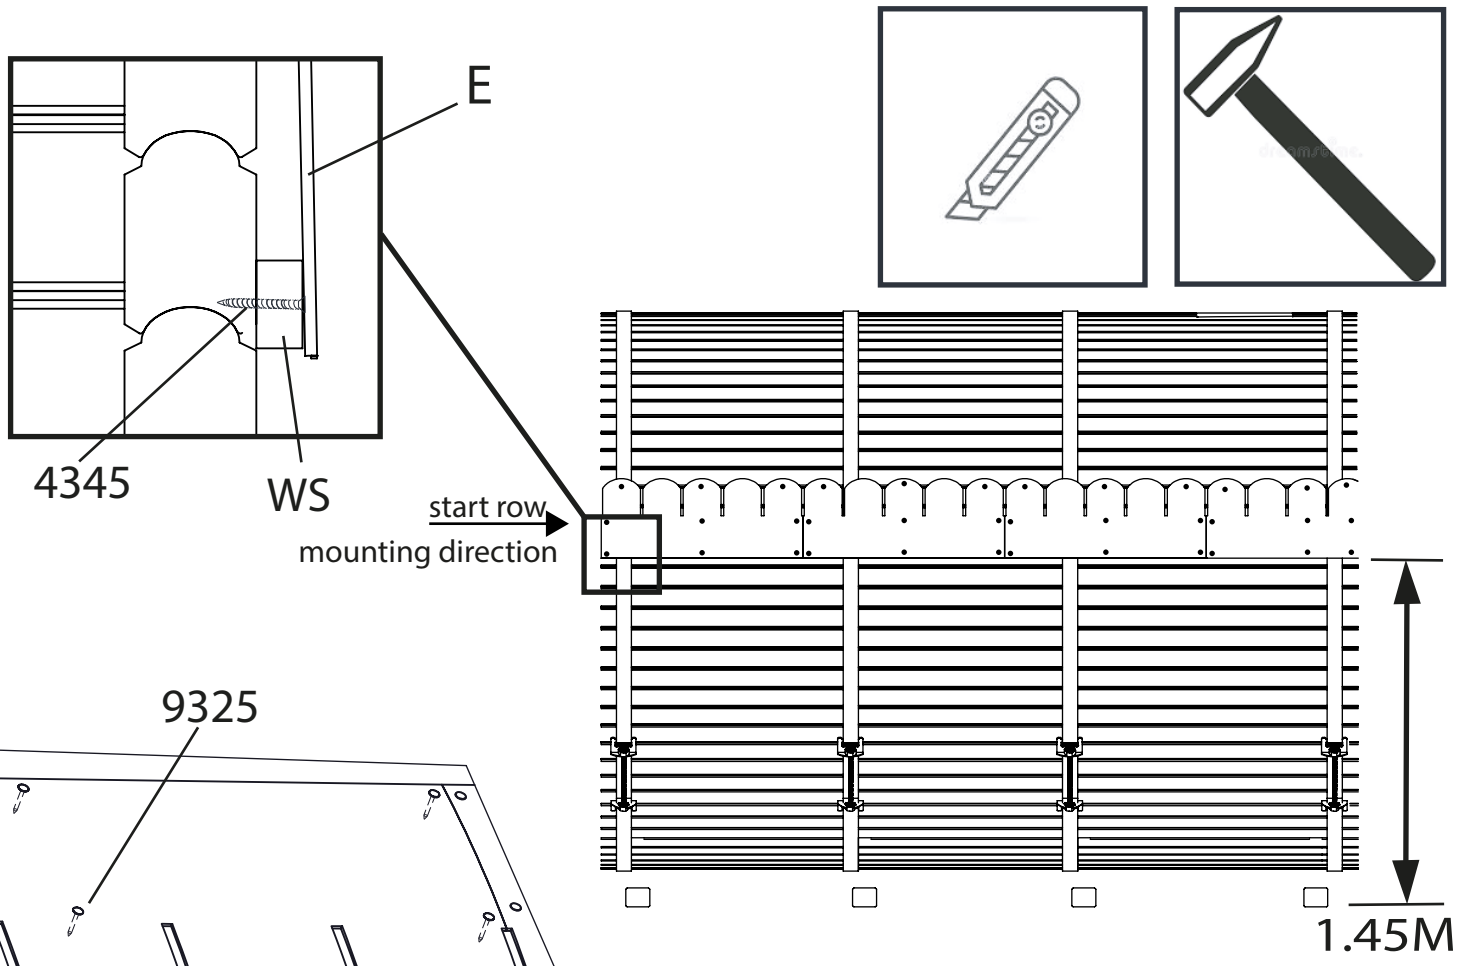


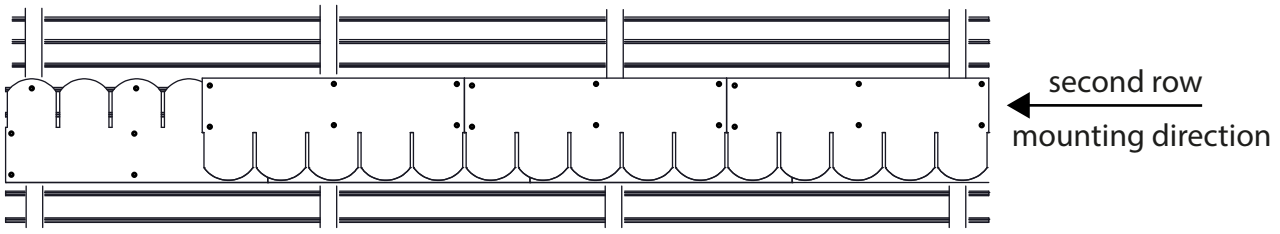

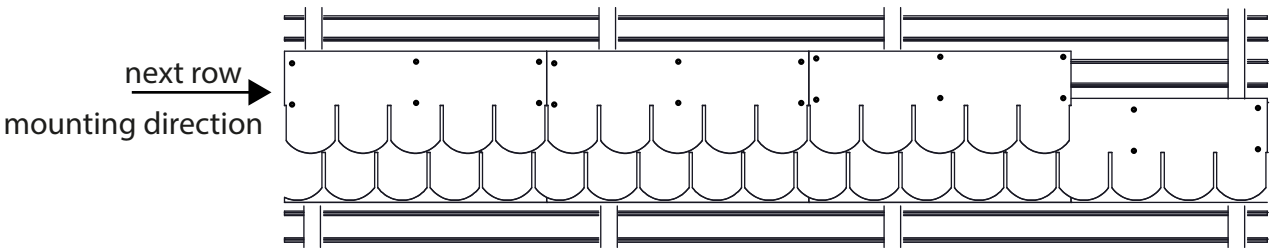


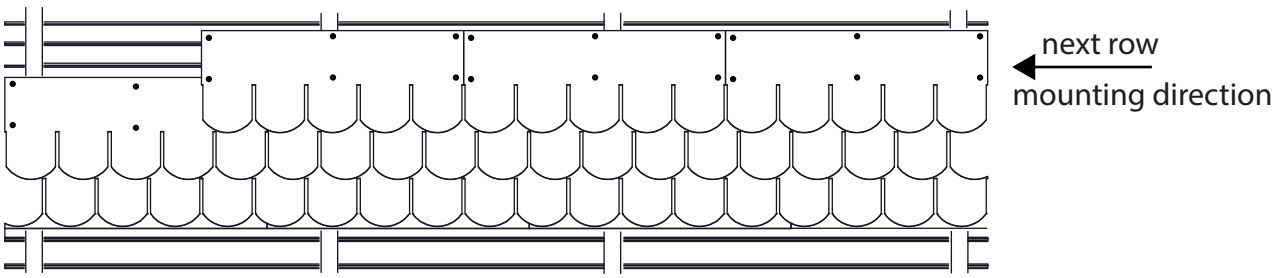


ROOF COVERING

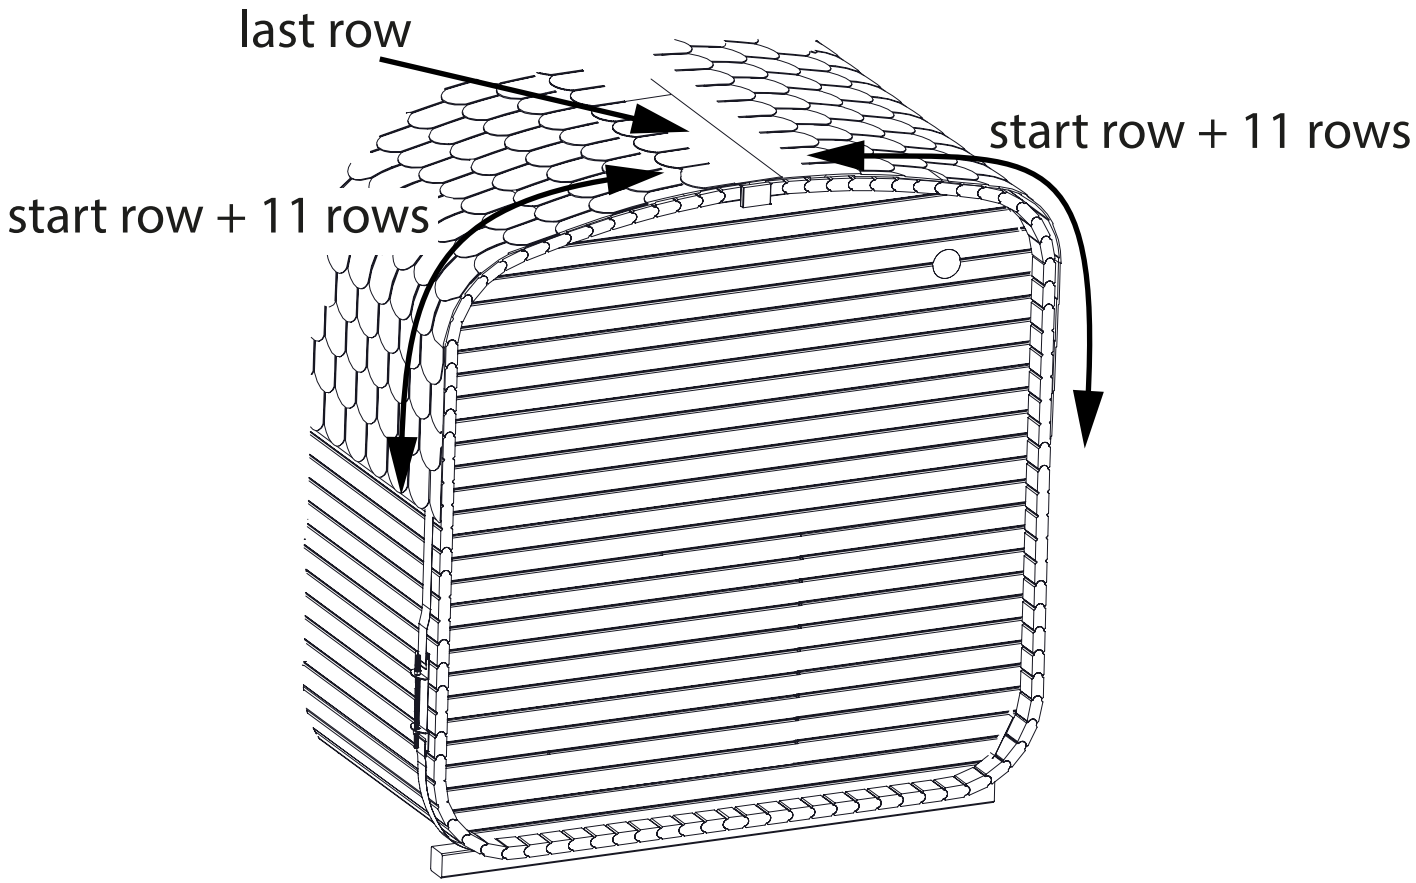



SEALING THE JOINTS

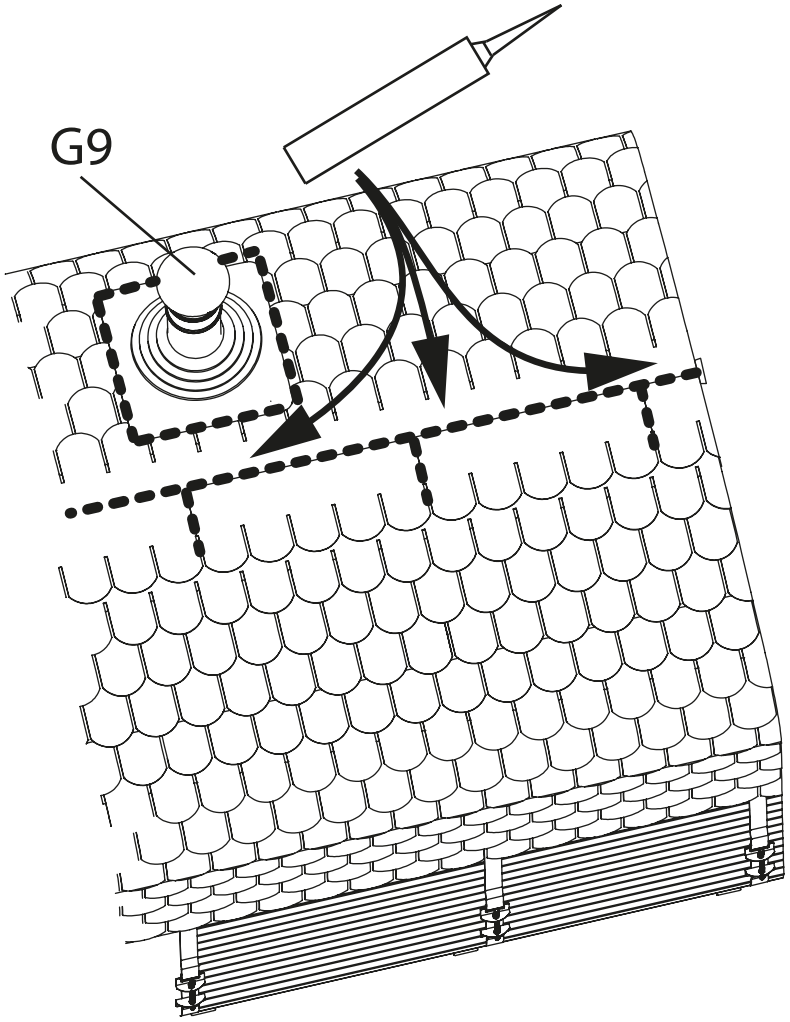


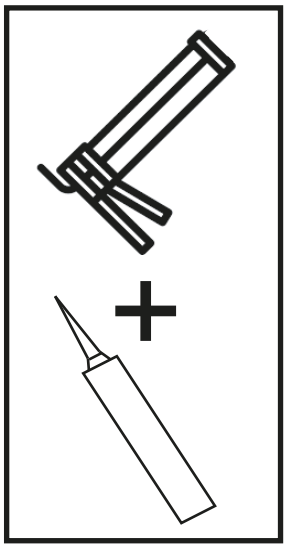



Appendix 2
PANORAMA INSTALLING

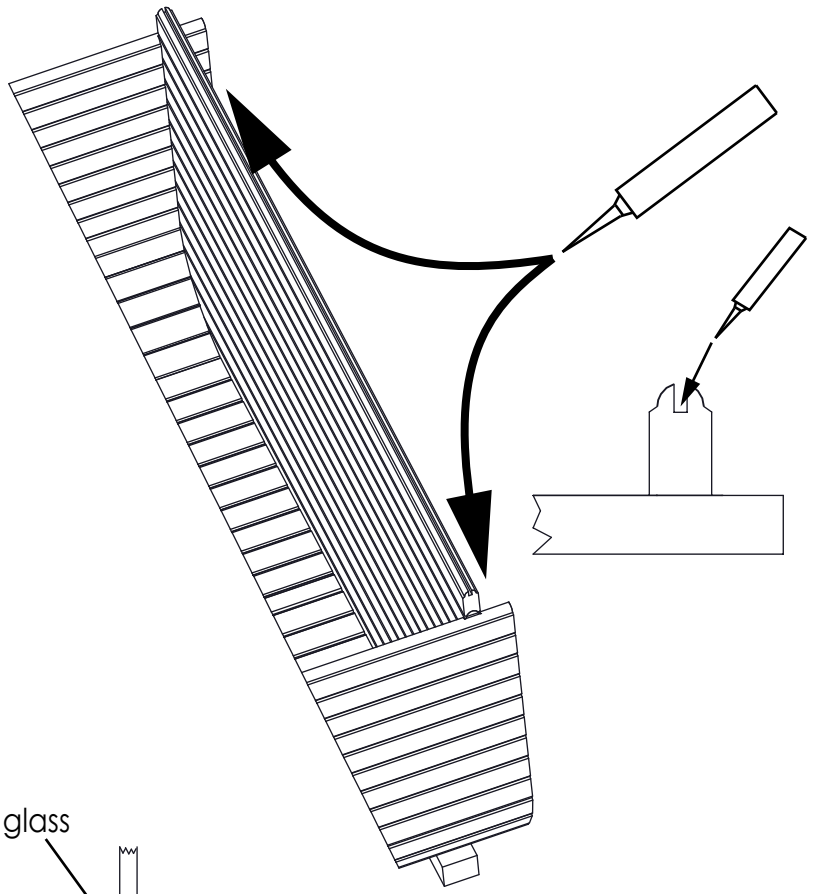


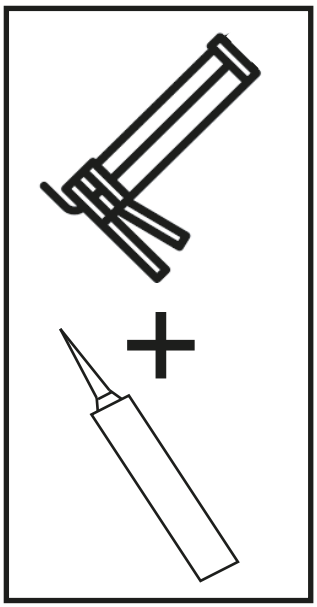


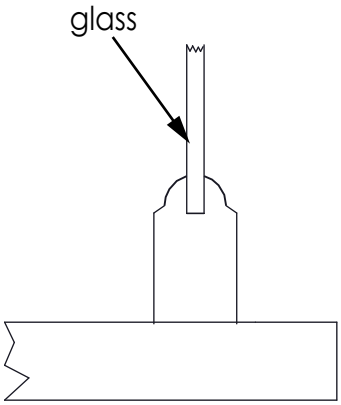


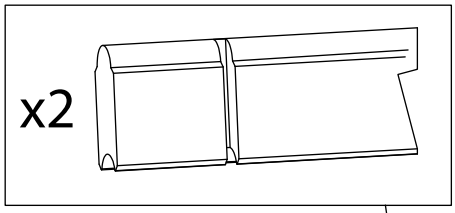


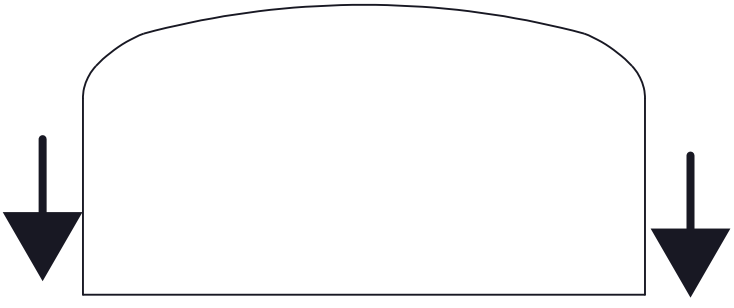


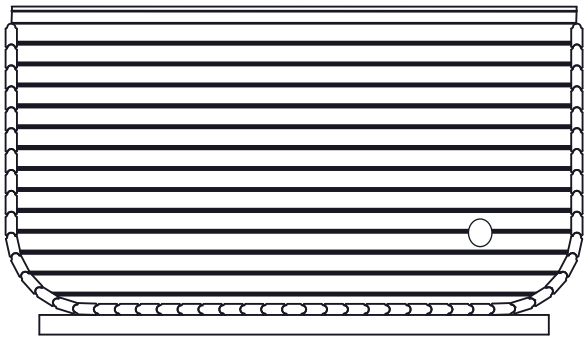


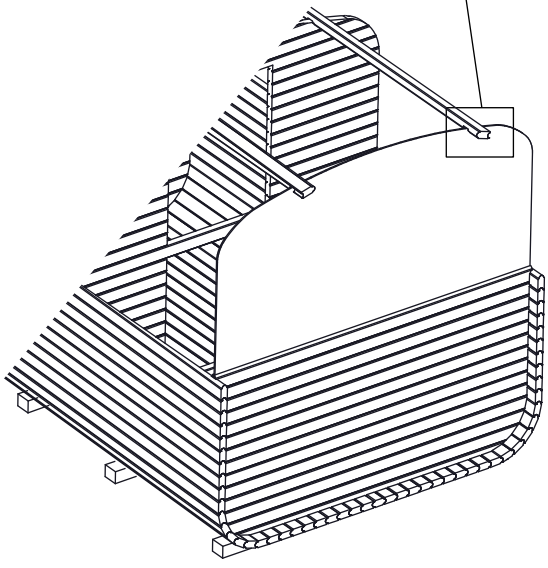

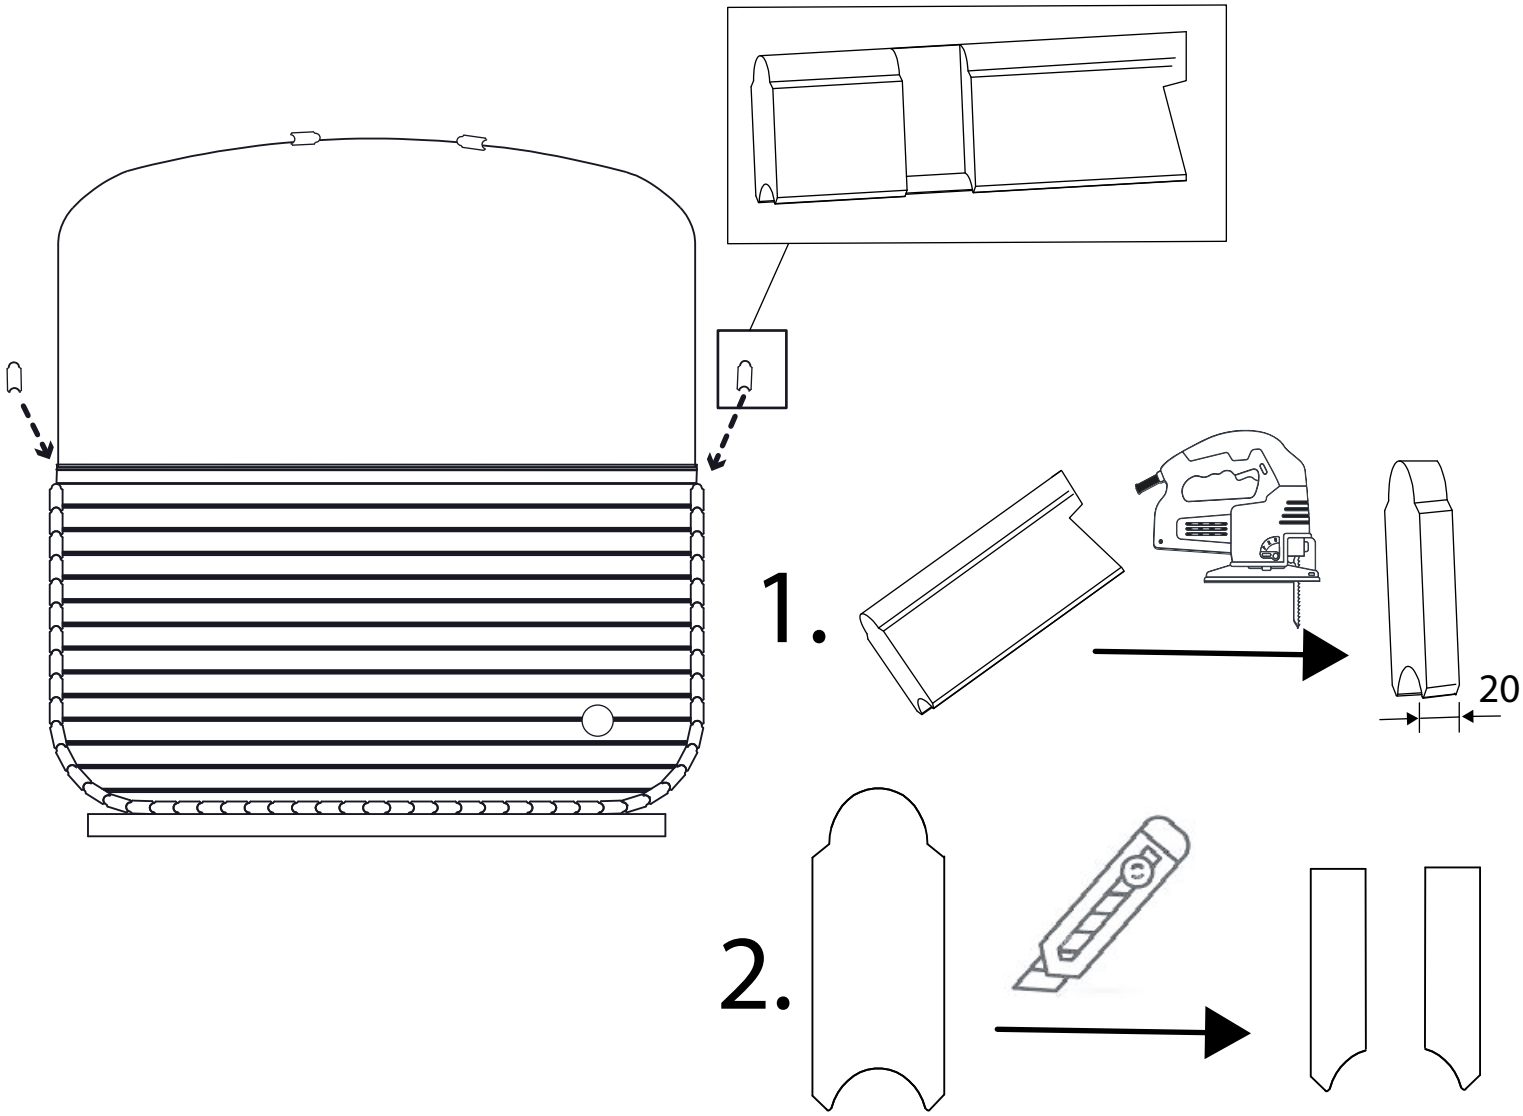
1.
20
2.

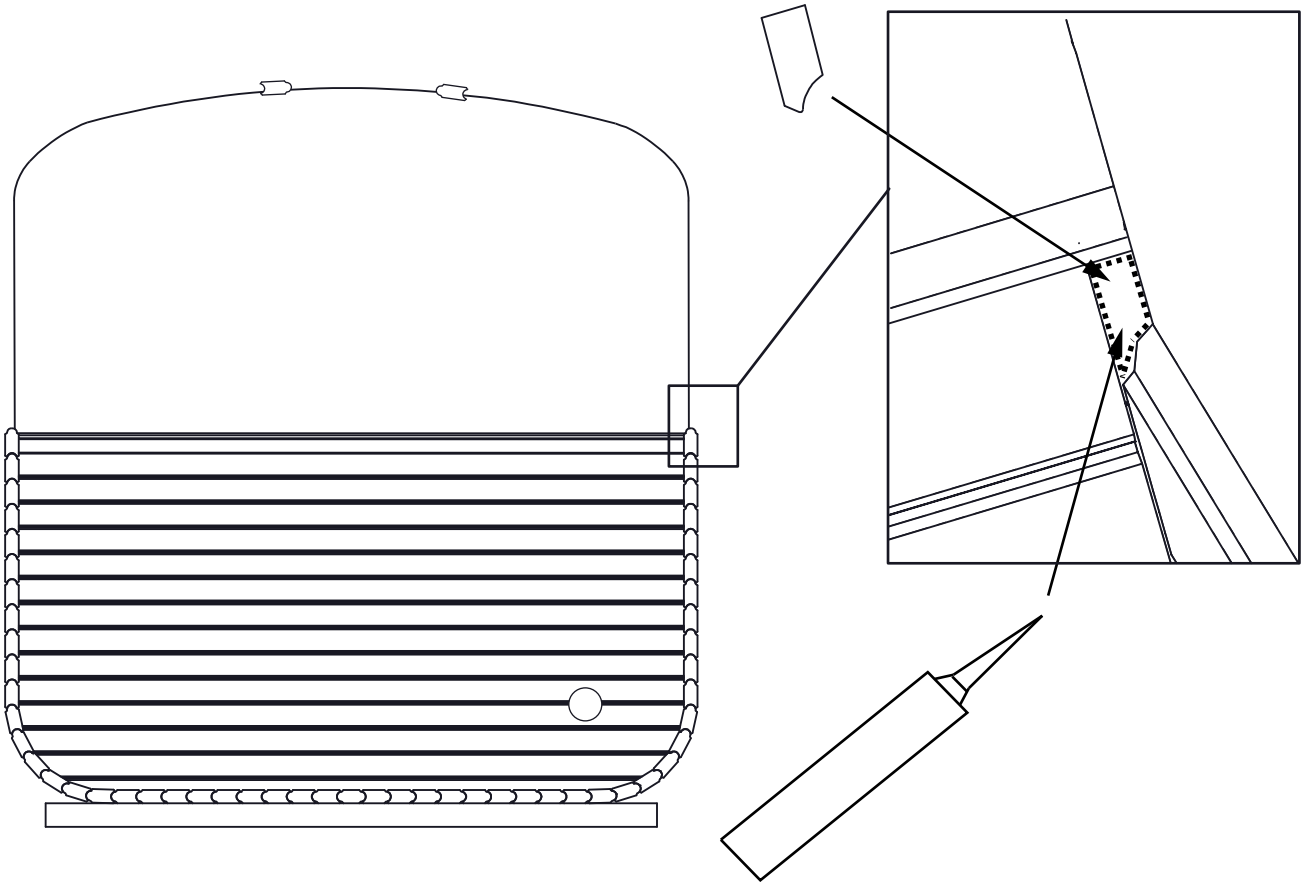

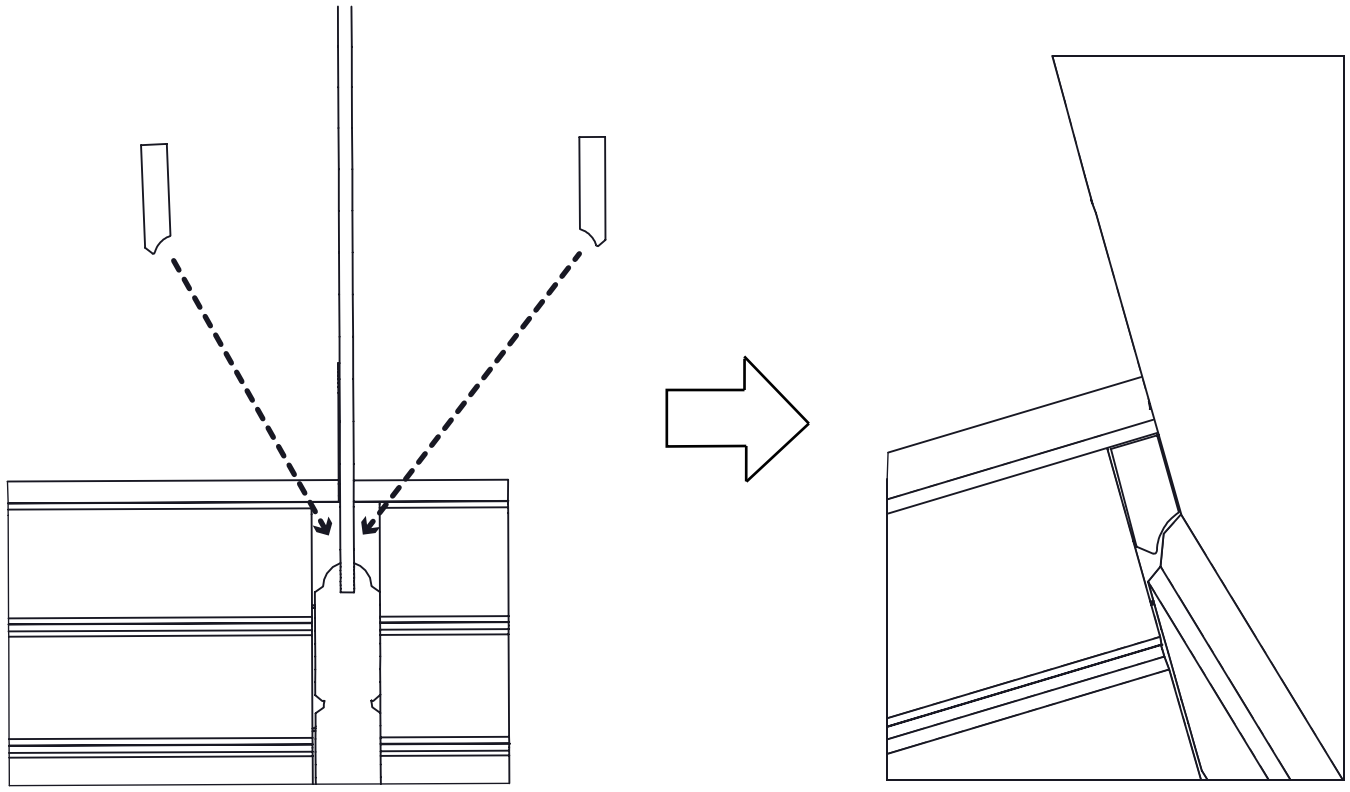

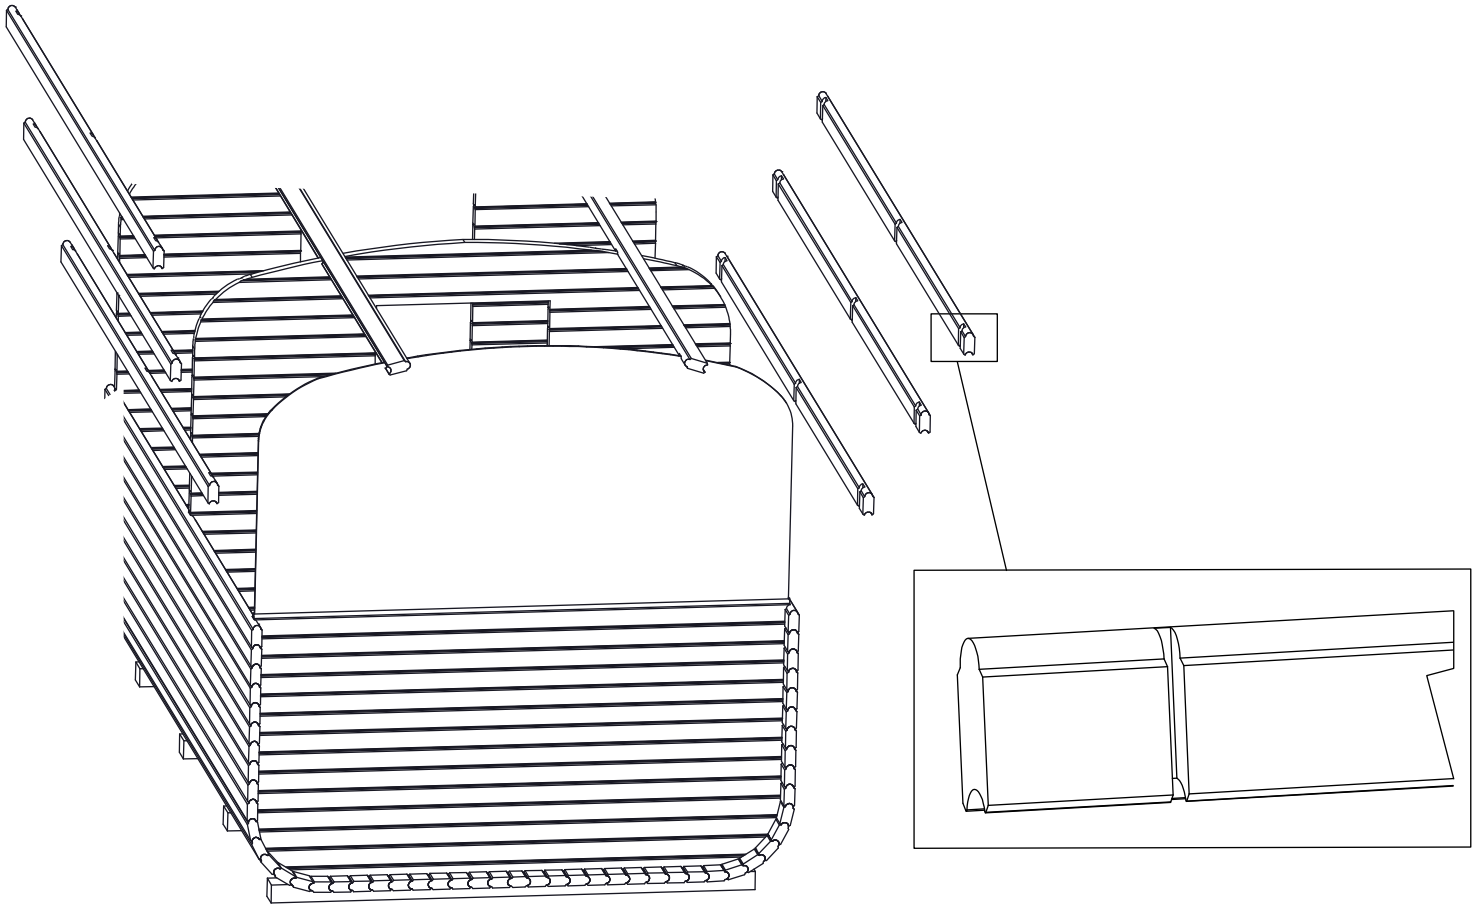



Appendix 3


WOOD-BURNING STOVE AND ELECTRIC STOVE INSTALLING


for set stove only!


COMMON STOVE ASSEMBLING

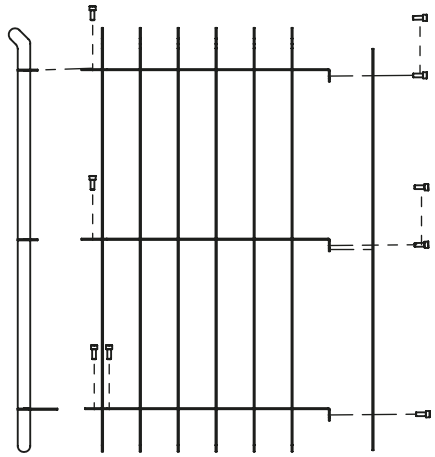

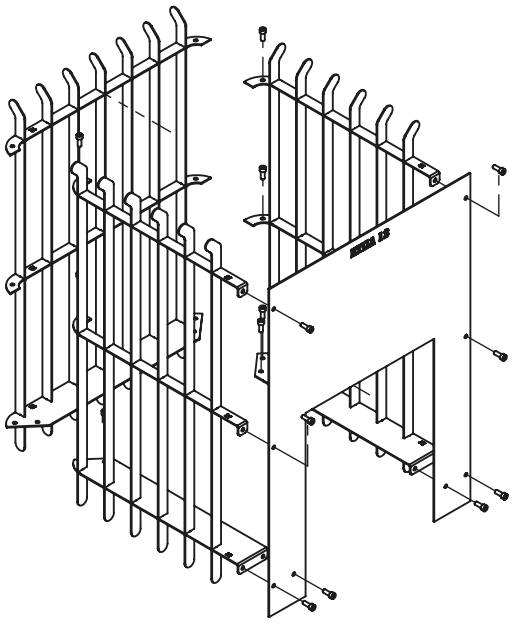


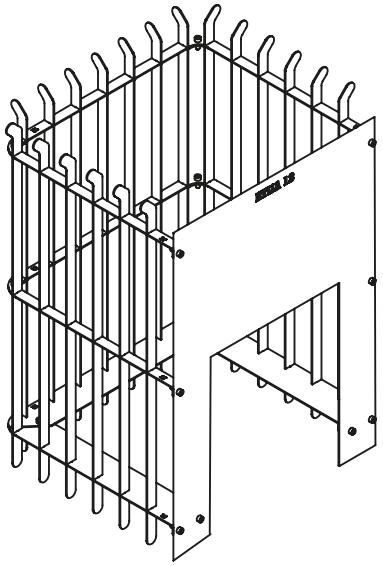

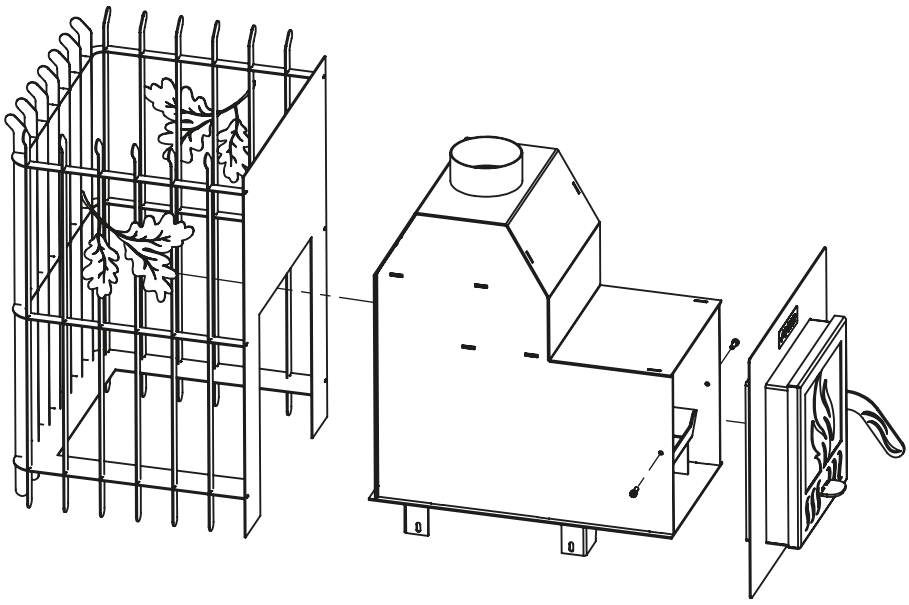

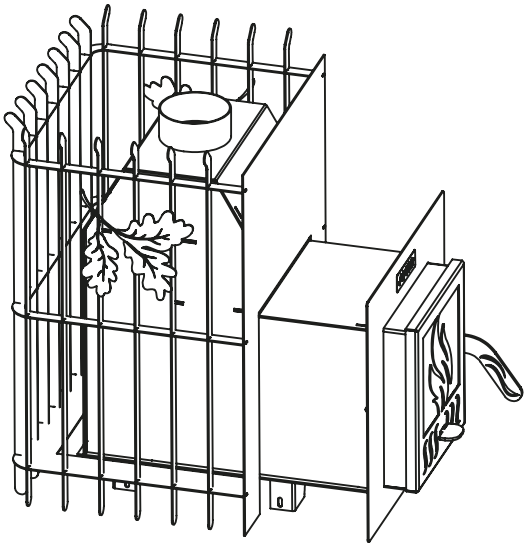


B300 - 2
W400 - 2
4570 - 4

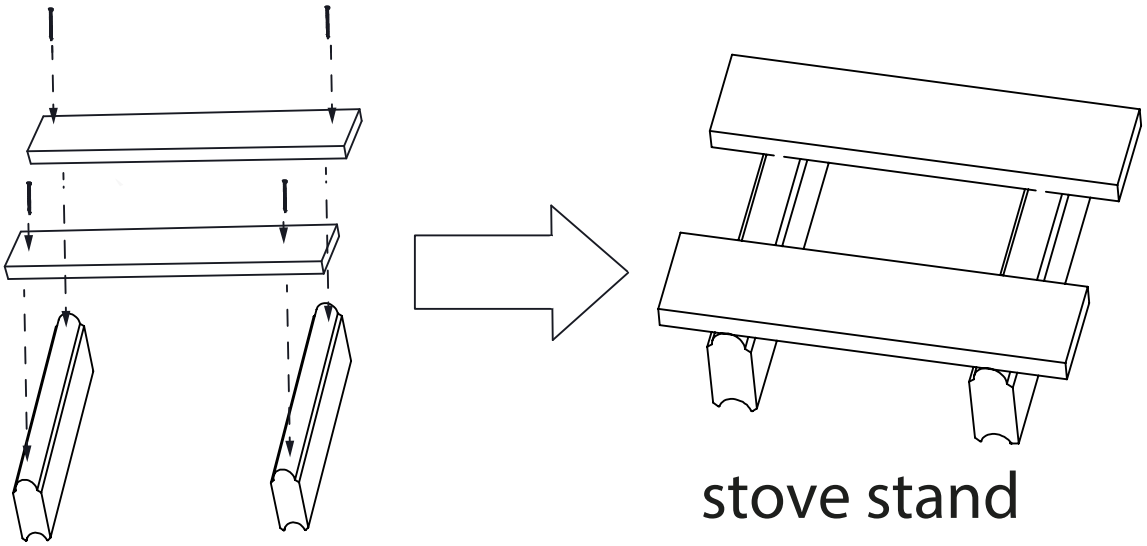


stove stand


ELECTRIC STOVE


G1

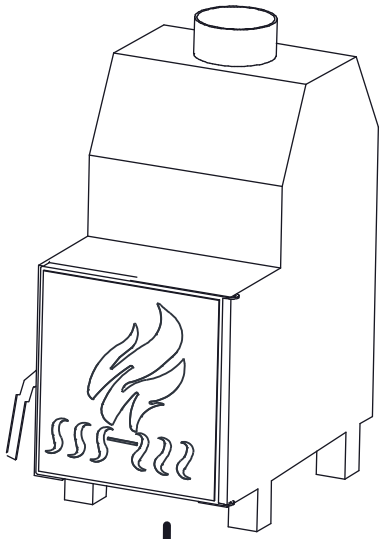


G5

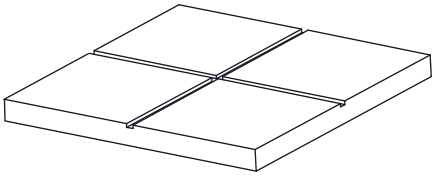


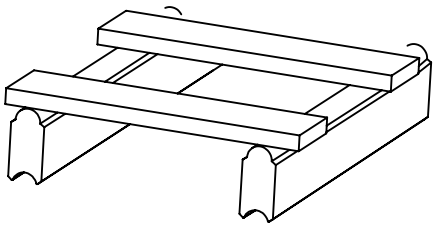

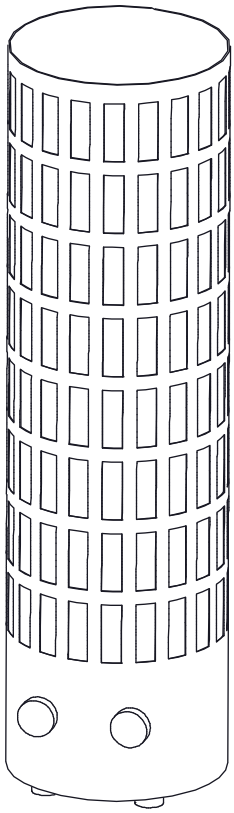

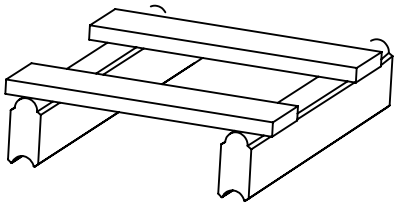



PIPE HOLE

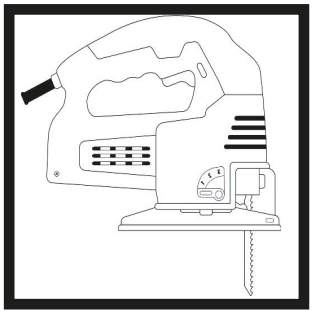


Q2 - 1
4216 - 8


for inner stove door

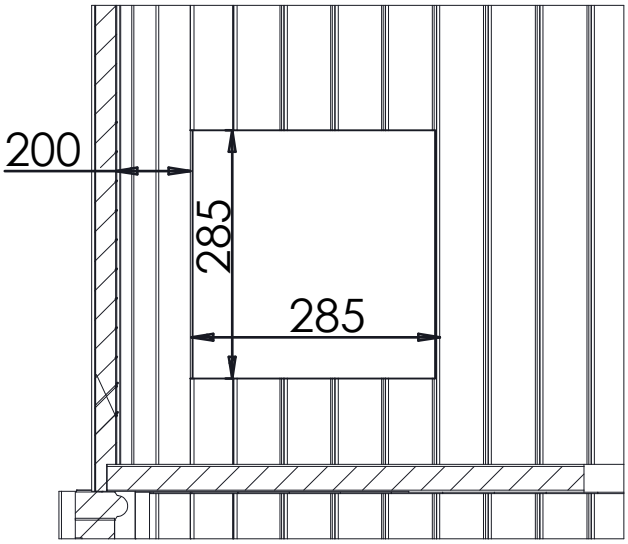


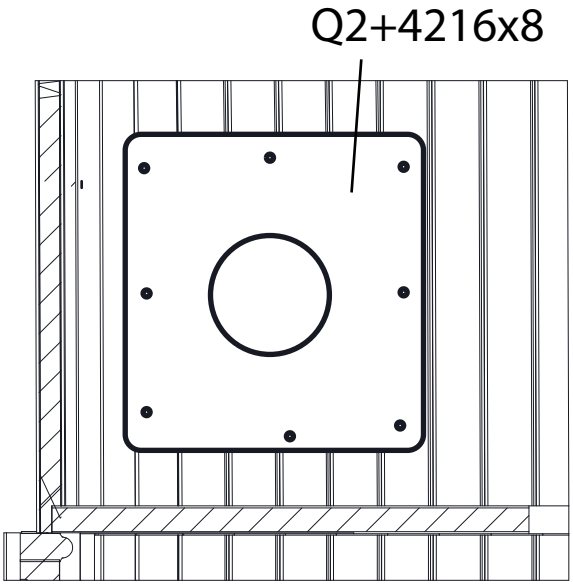

for outer stove door

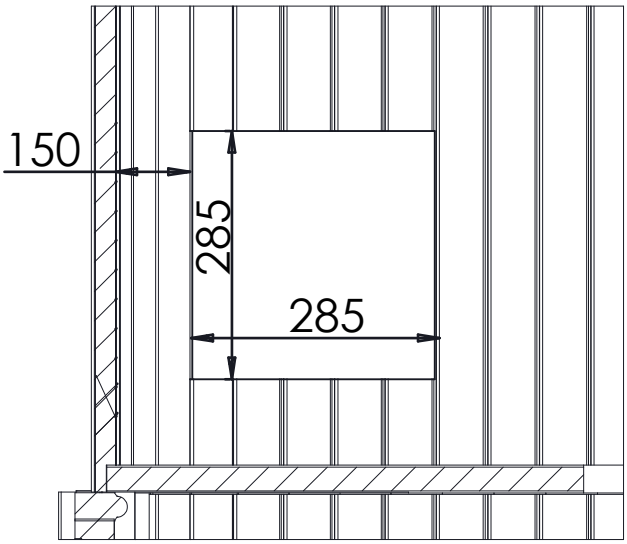


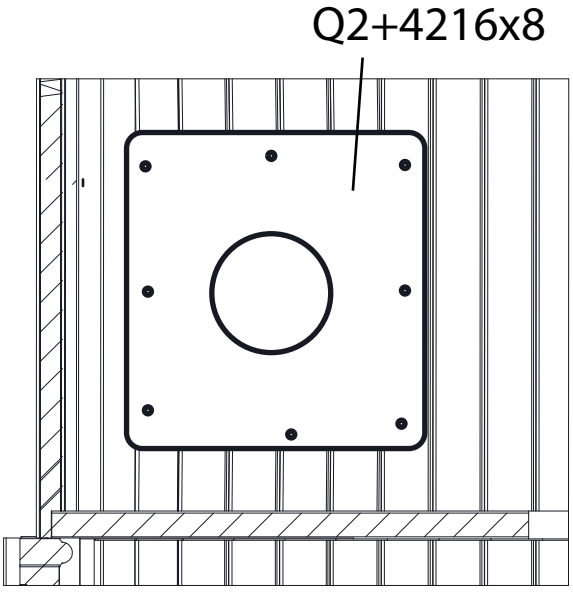


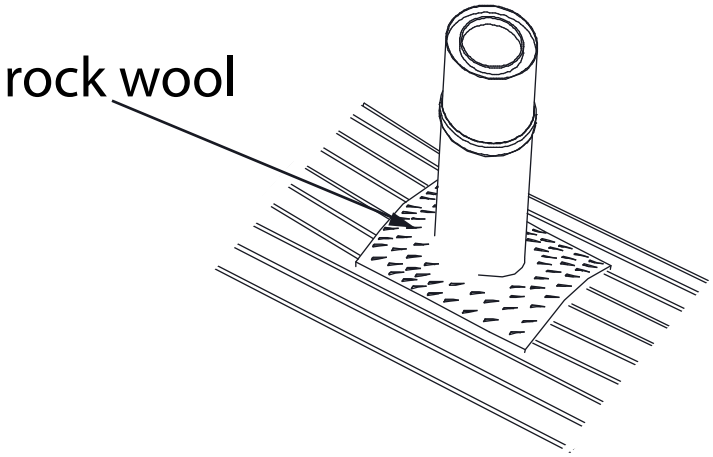

STOVE OPENING
FOR STOVE WITH OUTER DOOR
for set stove only!




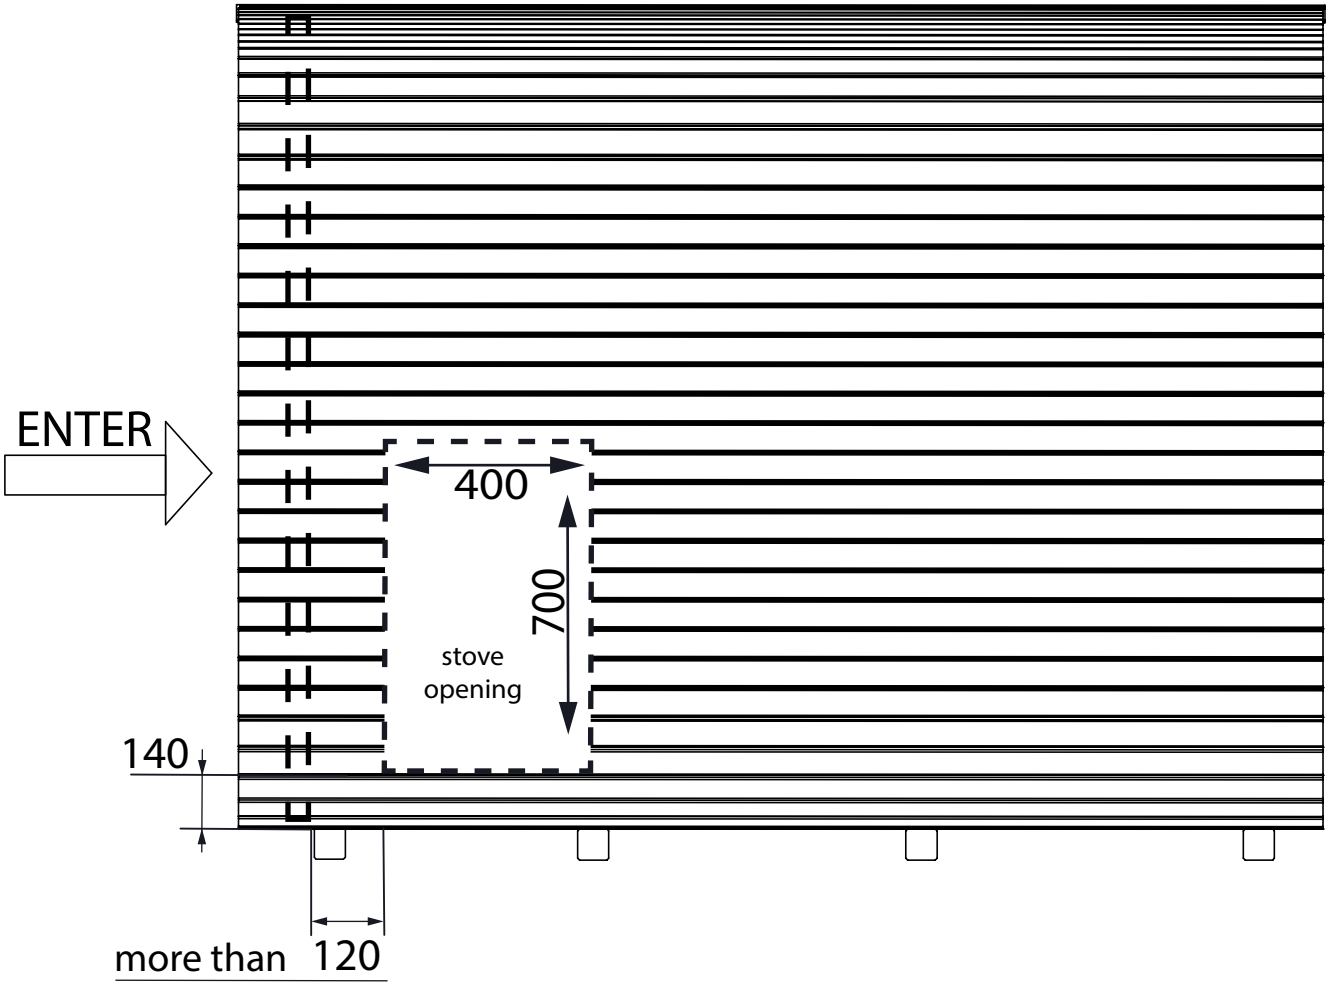

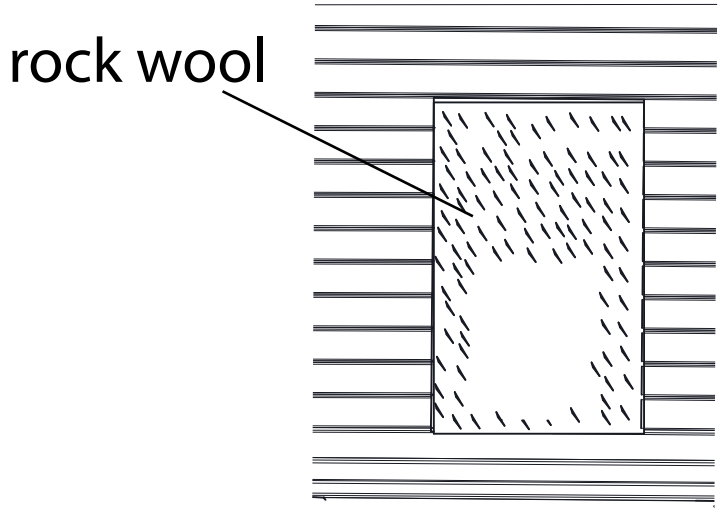


INSIDE VIEW


Q3 - 2
4216 - 20

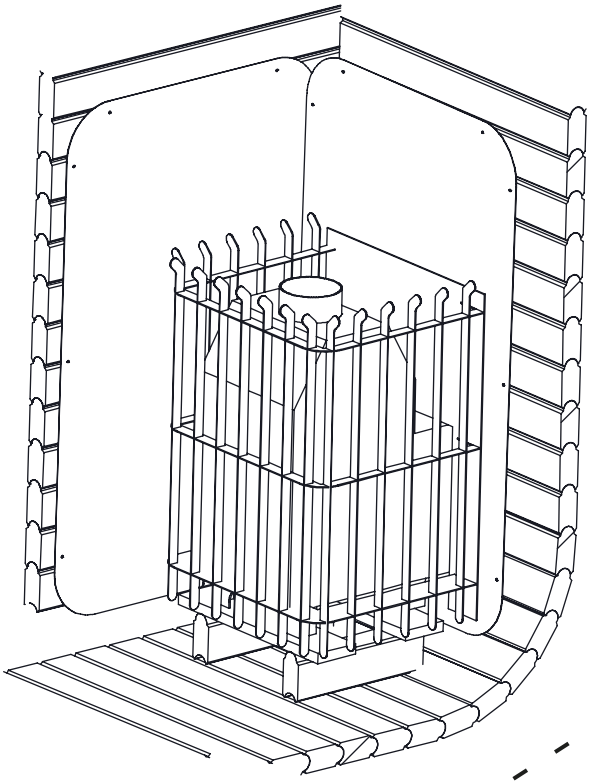

for outer door

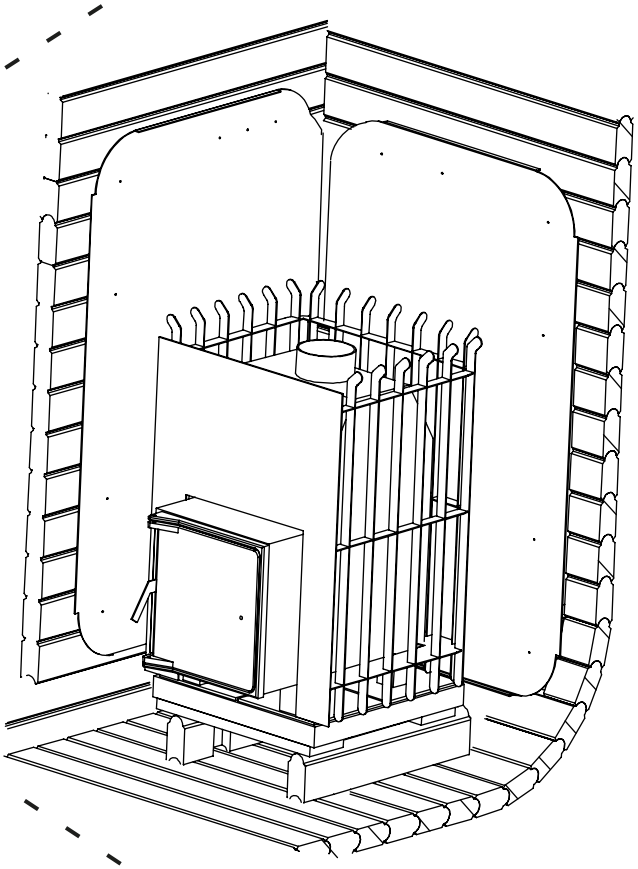


for inner door

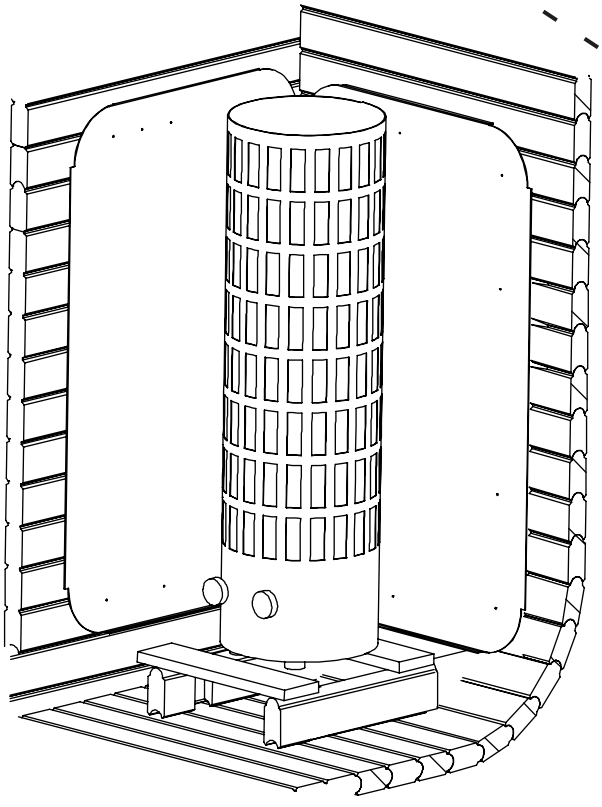


for electric stove

G6 - 1
G7 - 1
G12 - 1

G8 - 1
9325 -12

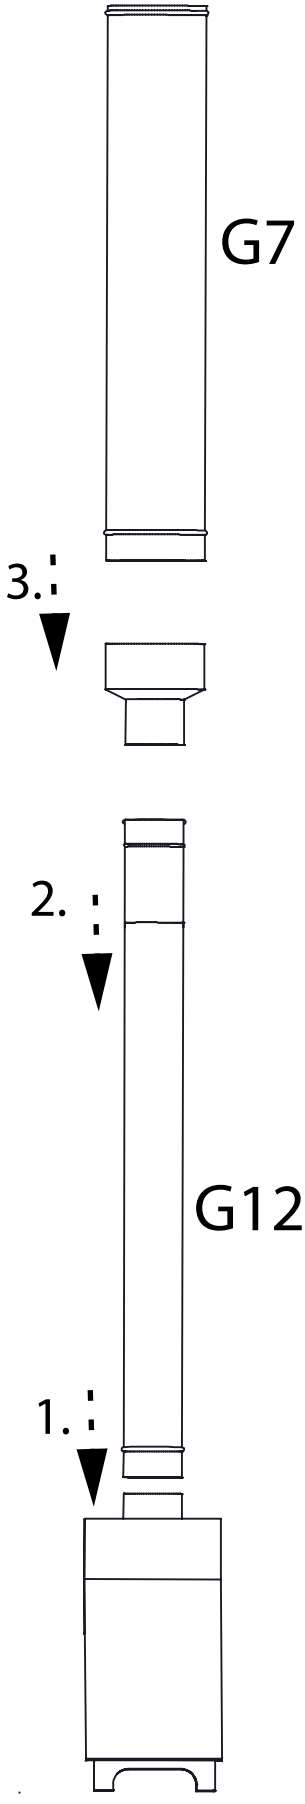

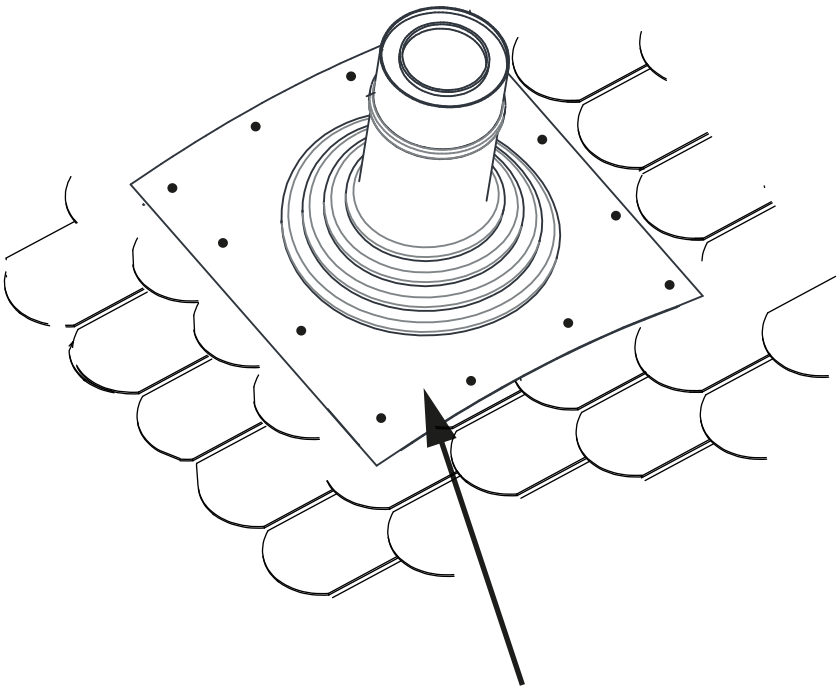

G8 + 12x9325

metal side to down!

The Cabin Eight Two-Tier

Assembly instructions · Waldenhaus

Missing or damaged on arrival

Photograph it before you sign for the delivery, then email support@waldenhaus.uk with your order number, the part code from this guide and the photo.

Parts

Every part has a code (C41, S550, R520 …). Quote the code and we send that part.

Treat the outside

The cabin arrives untreated. Treat the outside walls before the first session and before the first winter, then at least every two years.

Questions while you build

Email support@waldenhaus.uk or message us on WhatsApp from waldenhaus.uk.