

The Cabin Six Compact


Assembly instructions · Waldenhaus


Electric and wood-fired editions

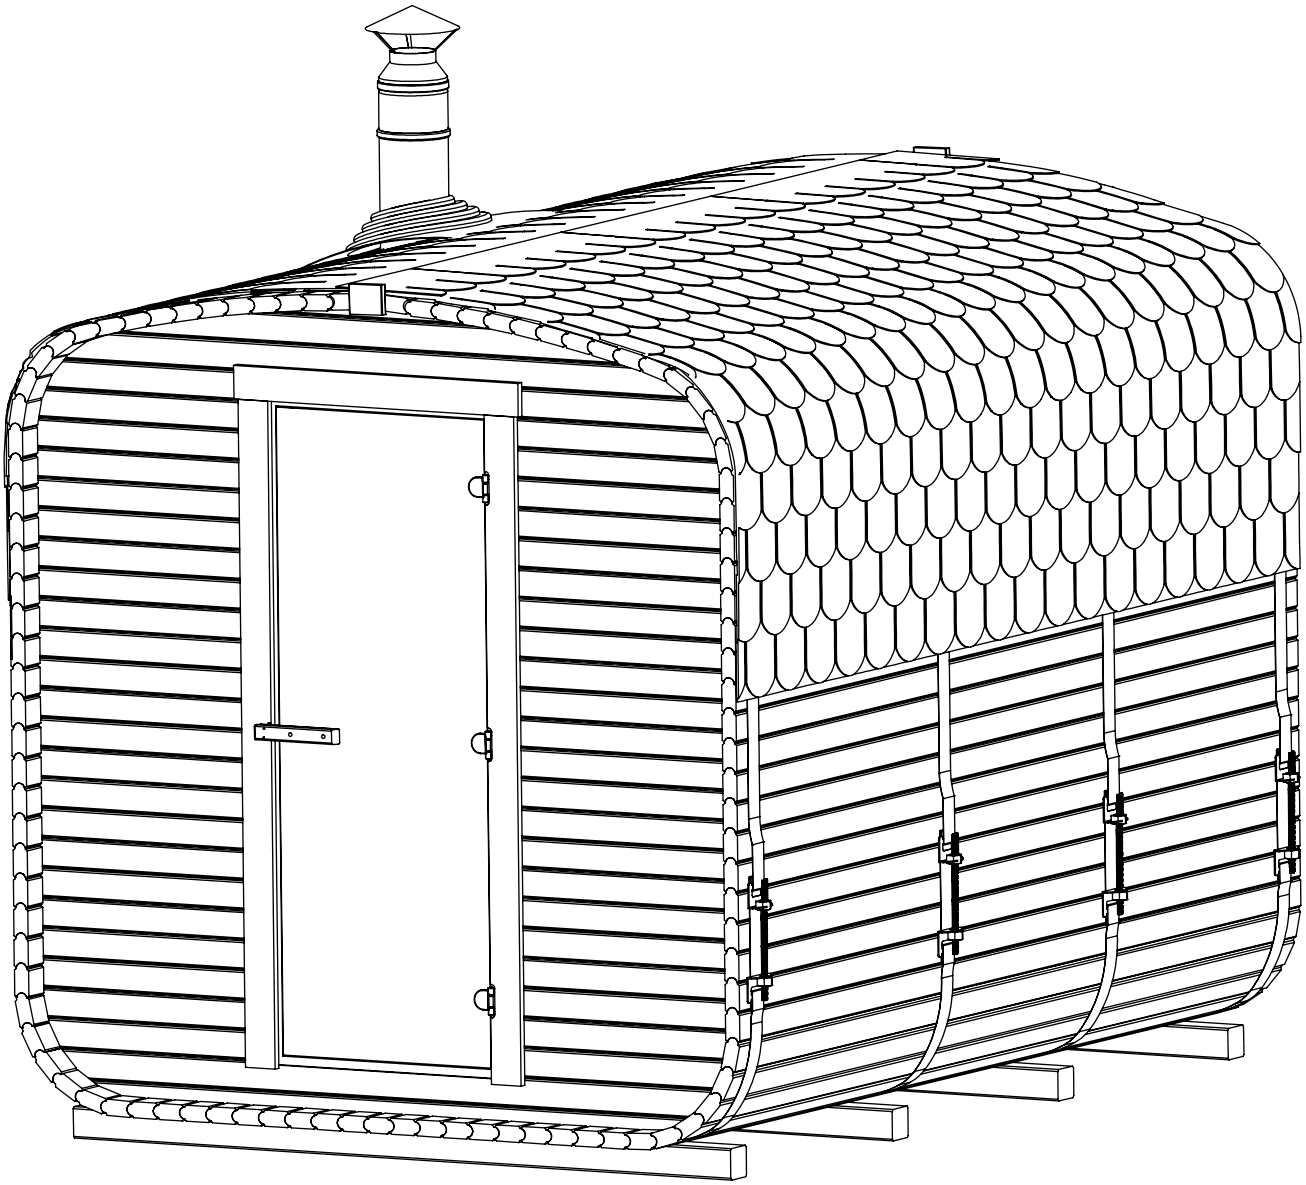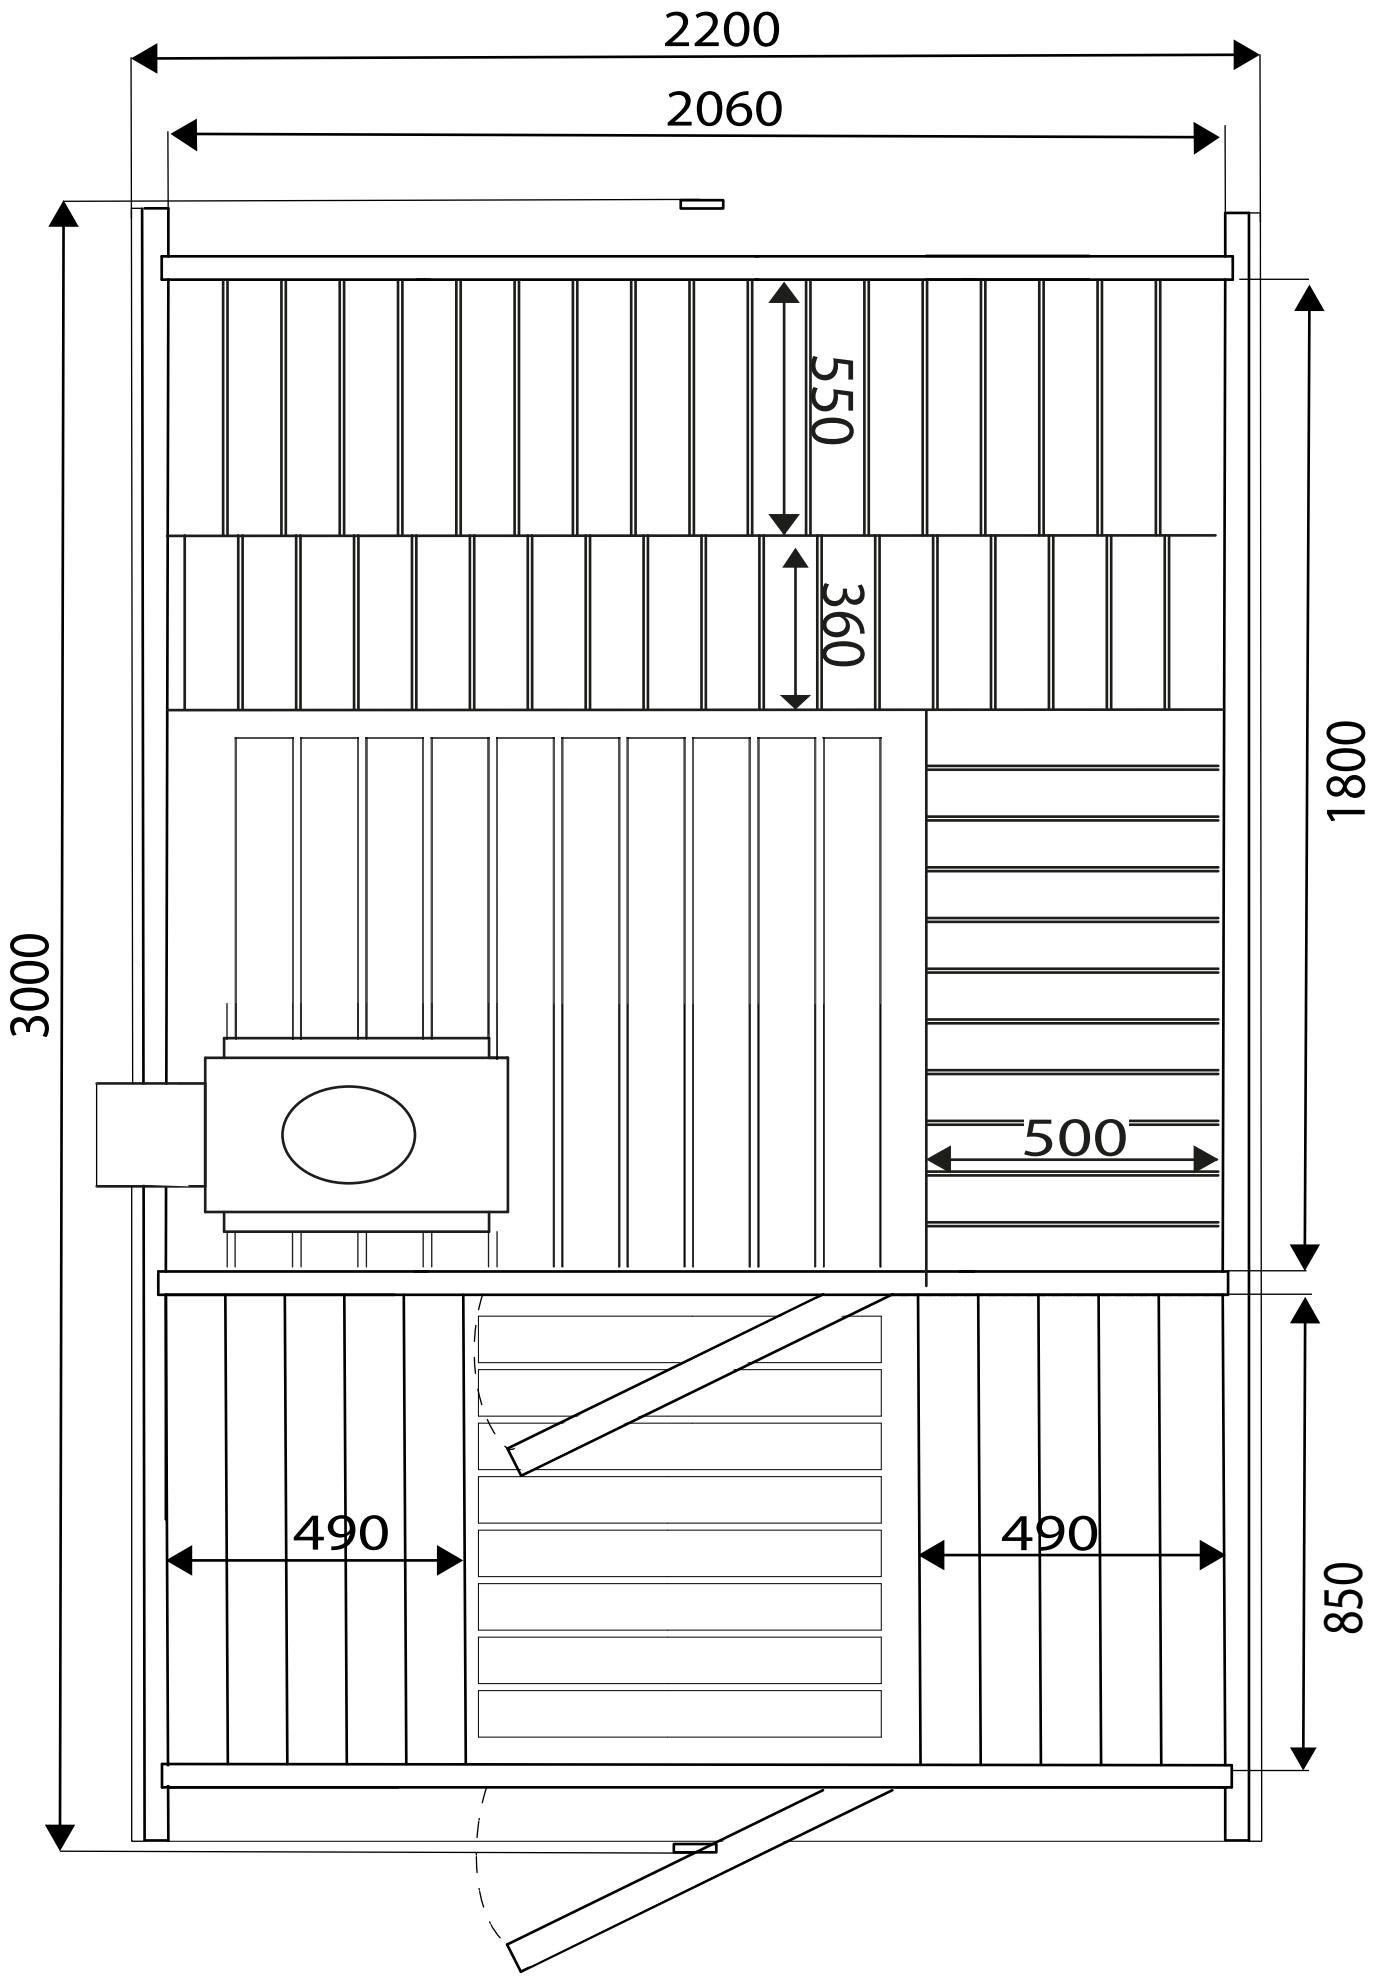




2200
2060
550
360
1800
3000
500
490
490
850

Tools you need

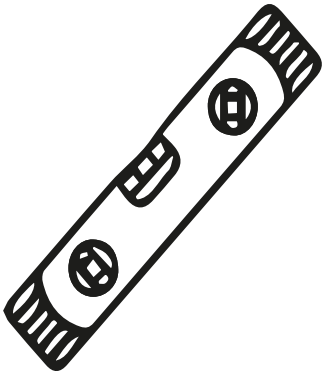

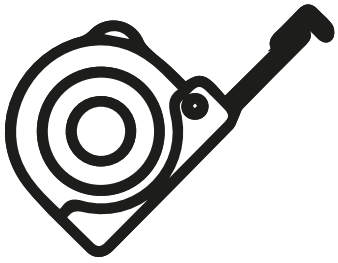


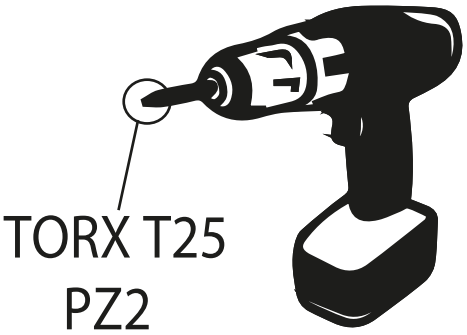


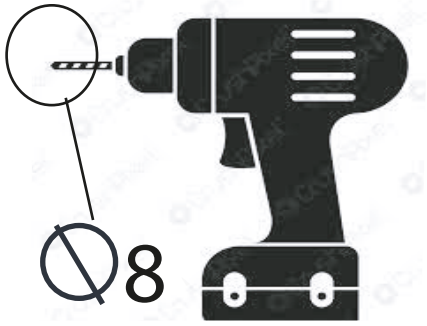






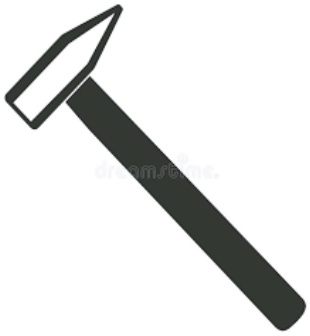

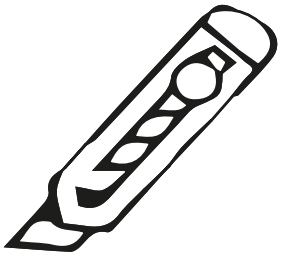

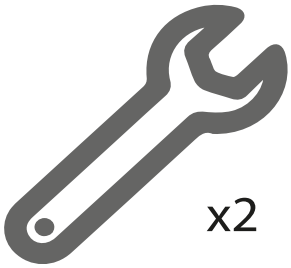




+




treatment




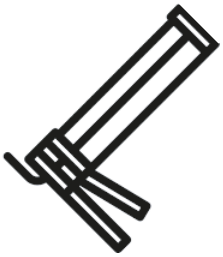

+

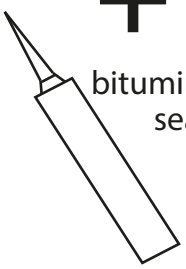



bituminous sealant

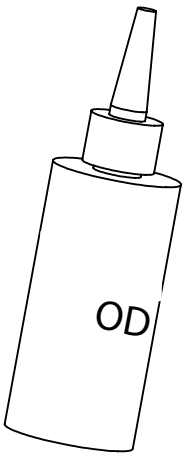



impregnating oil for benches


Not included

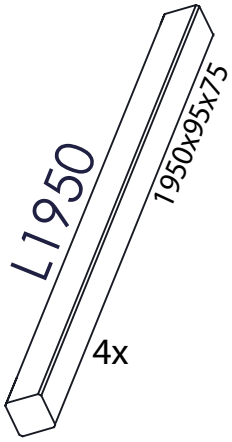

L1950
1950x95x75
4x

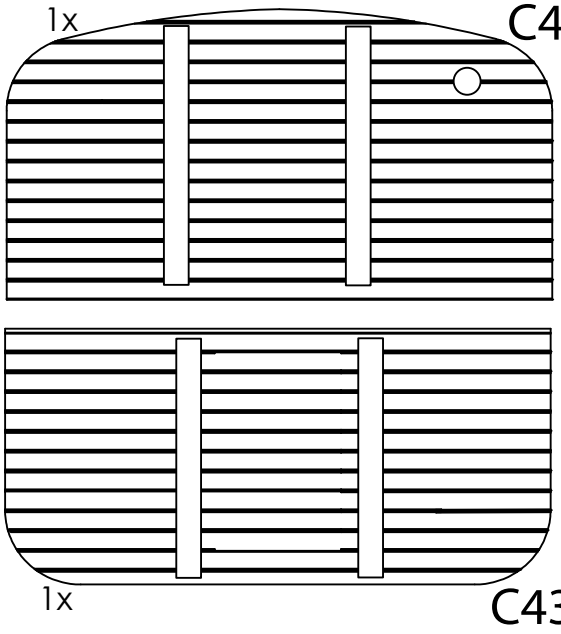

1x
C44
1x
C43

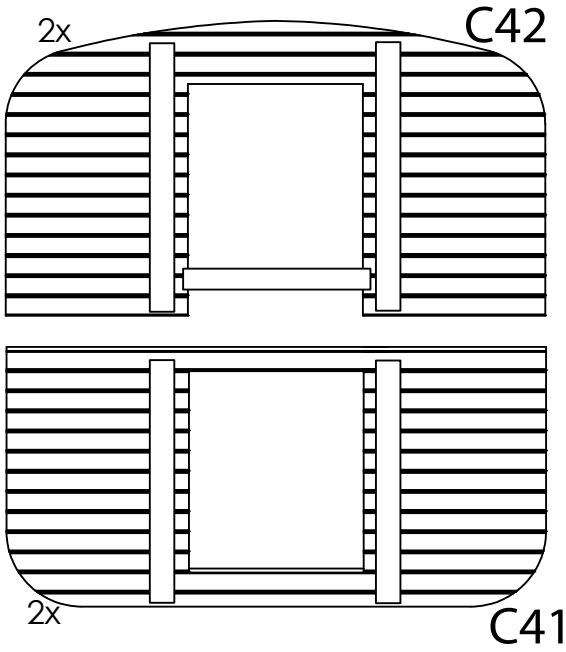

2x
C42
2x
C41

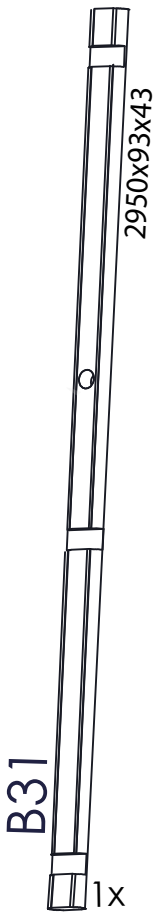
B31
2950x93x43
1x

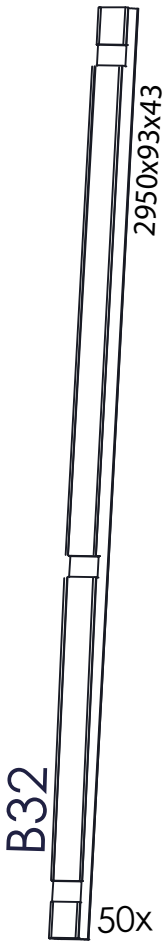

B32
2950x93x43
50x

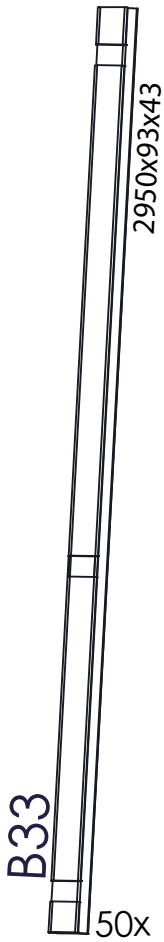

B33
2950x93x43
50x

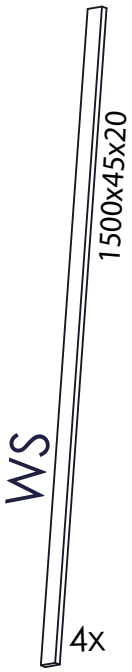

WS
1500x45x20
4x

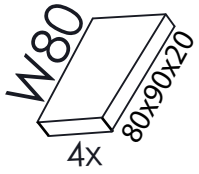

W80
80x90x20
4x



W840
840x90x20
4x

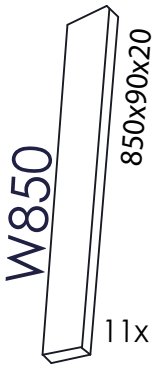
W850
850x90x20
11x

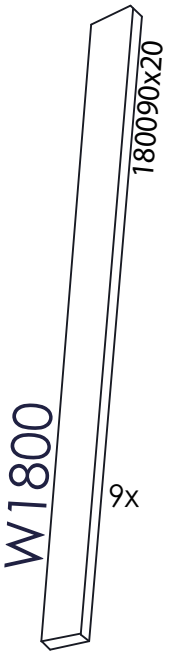
W1800
180090x20
9x

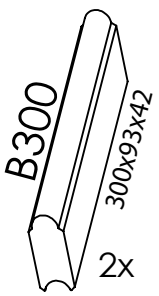
B300
300x93x42
2x

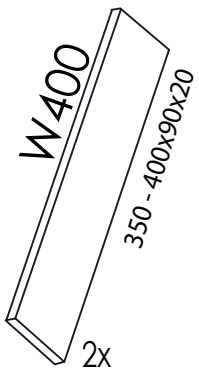
W400
350 - 400x90x20
2x

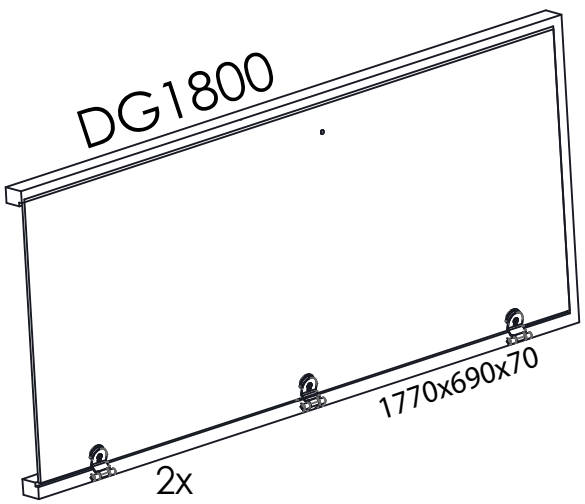
DG1800
1770x690x70
2x



650x



400x



340x




110x



60x




135x

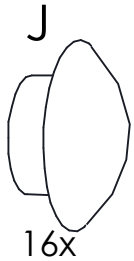


16x

2012

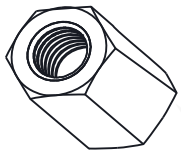


8x

L60

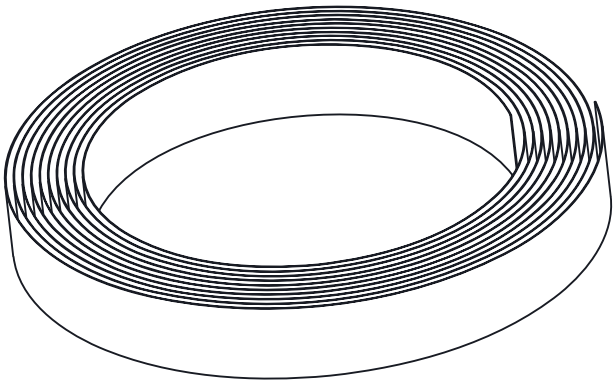


4x

K60

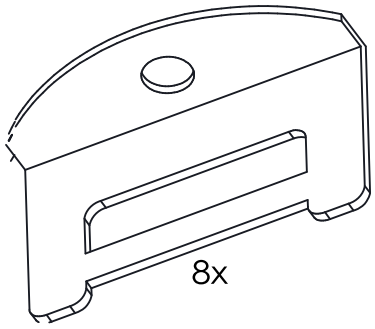


8x

732012

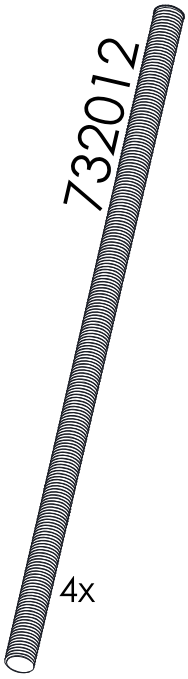


4x

SET2

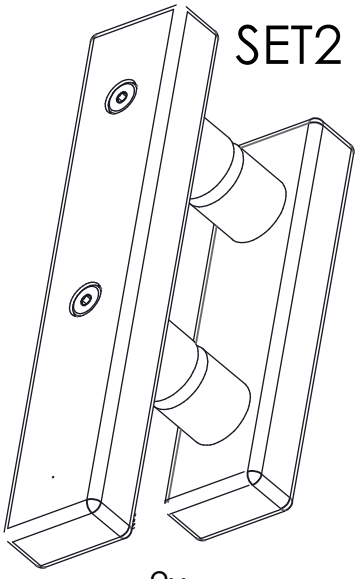


2x

SET3

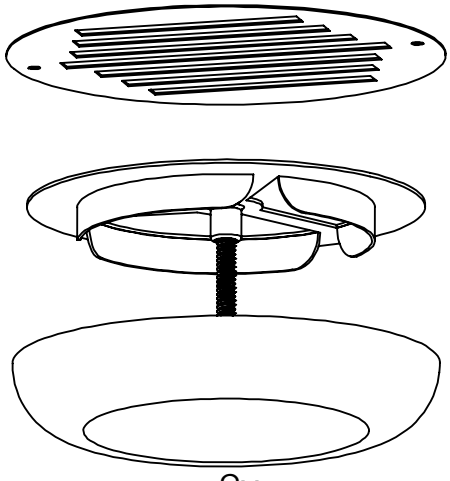


2x

Q1

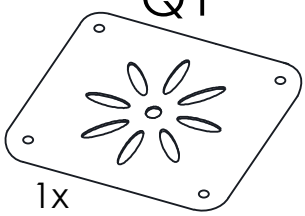



1x


E

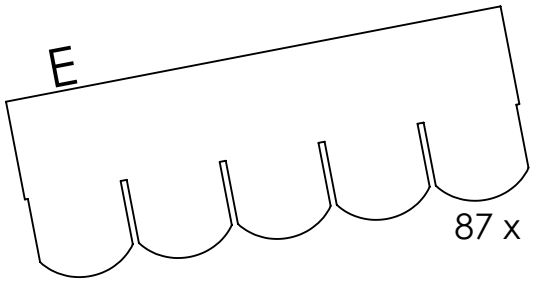



87 x

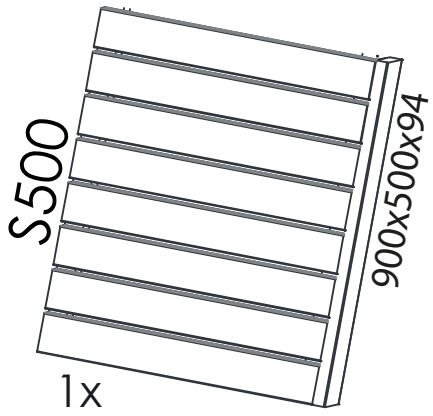

S500
900x500x94
1x

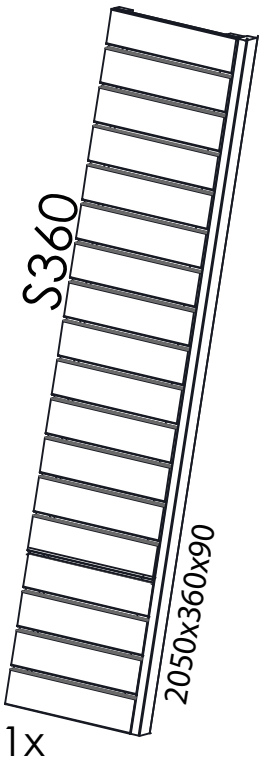
S360
2050x360x90
1x

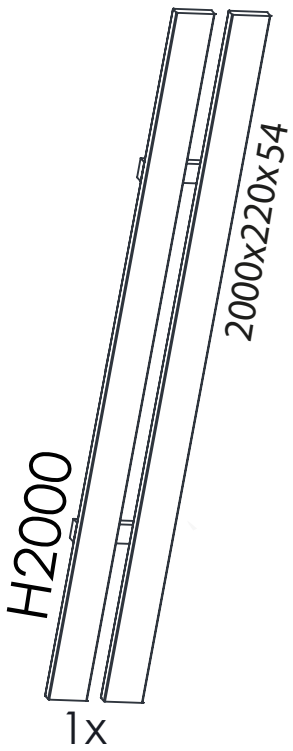

H2000
2000x220x54
1x

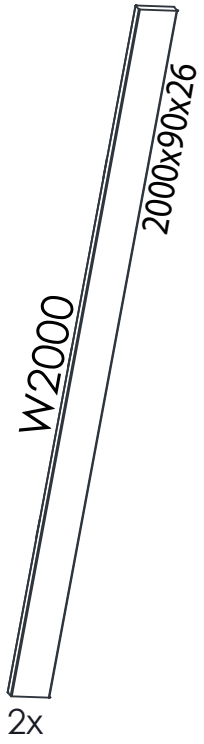

W2000
2000x90x26
2x

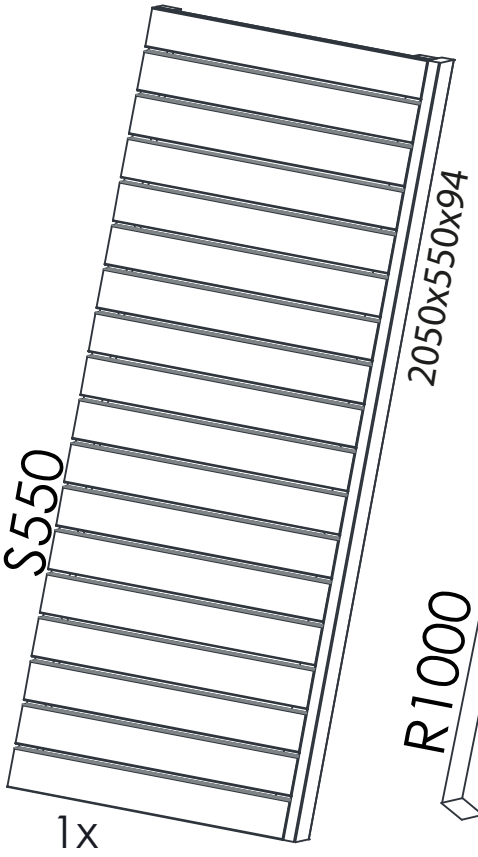

S550
2050x550x94
1x

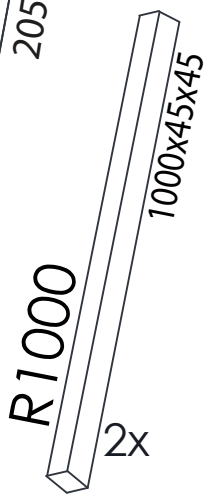

R1000
1000x45x45
2x



R520
520x45x45
19x

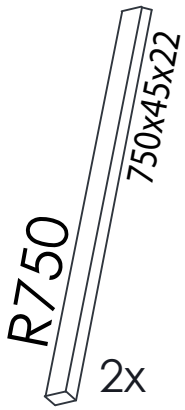
R750
750x45x22
2x

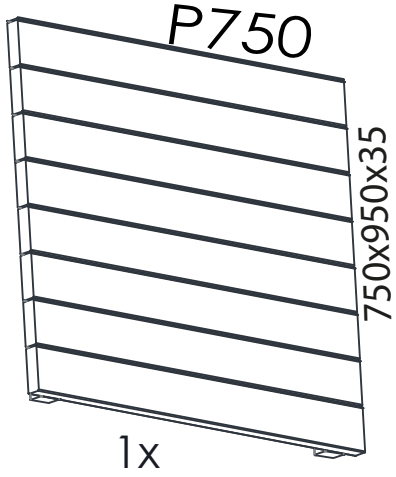
P750
750x950x35
1x

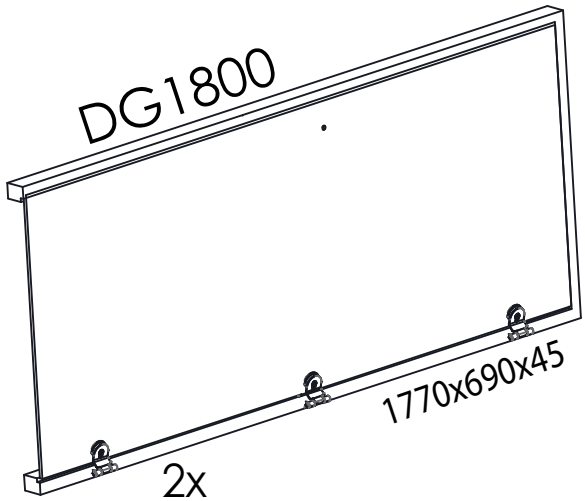

DG1800
1770x690x45
2x

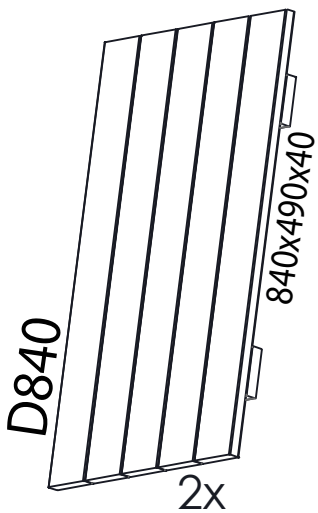
D840
840x490x40
2x

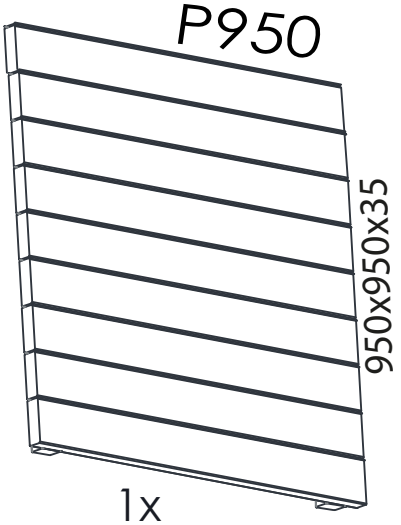
P950
950x950x35
1x

PANORAMA WINDOW: AN OPTIONAL EXTRA

for installation see **Appendix 2**

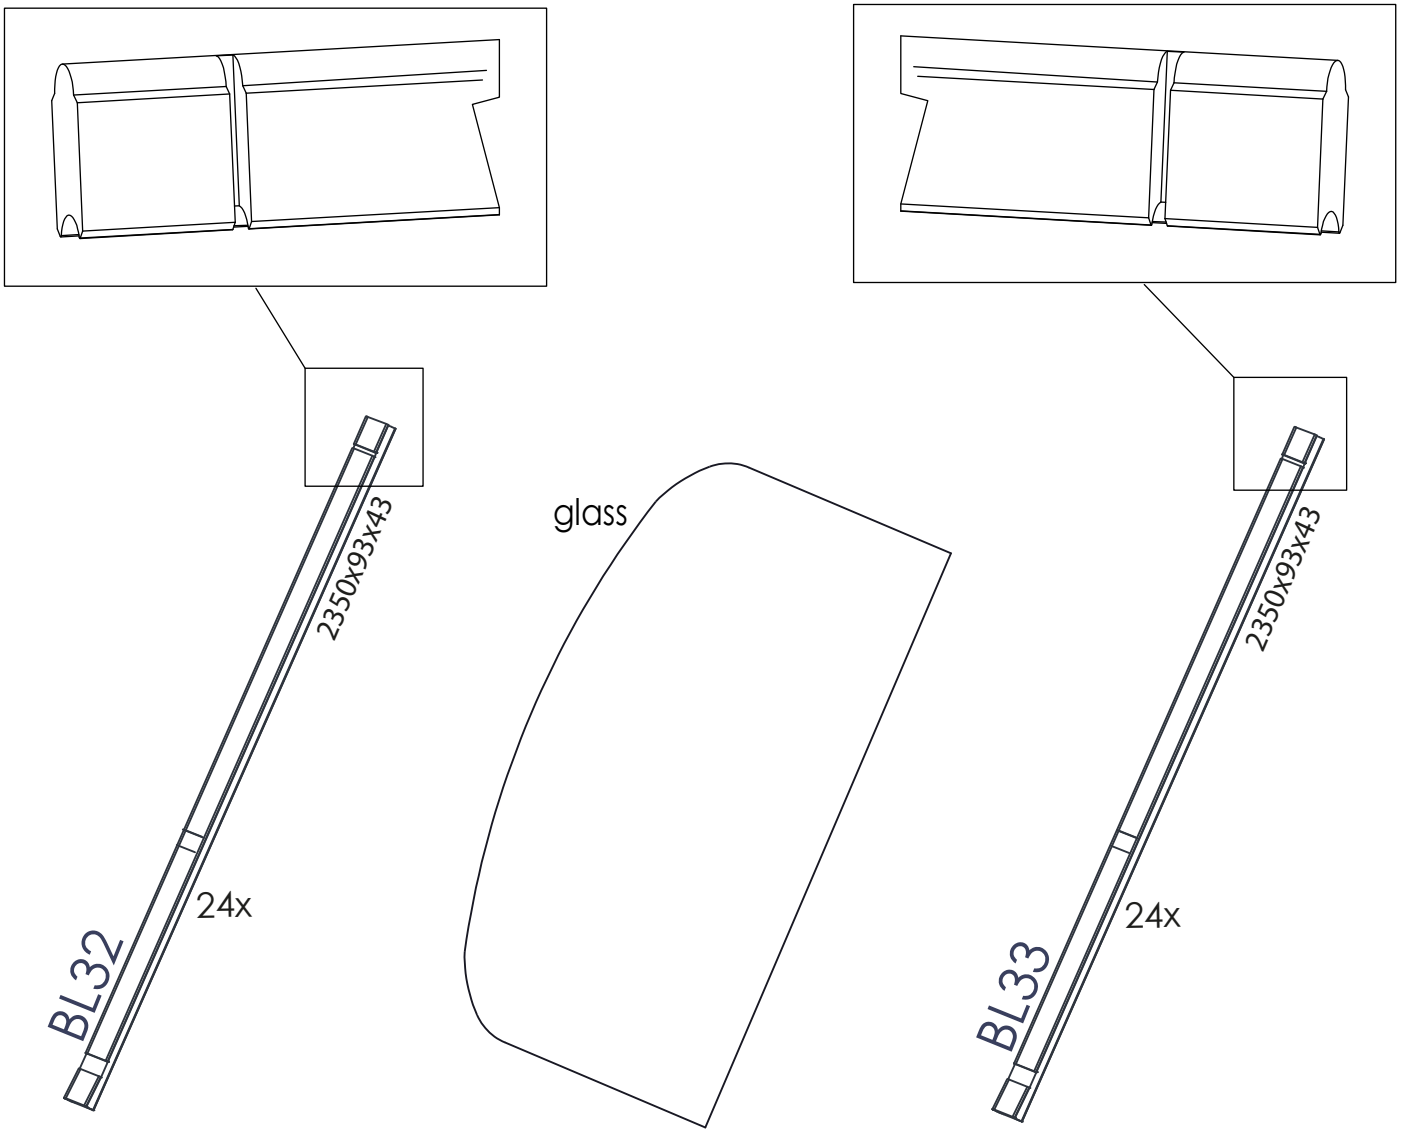


WOOD-FIRED VERSION: THE STOVE AND FLUE SET

ELECTRIC VERSION: THE HEATER ON THE RIGHT


for installation see **Appendix 3**

G12




1x

G7

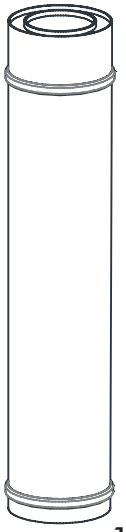


1x

G8

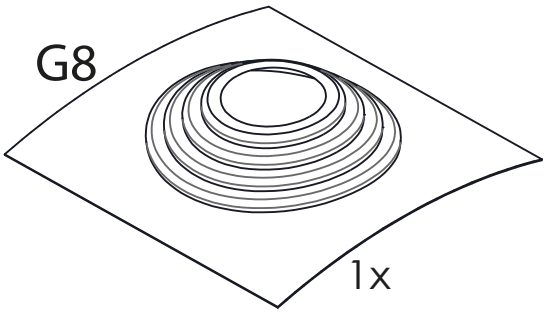


1x

G9

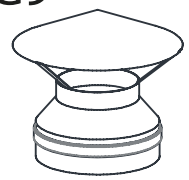


1x

G6

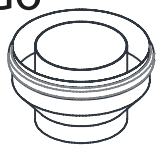


1x

Q2

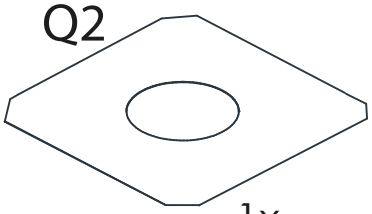


1x

Q5

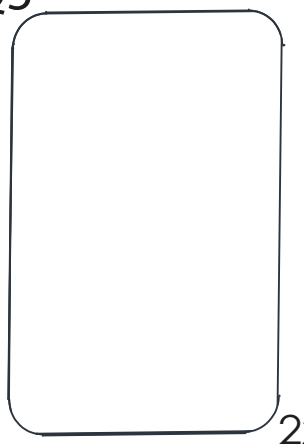


2x

Q4

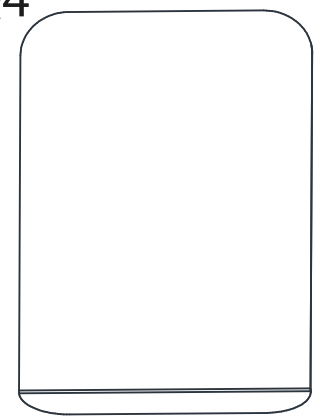


1x

ELECTRIC STOVE

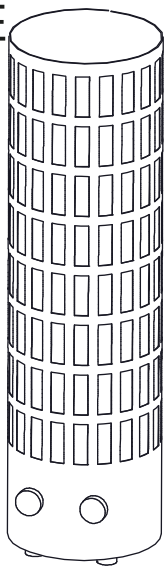


1x

G1

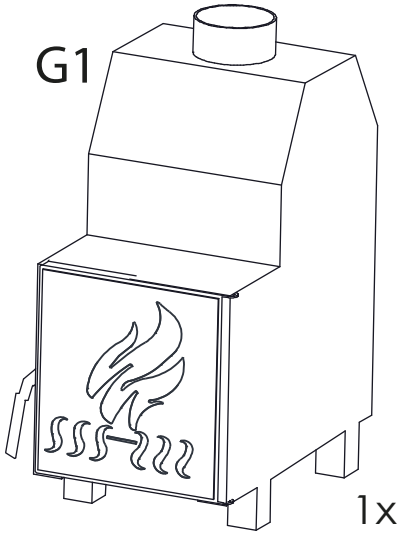


1x

G4

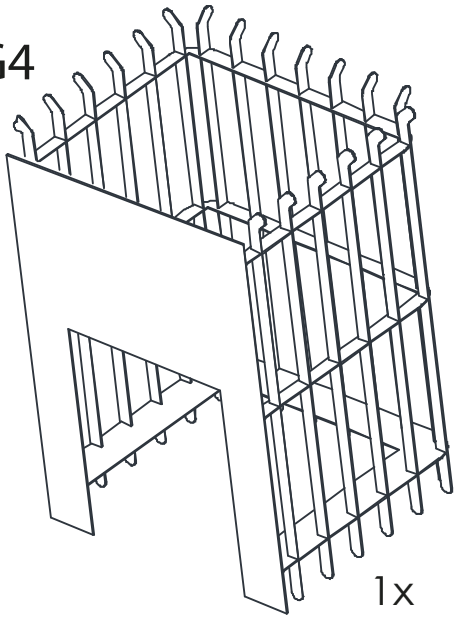

1x


G5

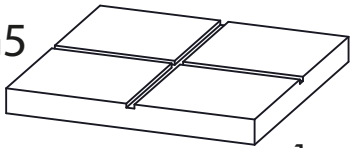



- for G1 only


1x

L1950 - 4

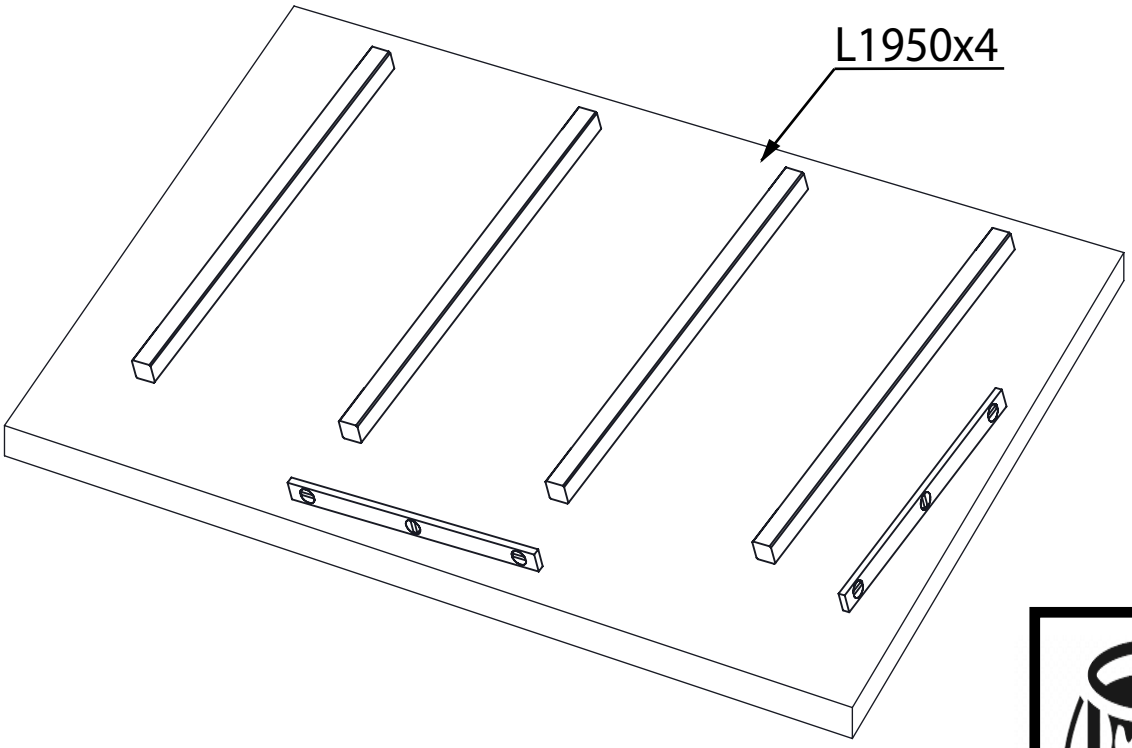


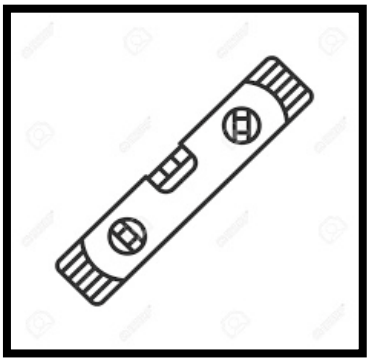

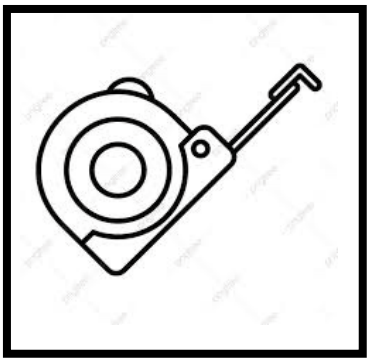


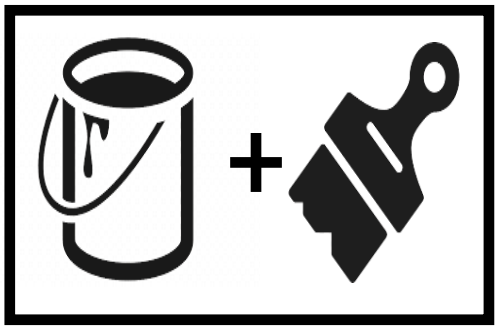


ENTER

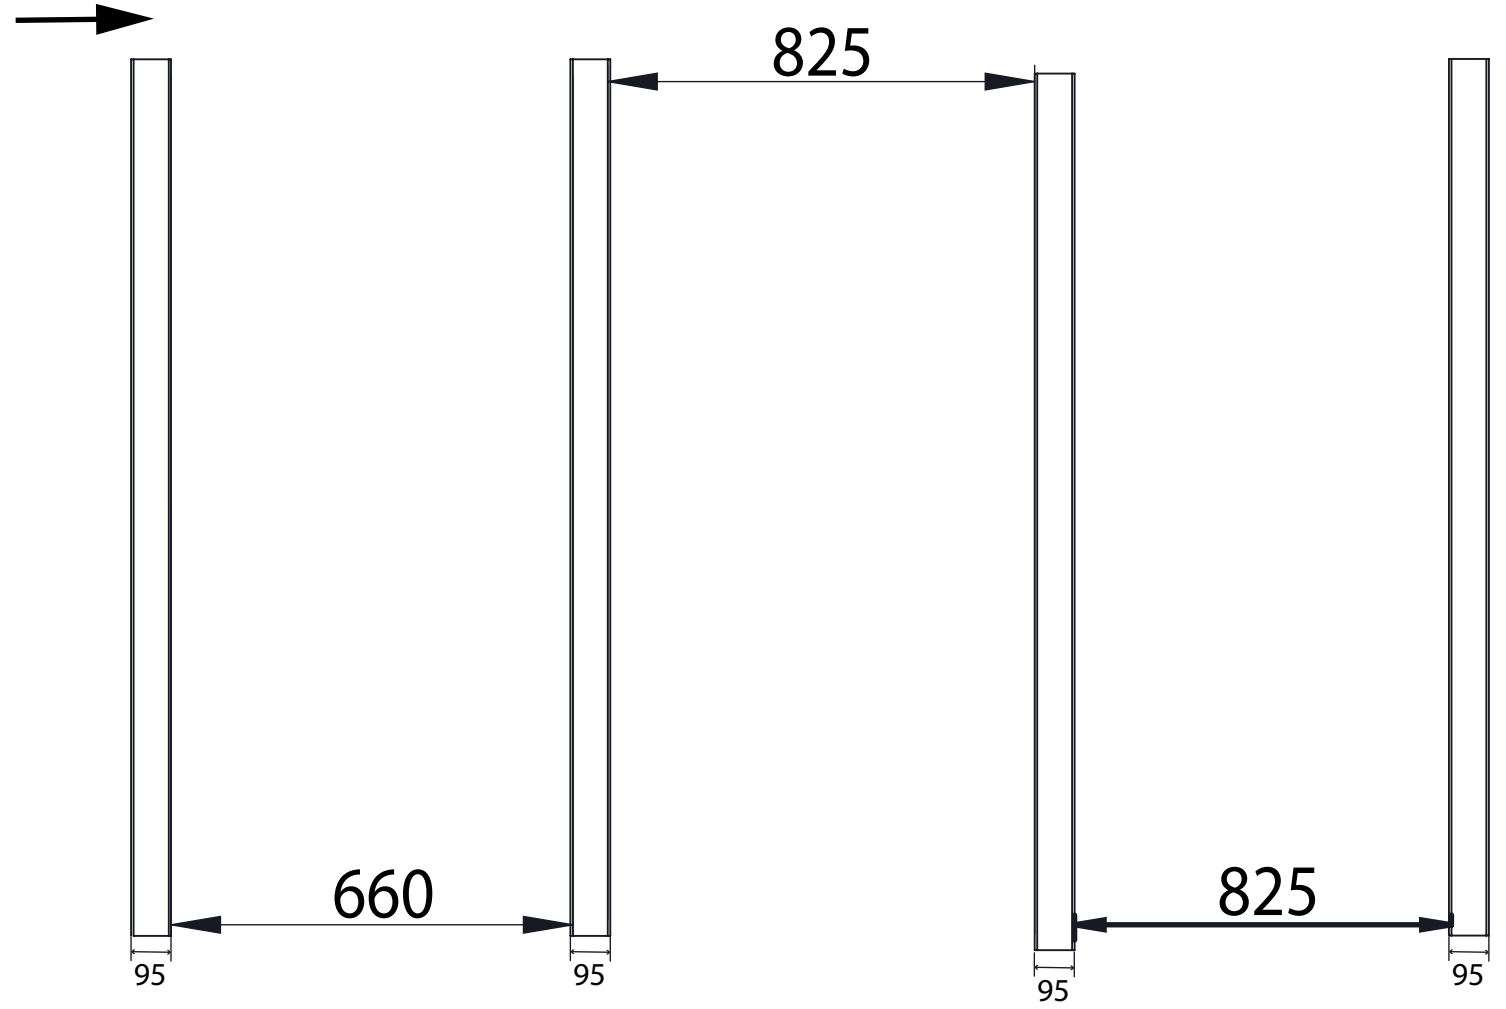



B31 - 1
B32 - 9
B33 - 9
4570 - 76
45120 - 90°

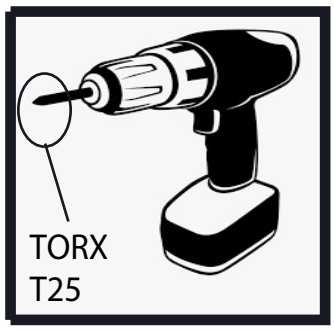


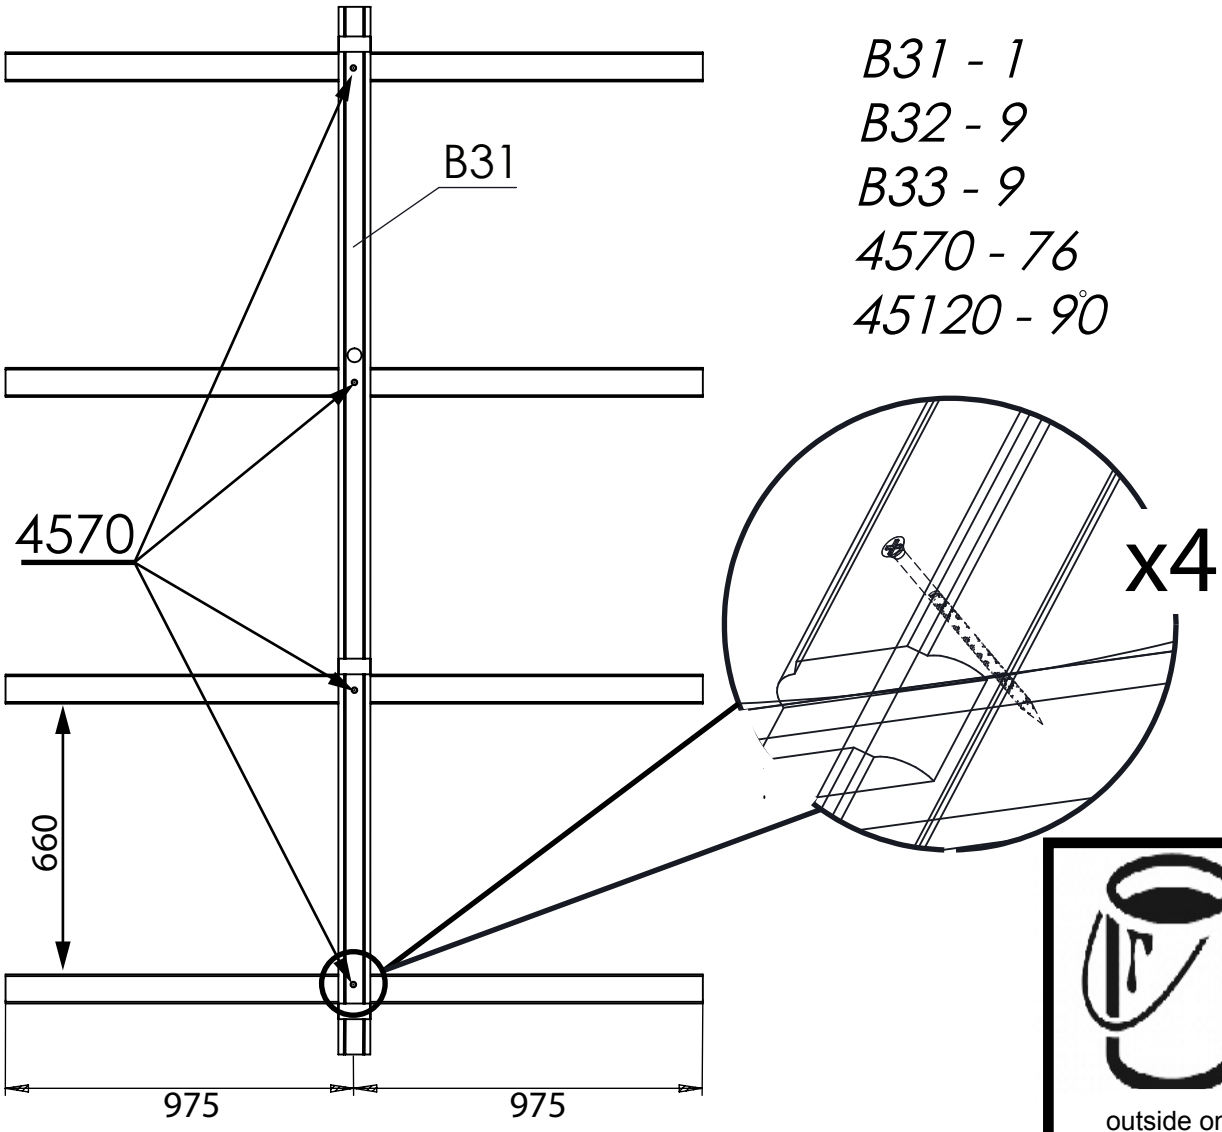



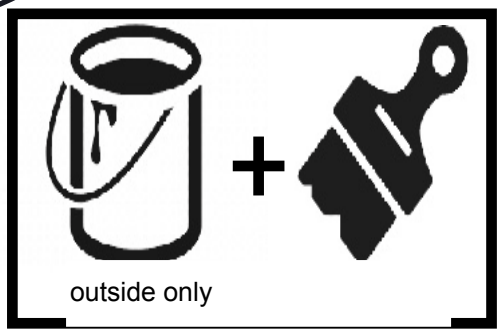

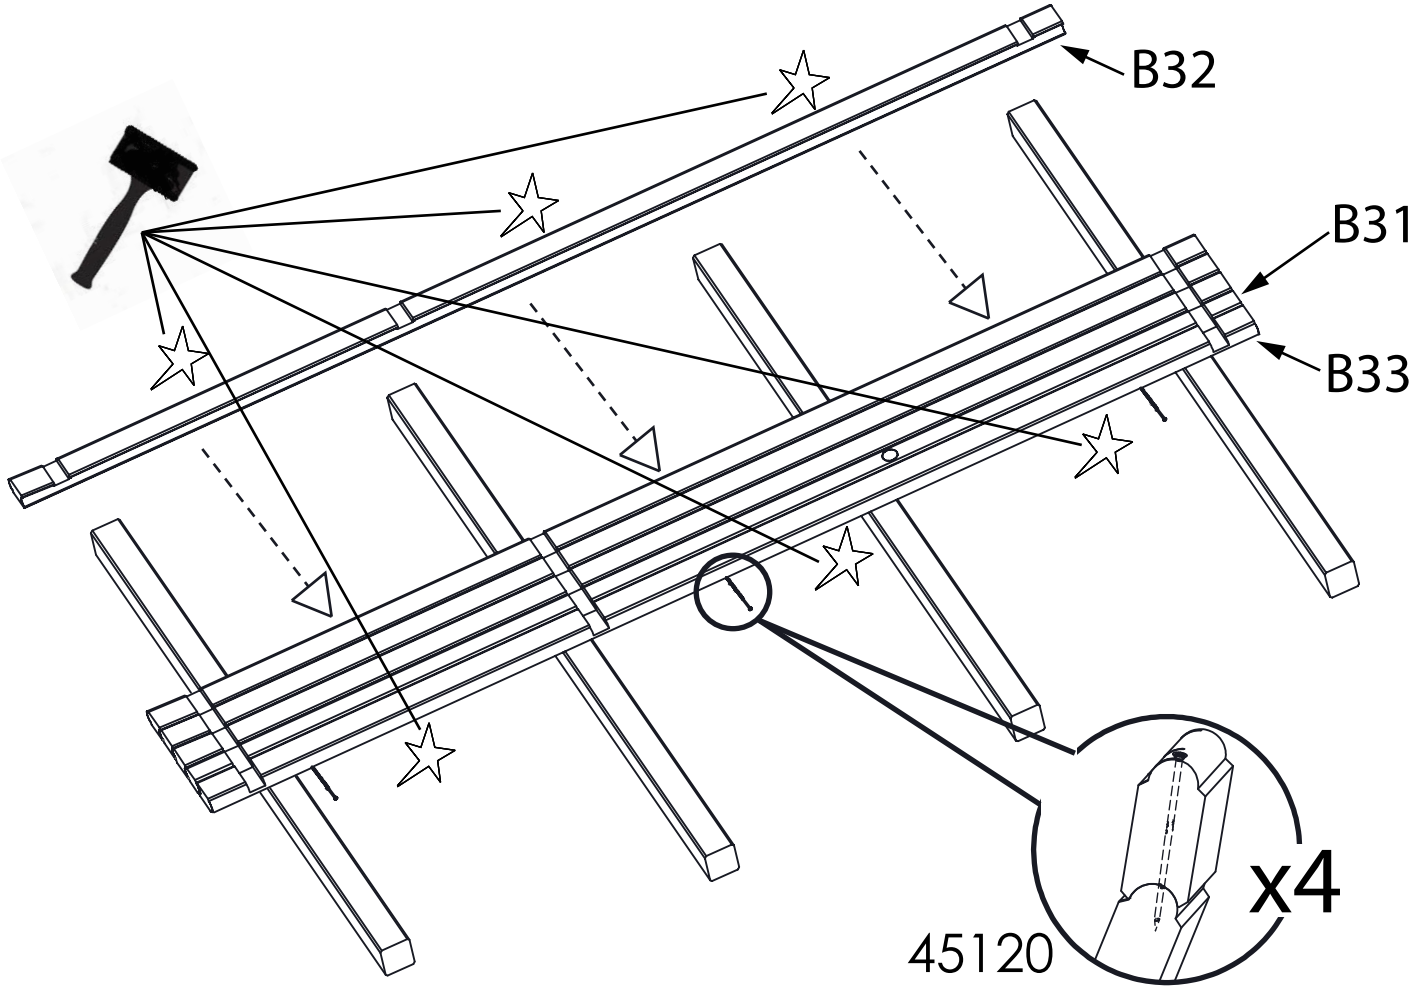


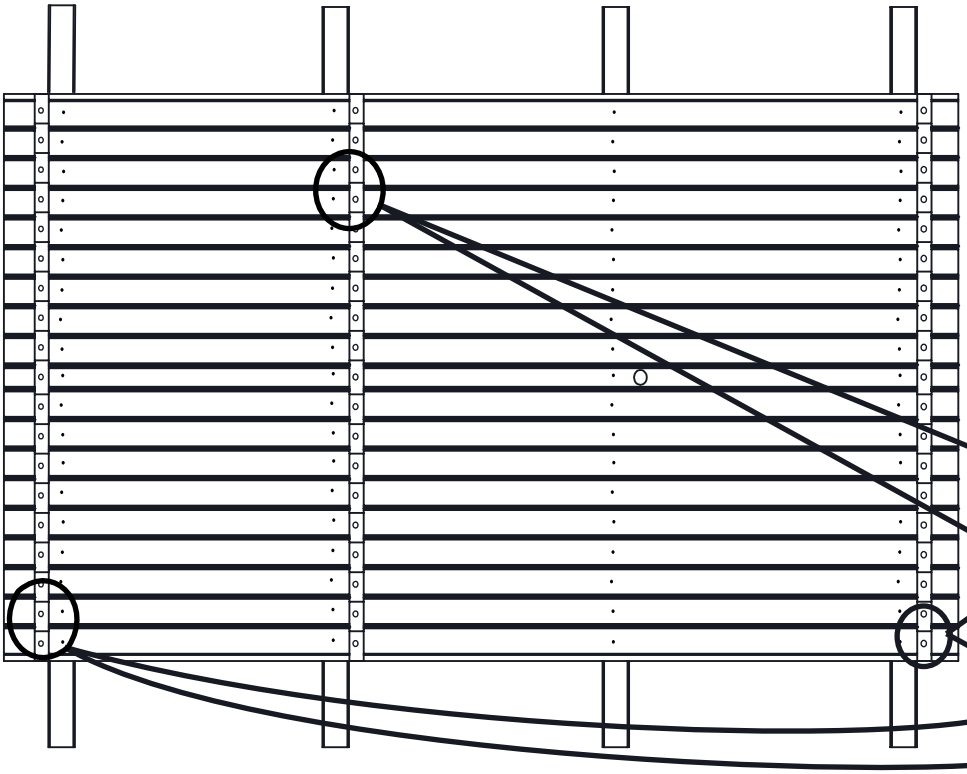





x57

C41 - 2
C43 - 1
4570 - 6

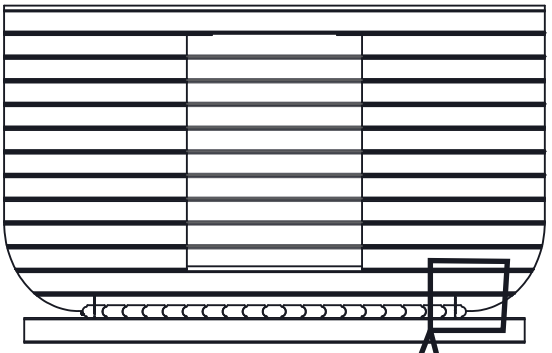


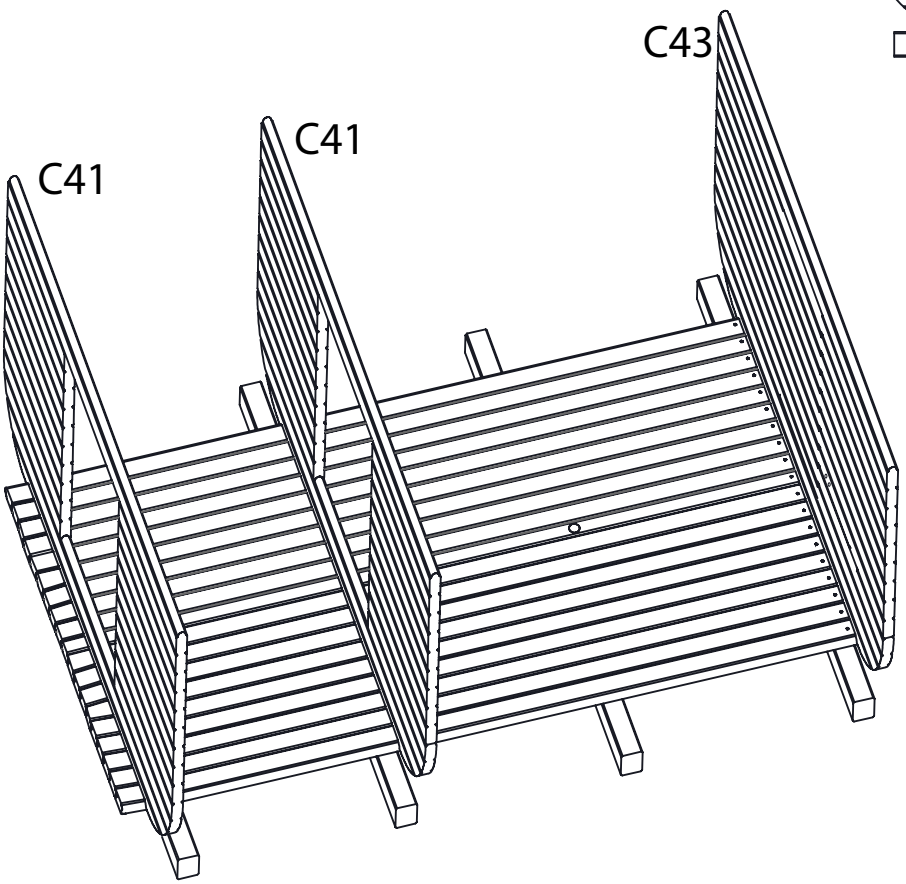

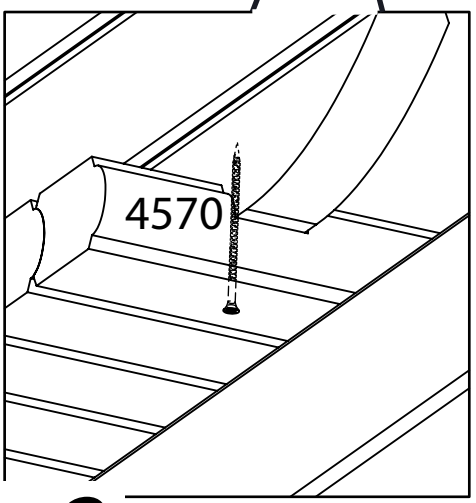


x2

C42 - 2
C44 - 1
B32 - 14
B33 - 14
4570 - 90
45120 - 112

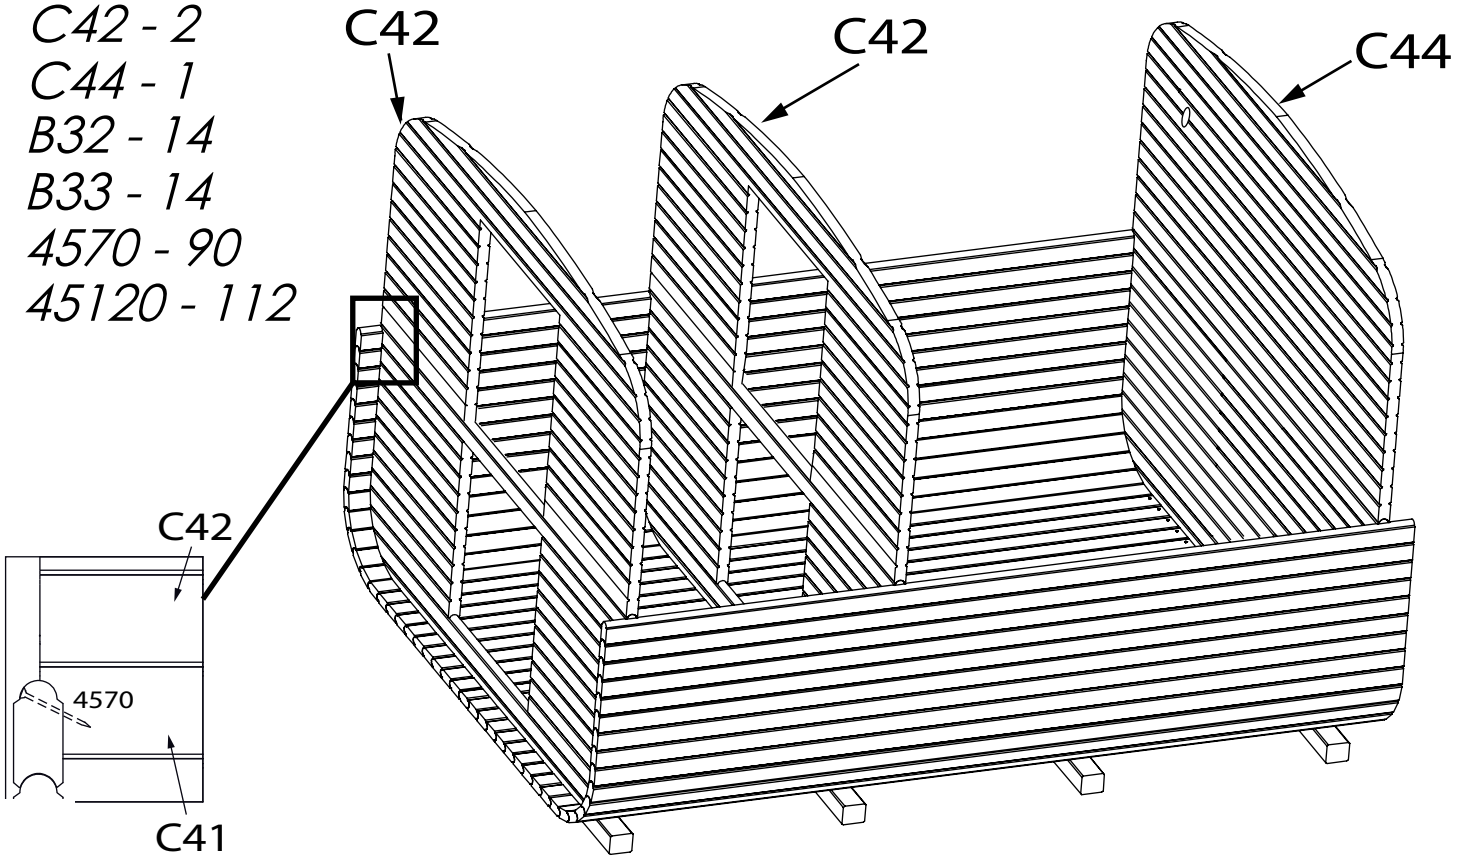



for panorama installing see **Appendix 2**


B32 - 25
B33 - 25
4570 - 150
45120 - 200

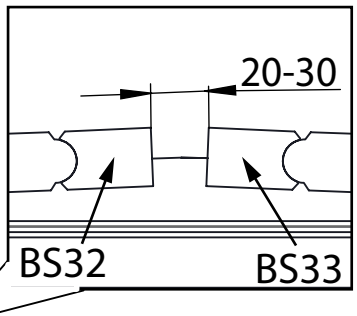





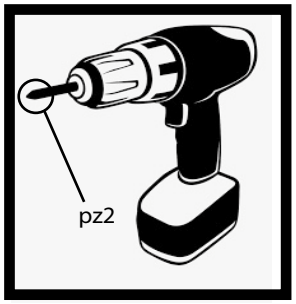

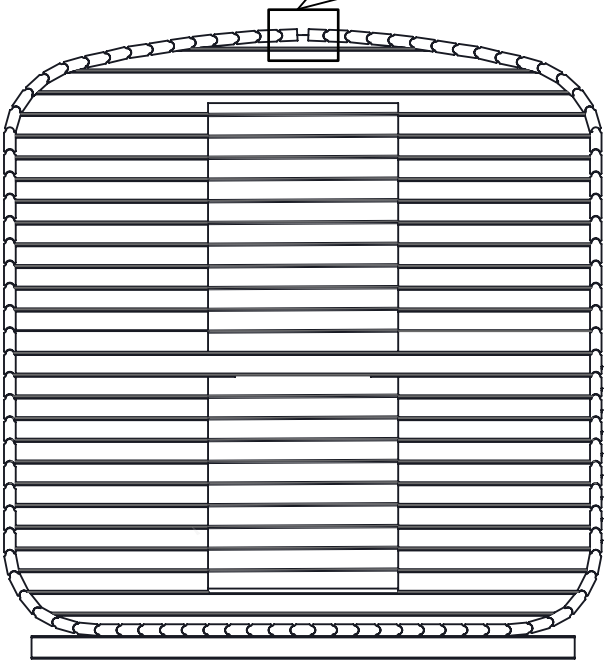

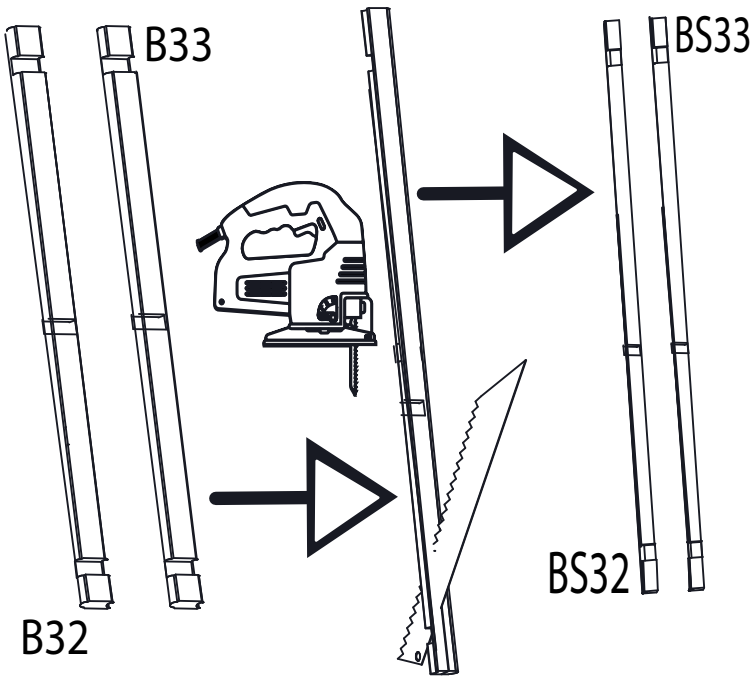


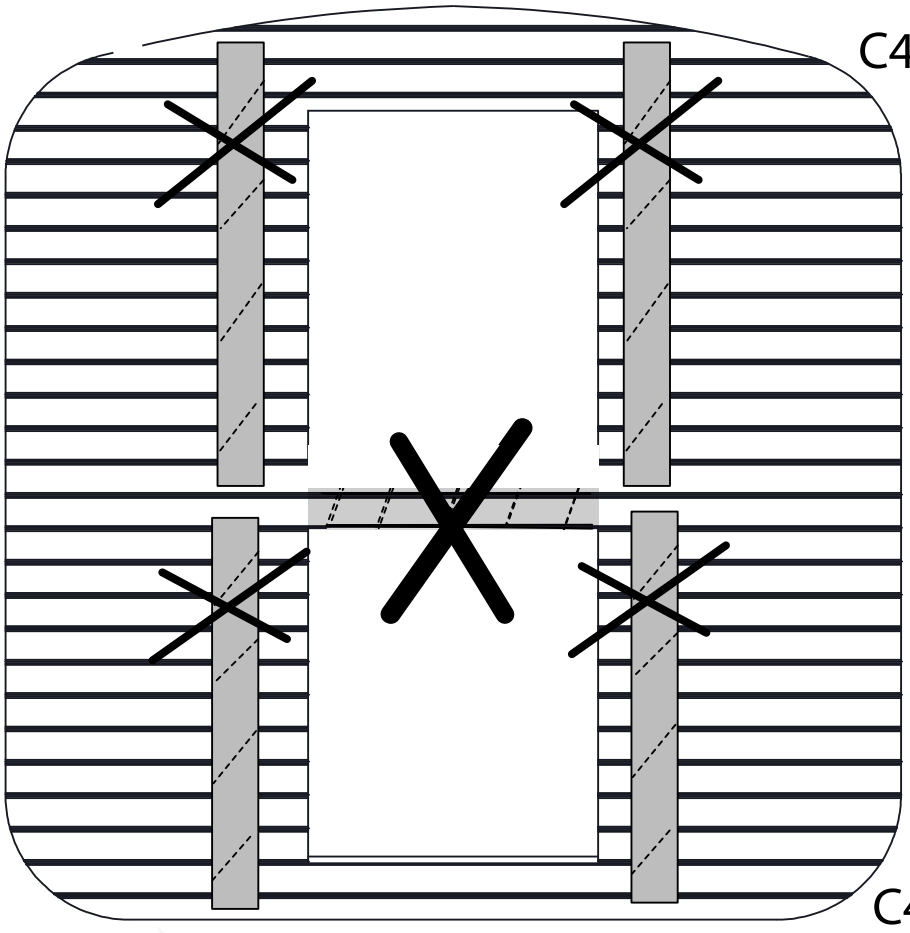


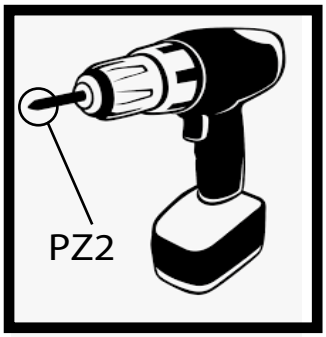




Q1 - 1
4345 - 4

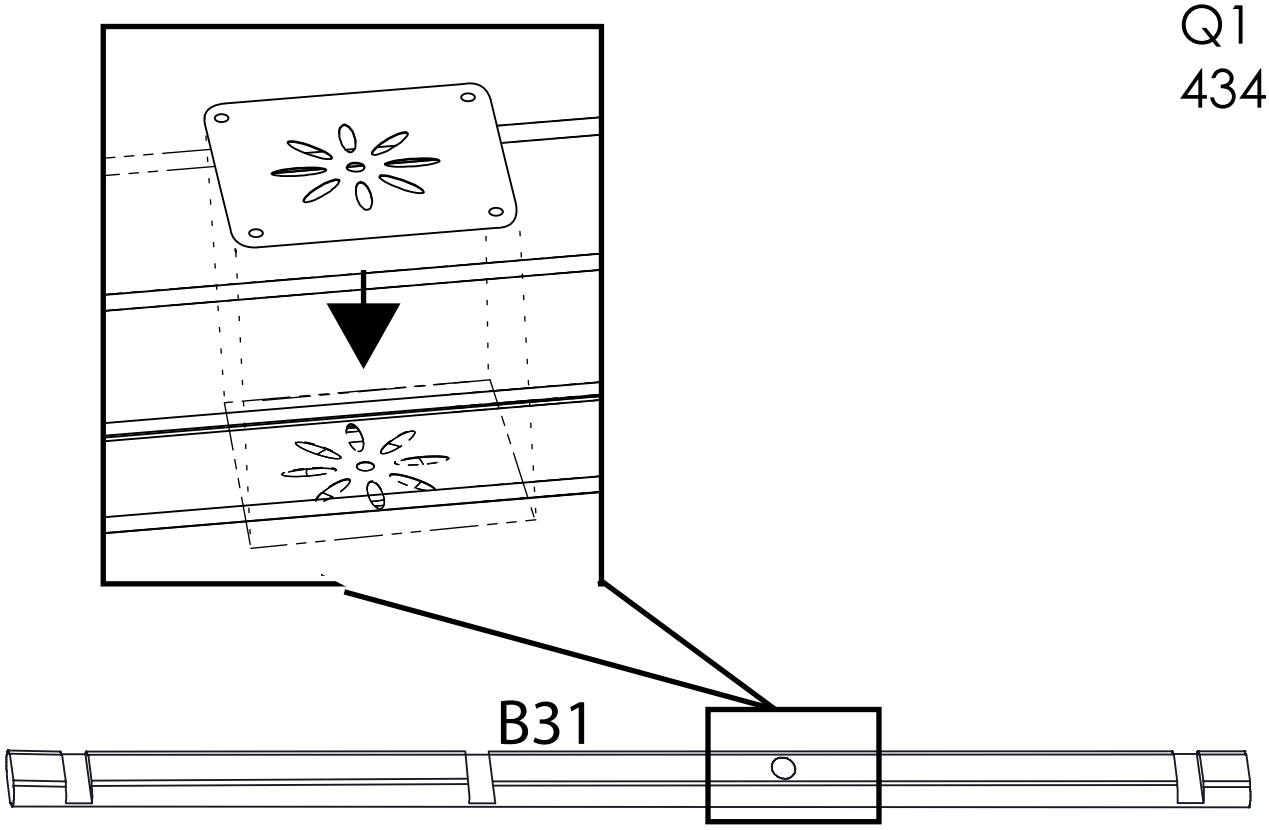


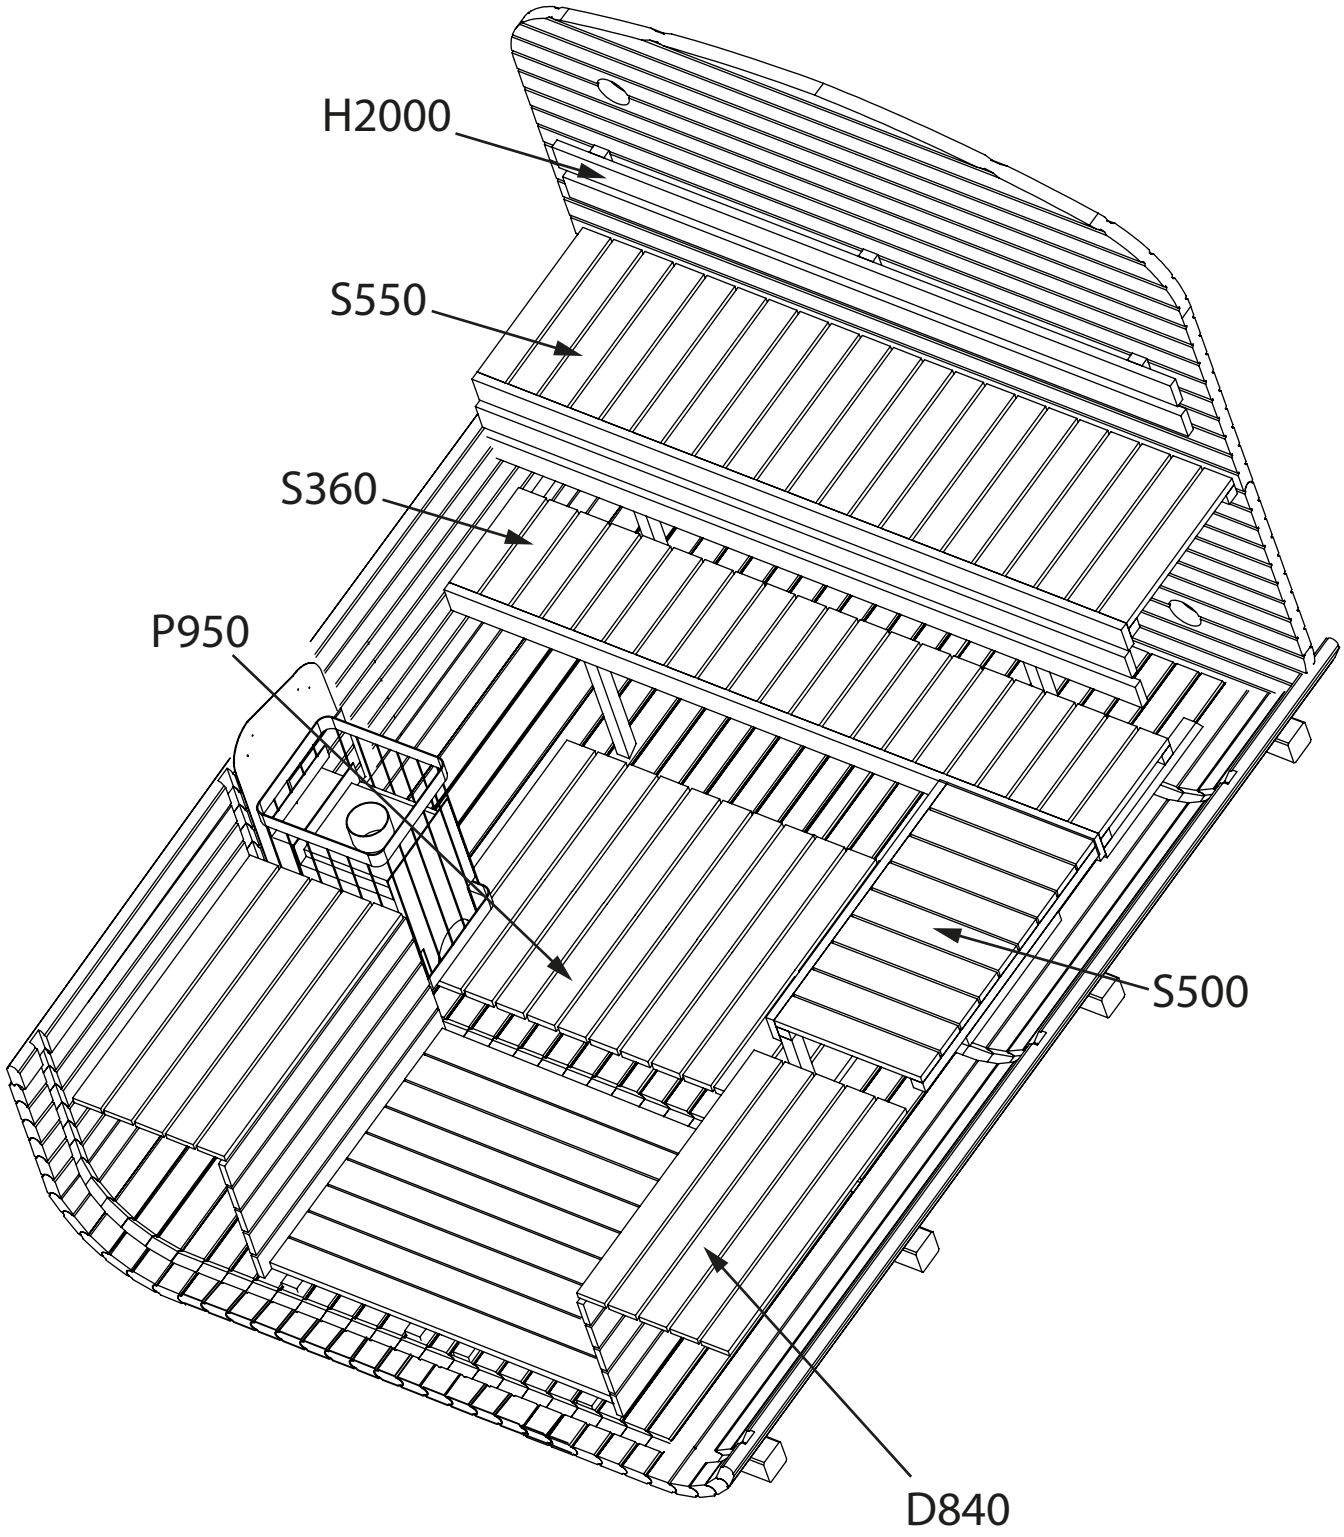

H2000
S550
S360
P950
S500
D840

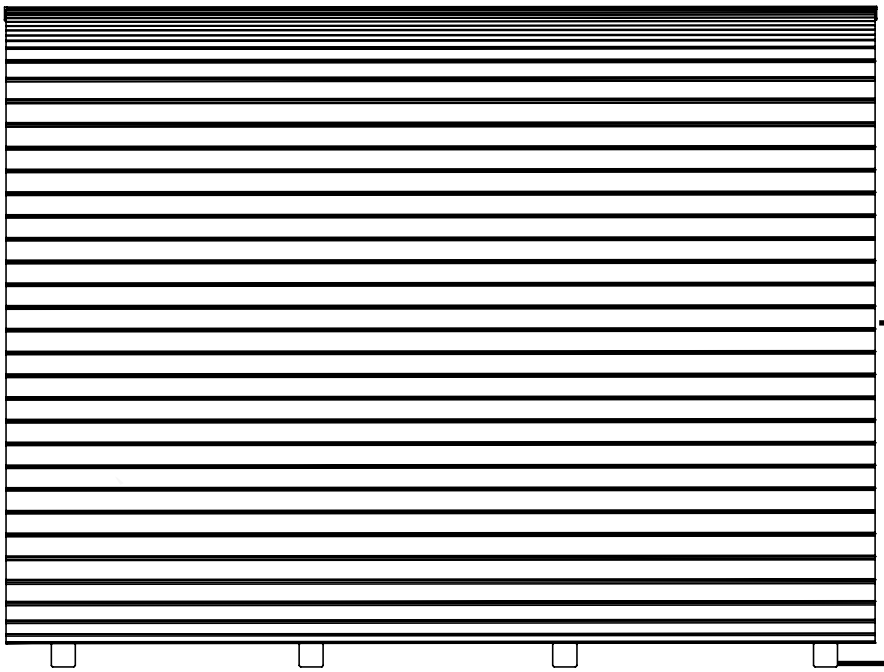




SET3

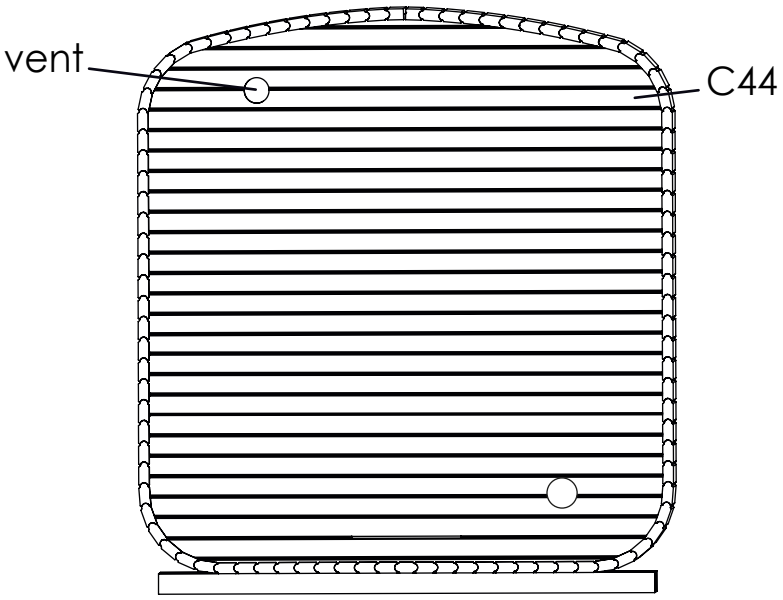


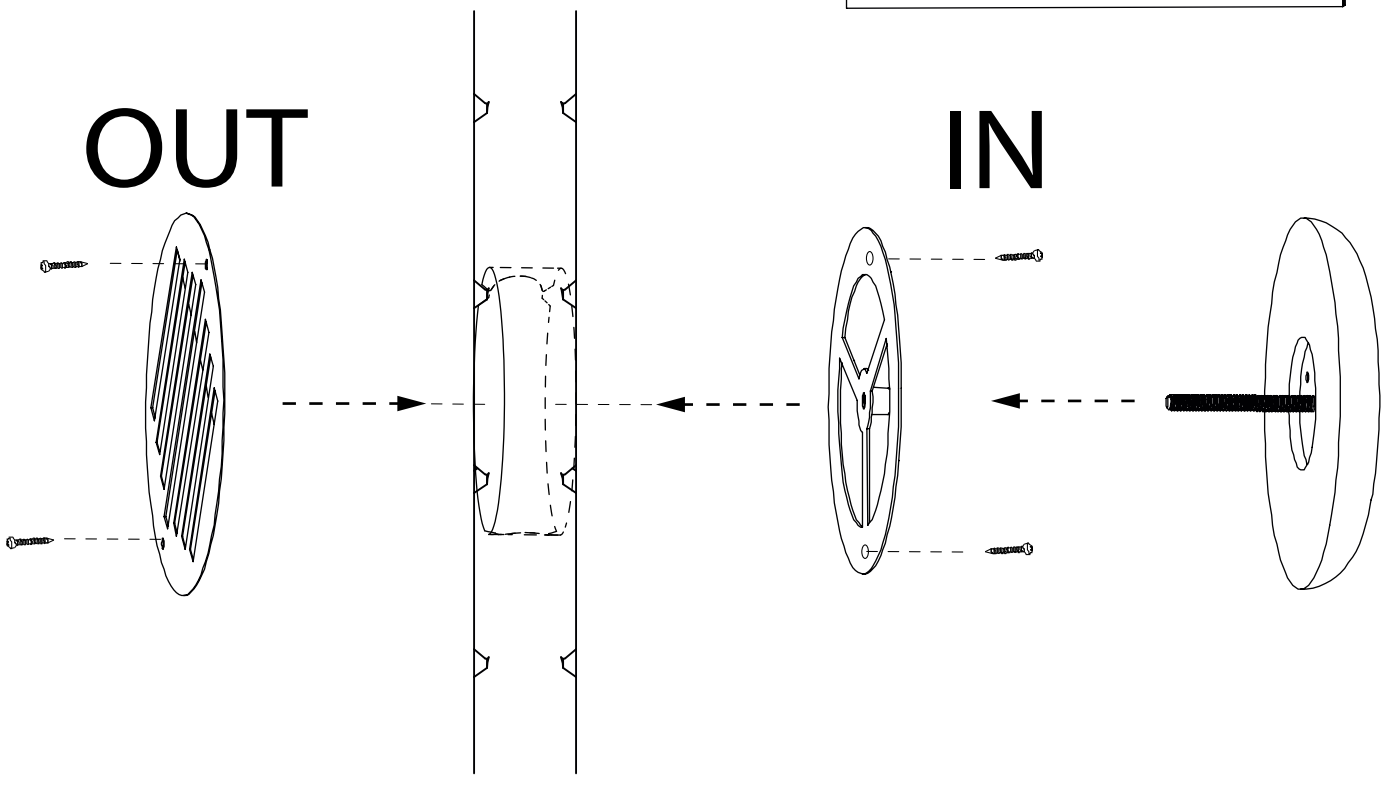



D840 - 2
R750 - 2
R520 - 8
W850 - 10
80401 - 4
4570 - 68
4460 - 8
4216 - 16

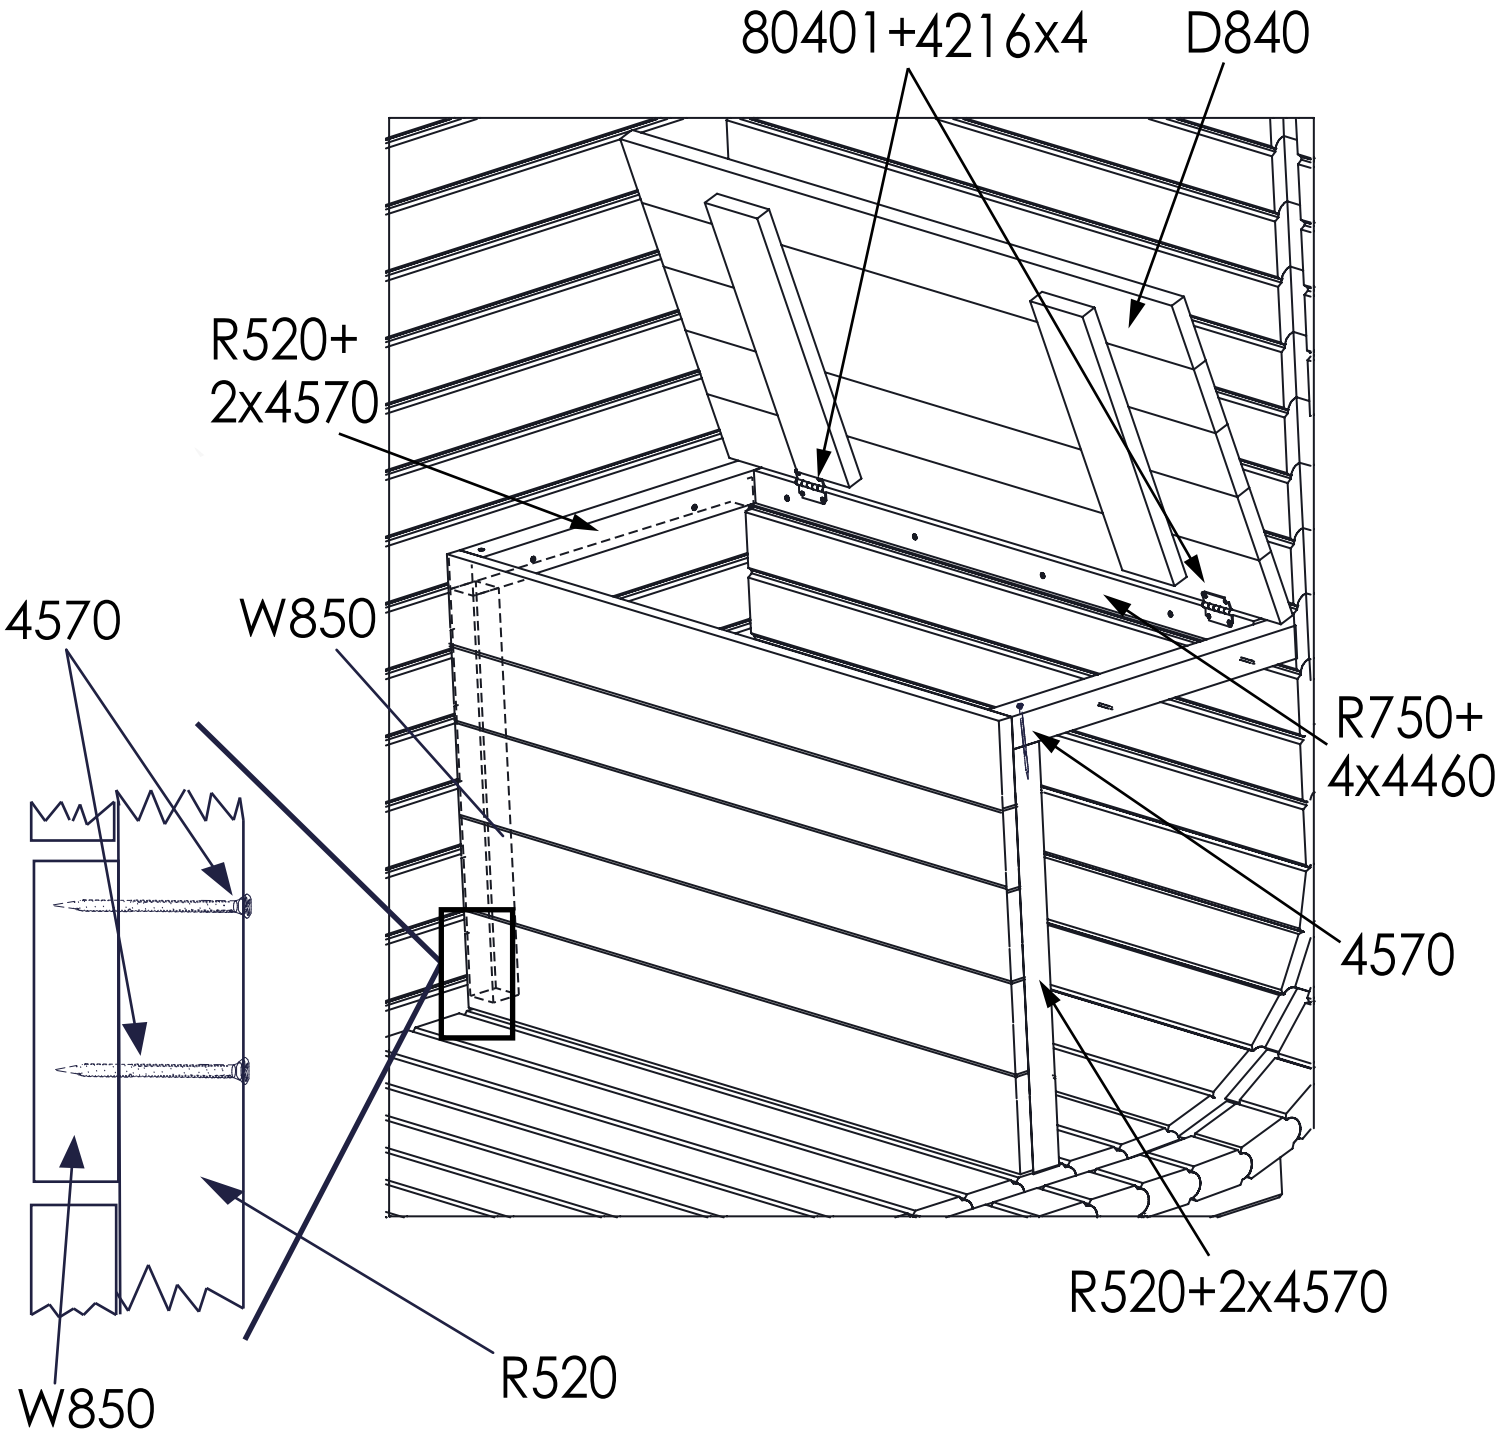


H2000 - 1
S550 - 1
R520 - 4
R1000 - 2
4570 - 16
4460 - 3

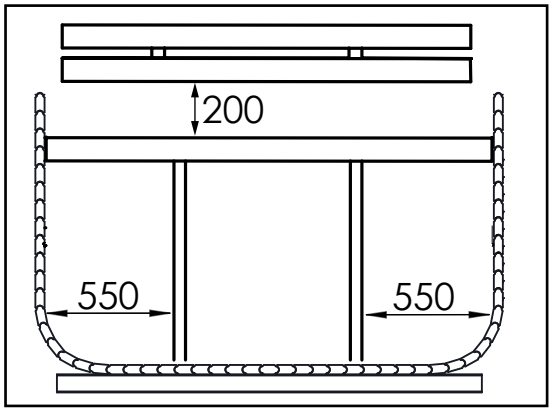


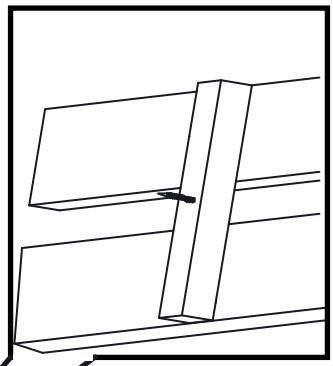


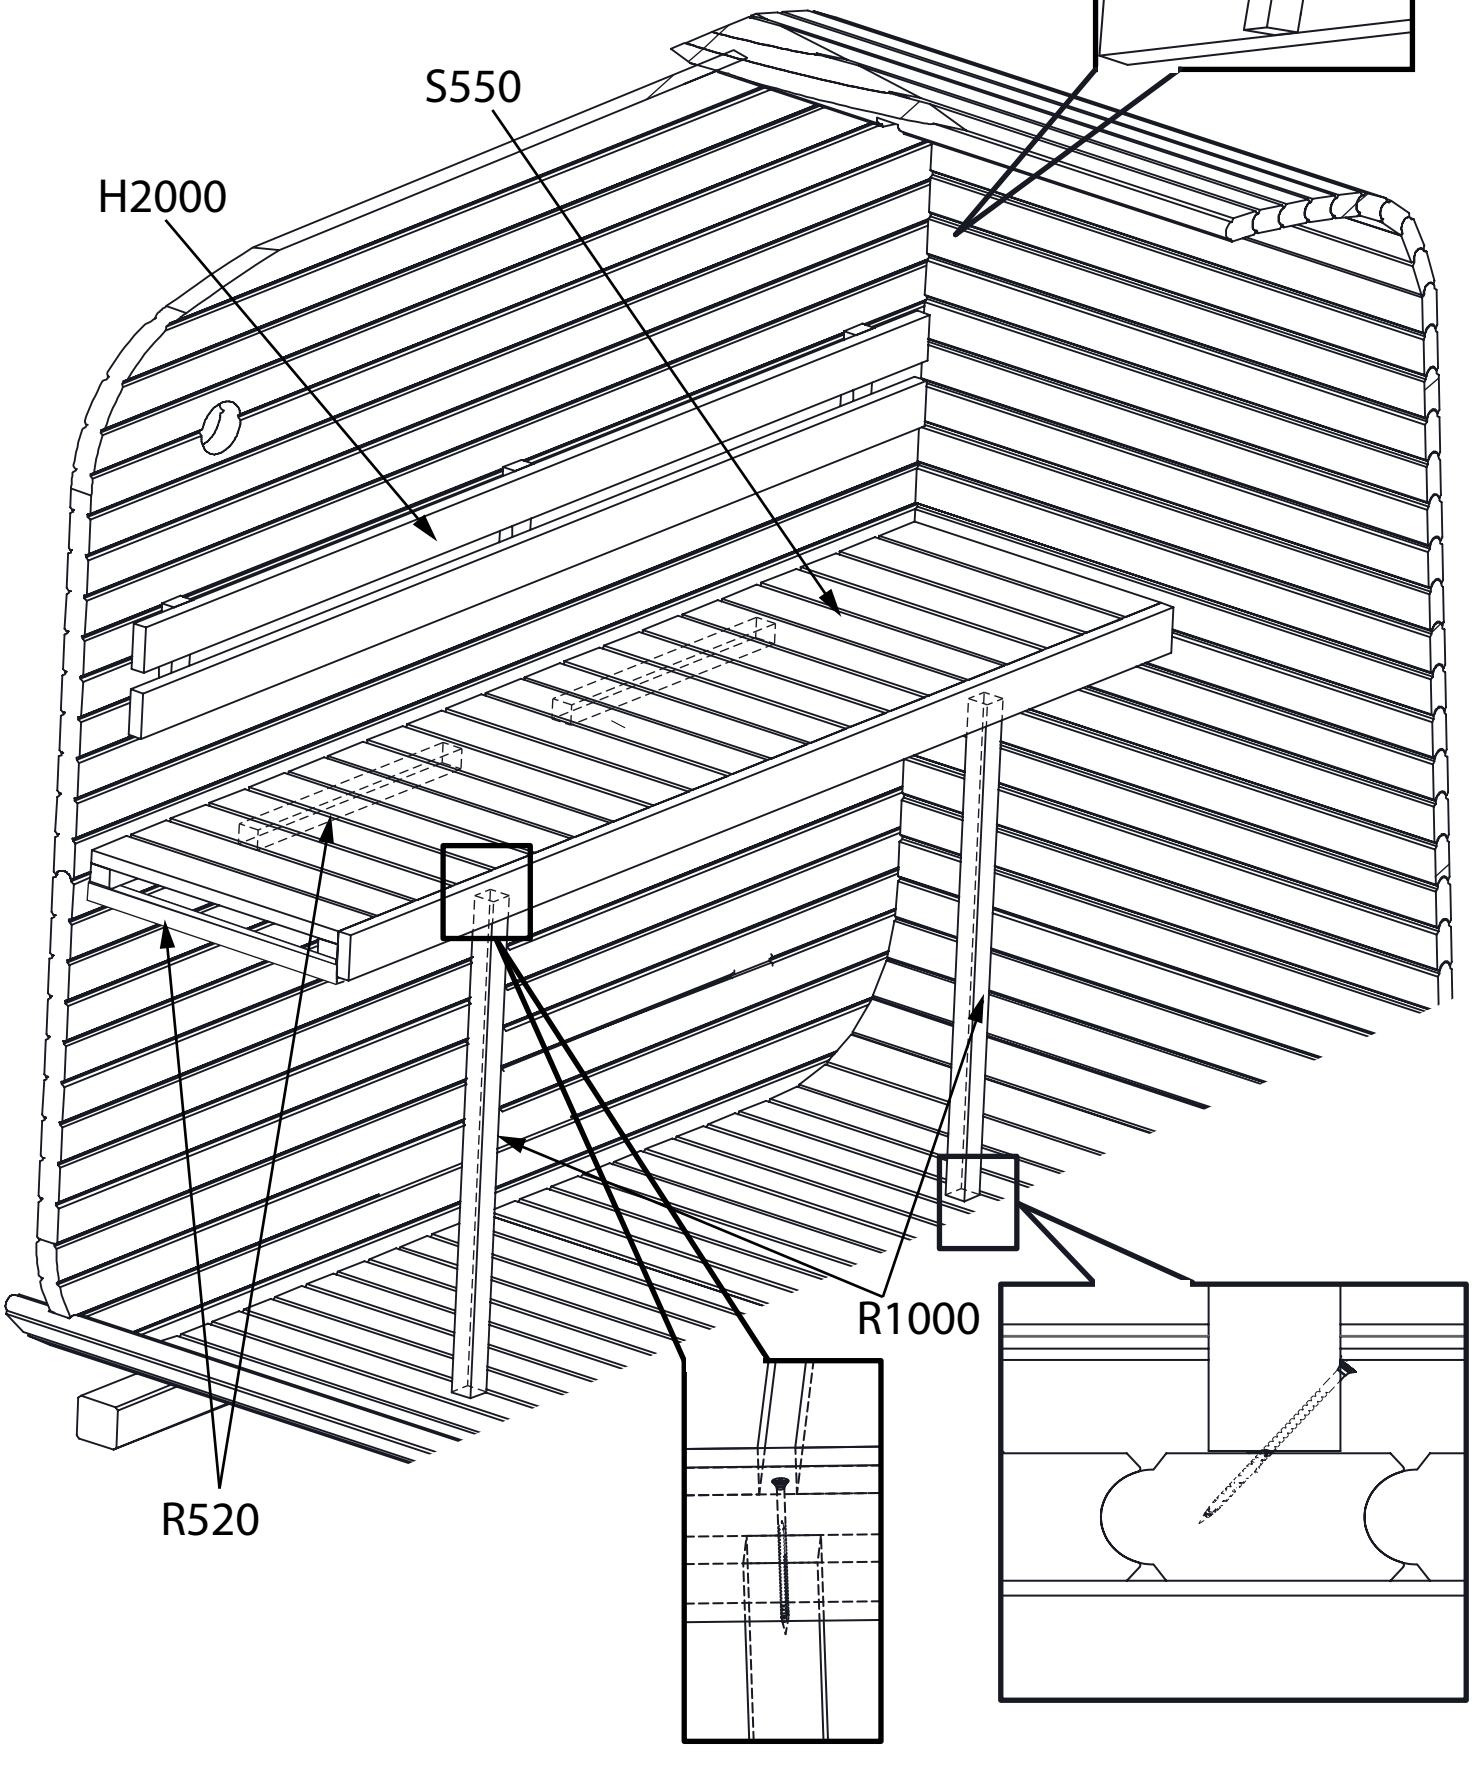


S360 - 1
W2000 - 2
R520 - 6
4570 - 24

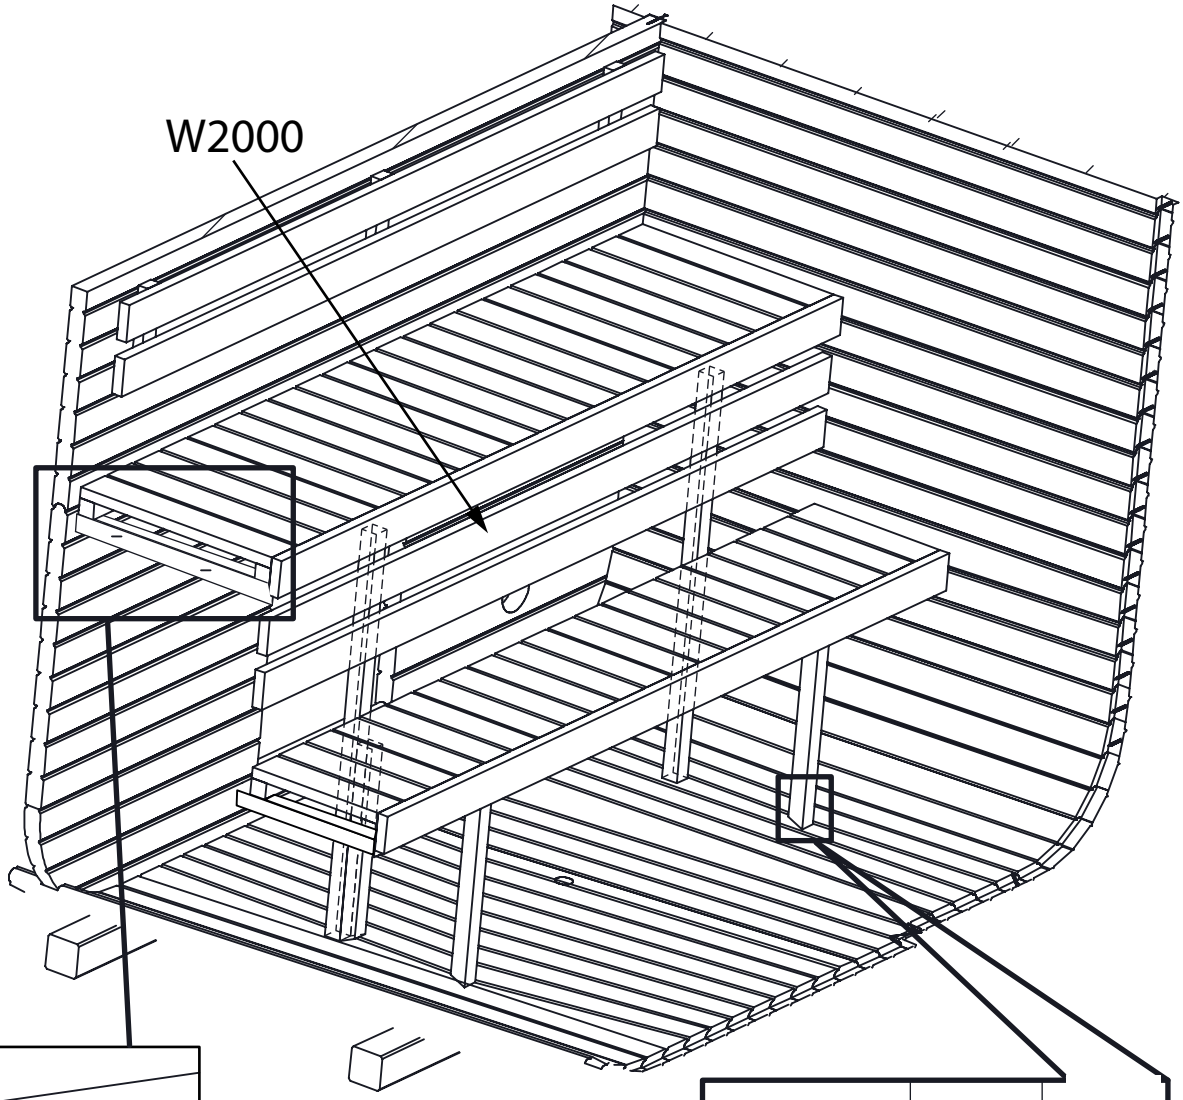

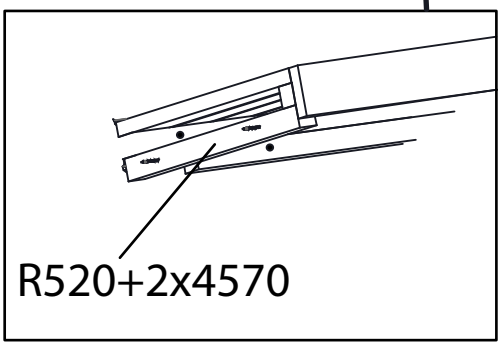


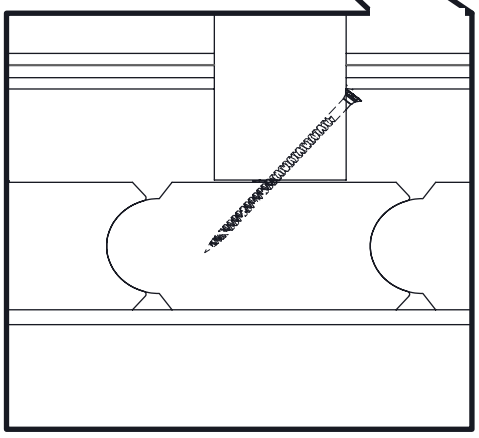


side view

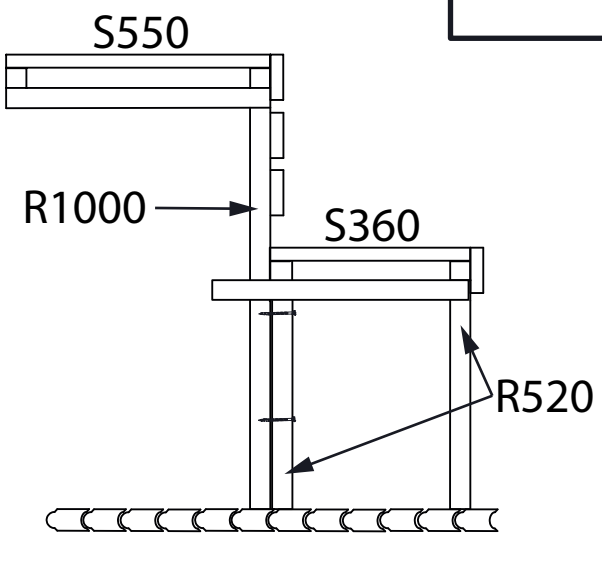



S500 - 1
R520 - 5
4570 - 16

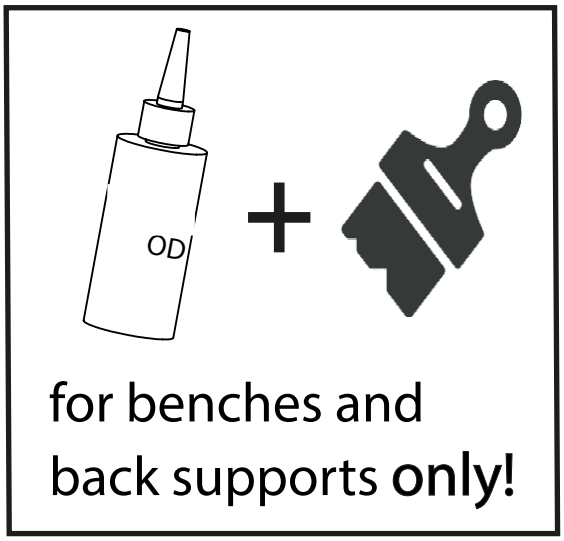


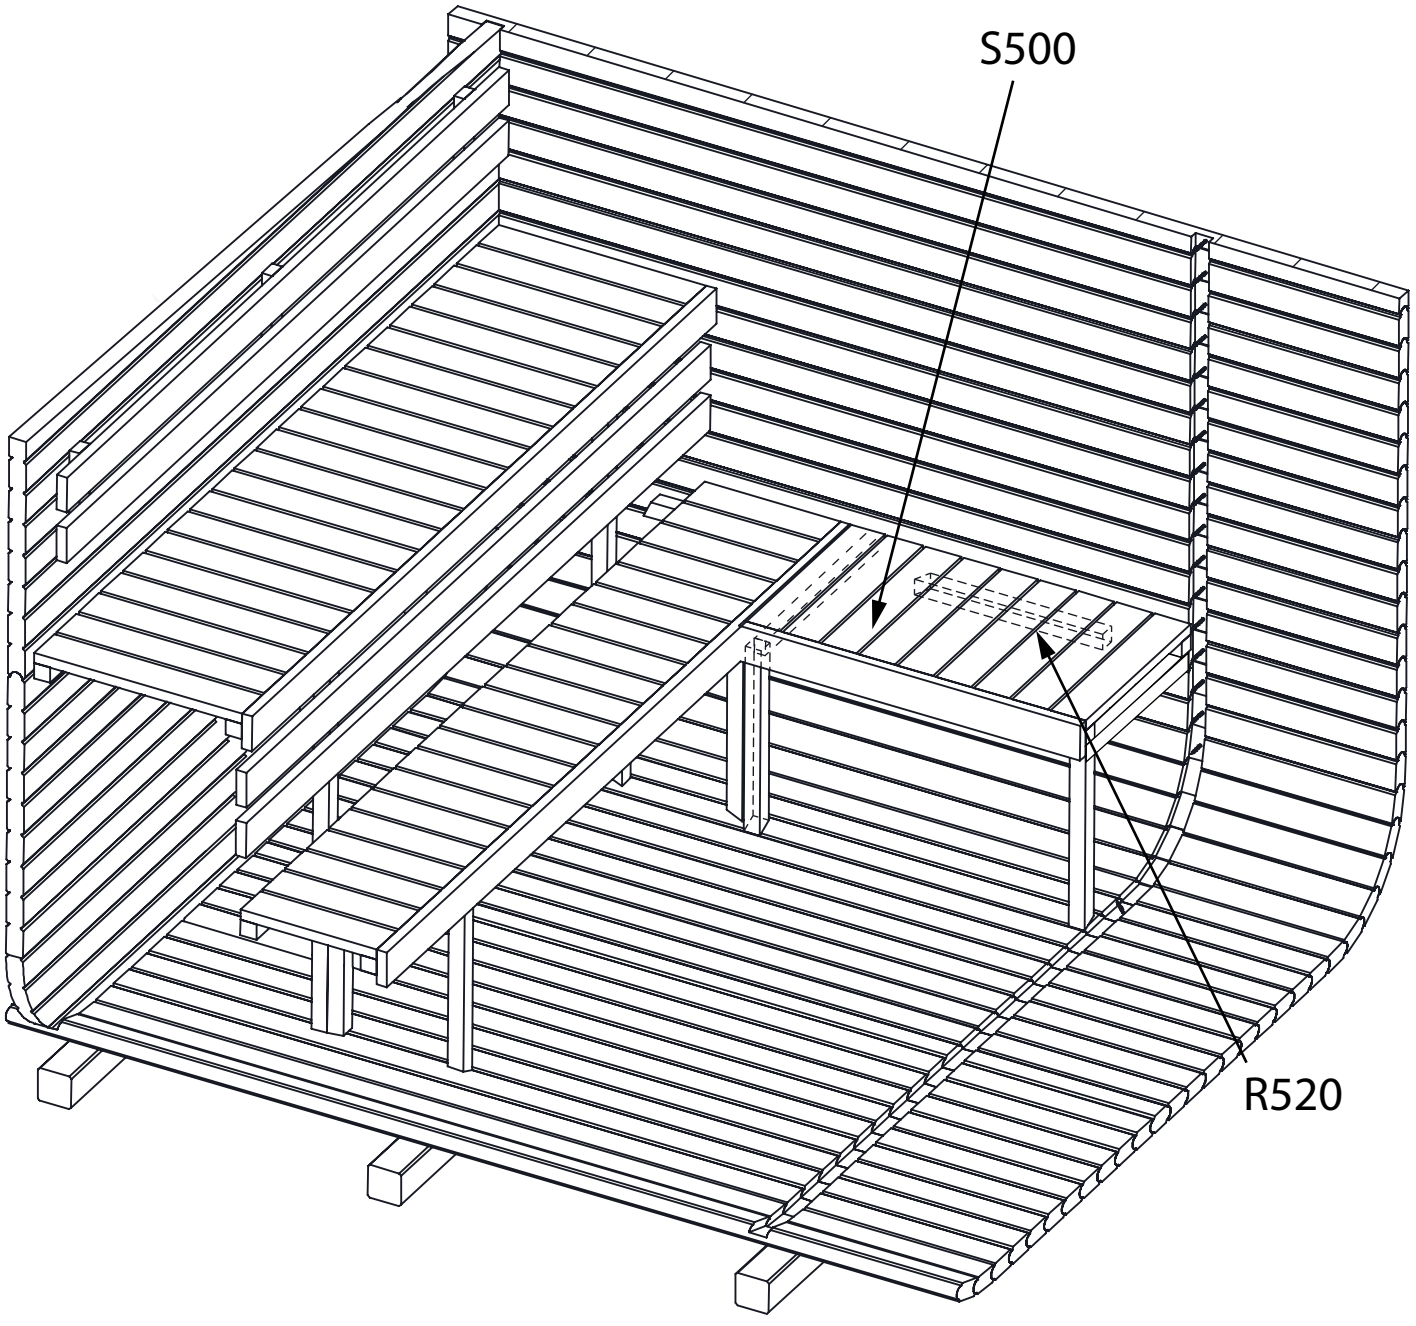



W850 - 1
W1800 -1
W80 - 4
4345 - 22

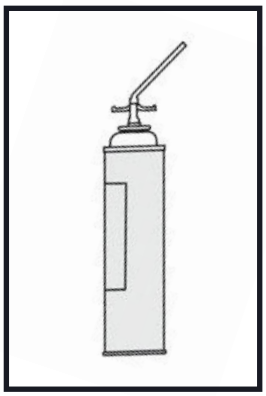

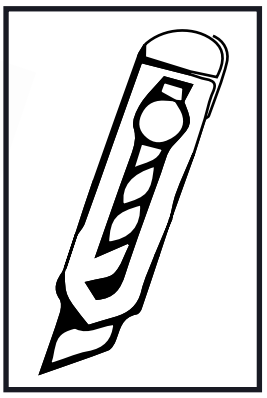

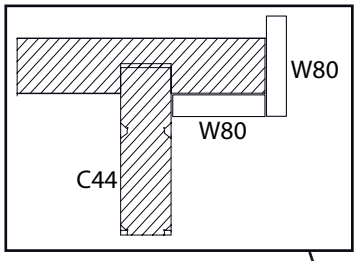


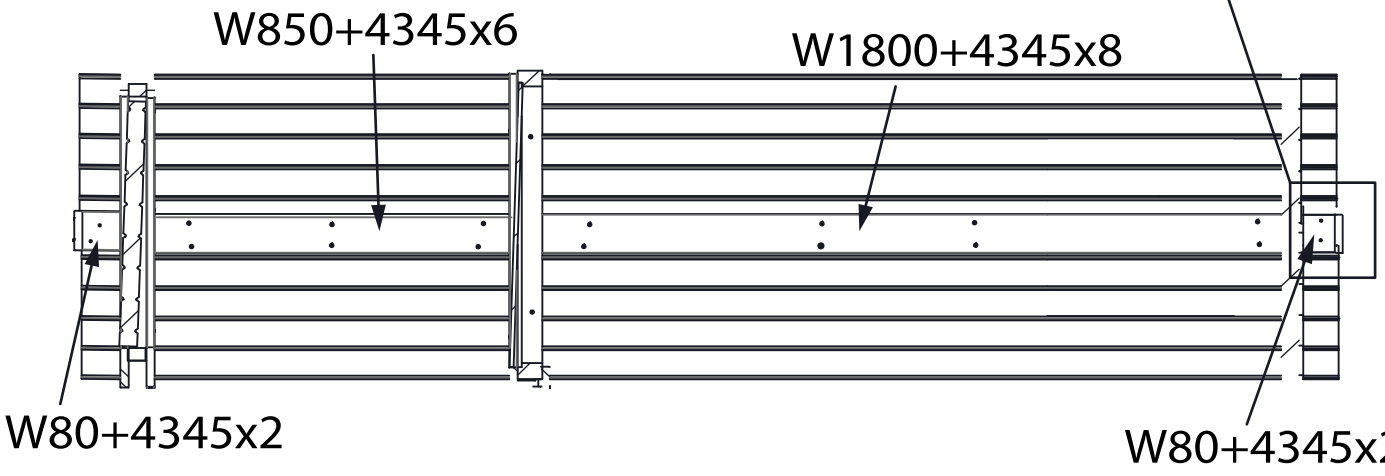


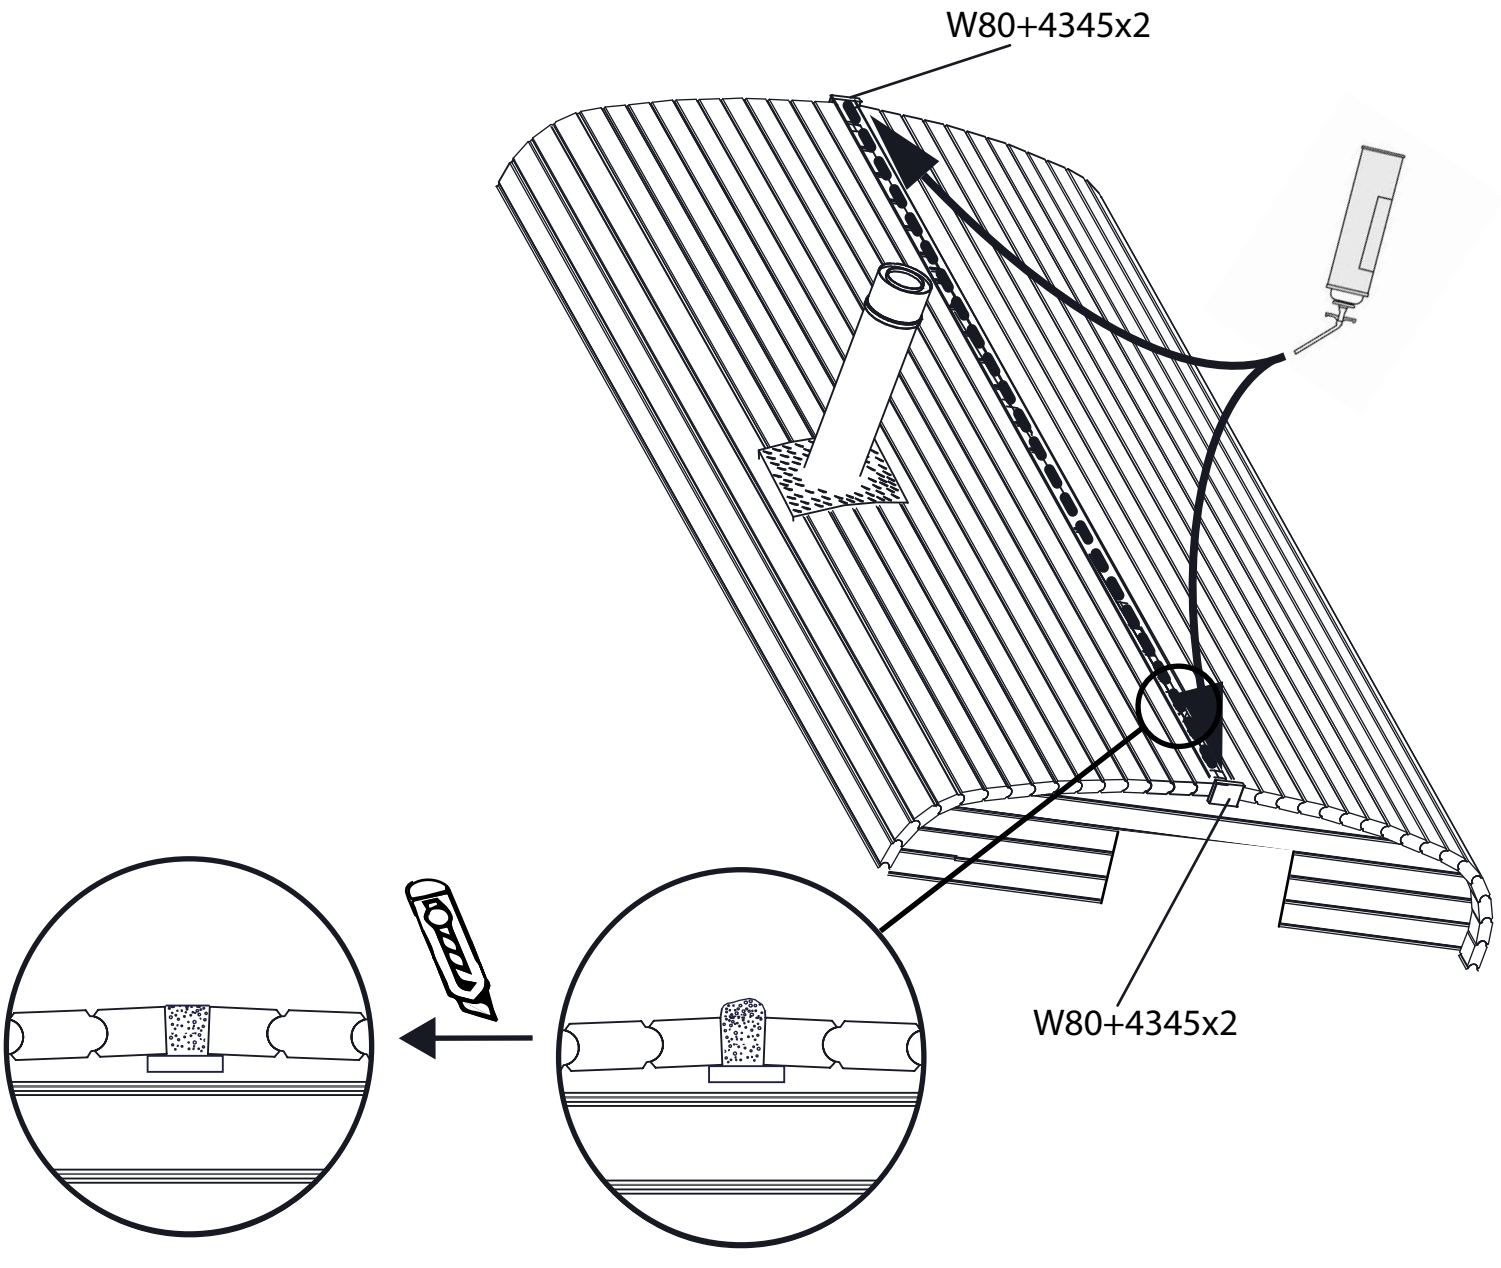


L60 - 4
K60 - 8
2012 - 8
732012 - 4



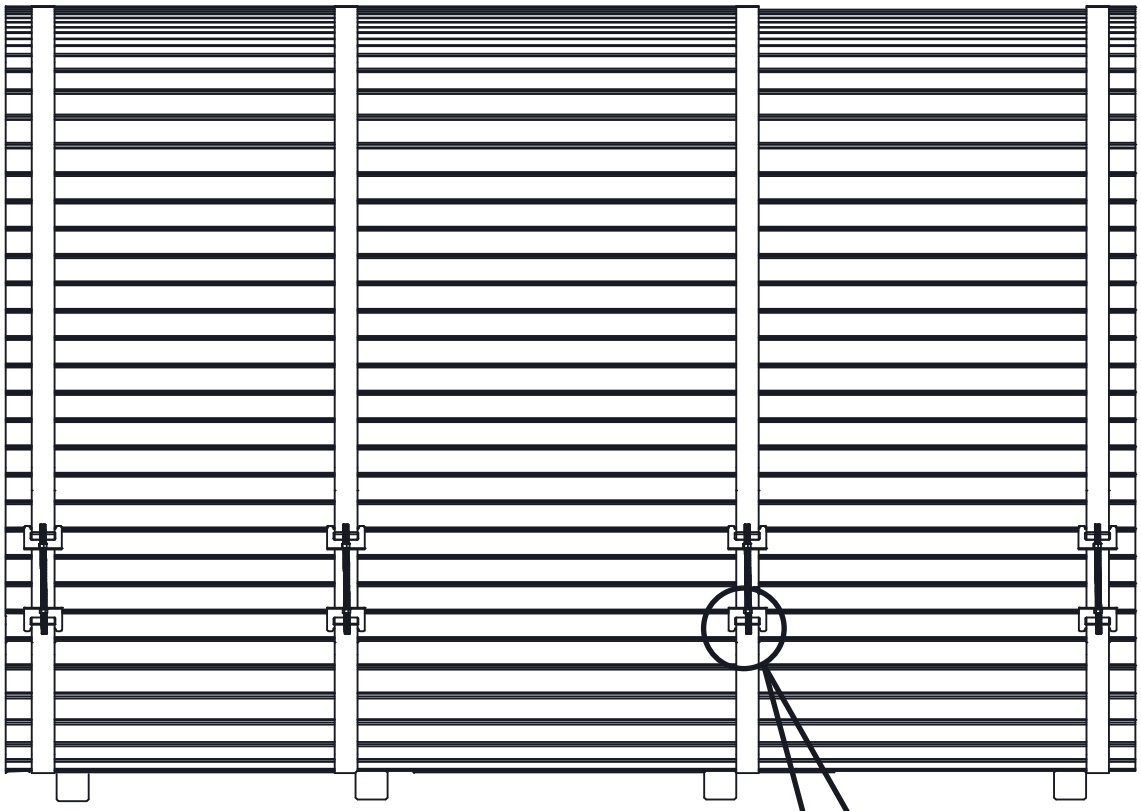


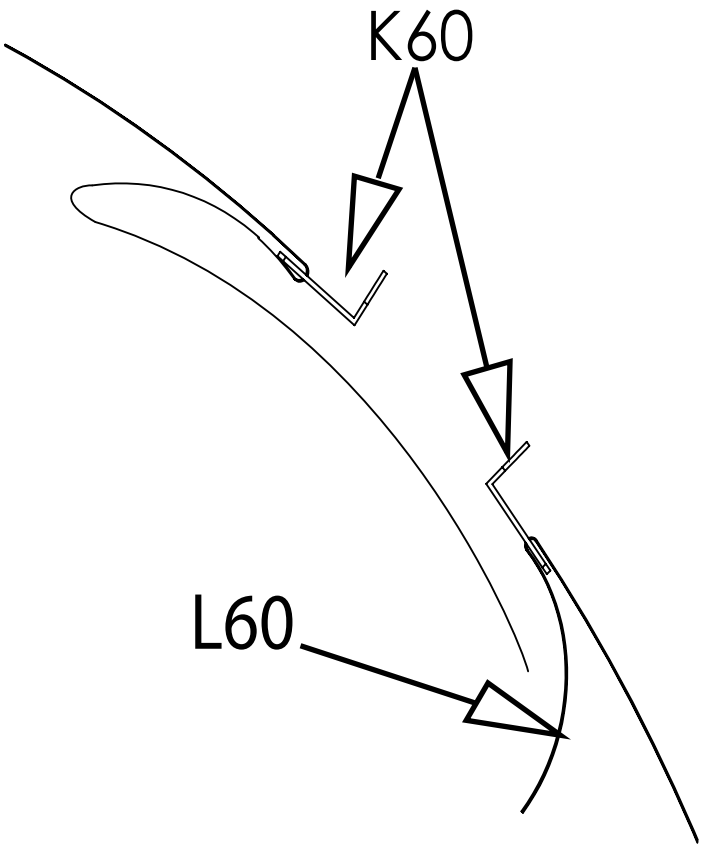


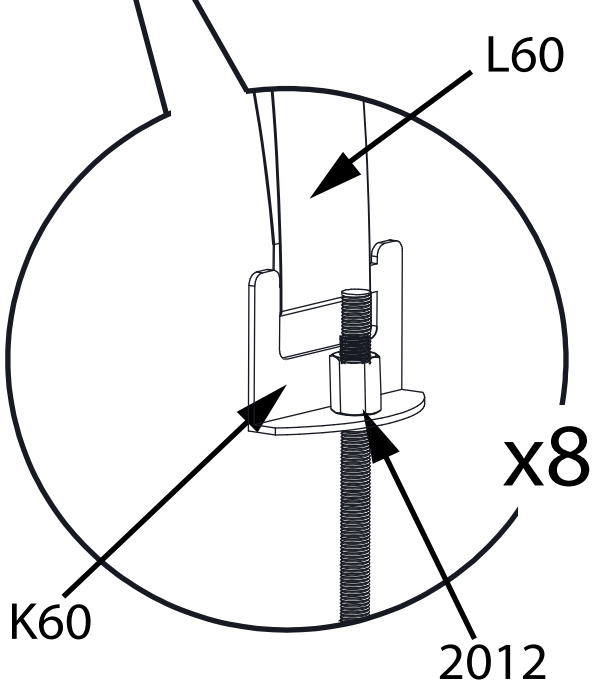


DG1800 - 1
4570 - 8
J - 8


DOOR INSTALLATION
outside view

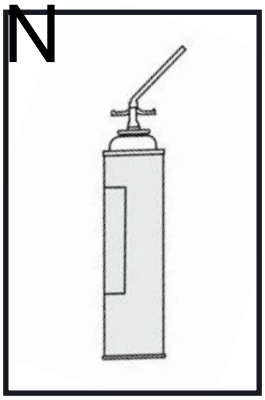


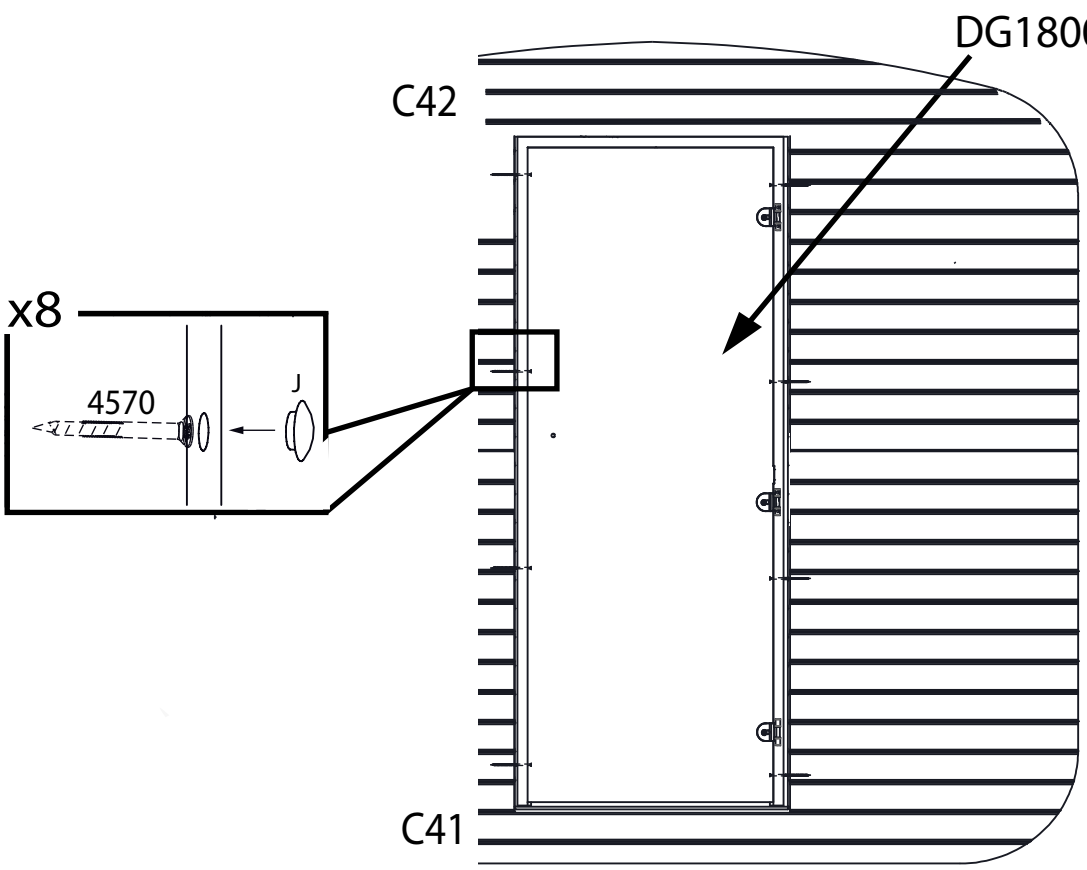


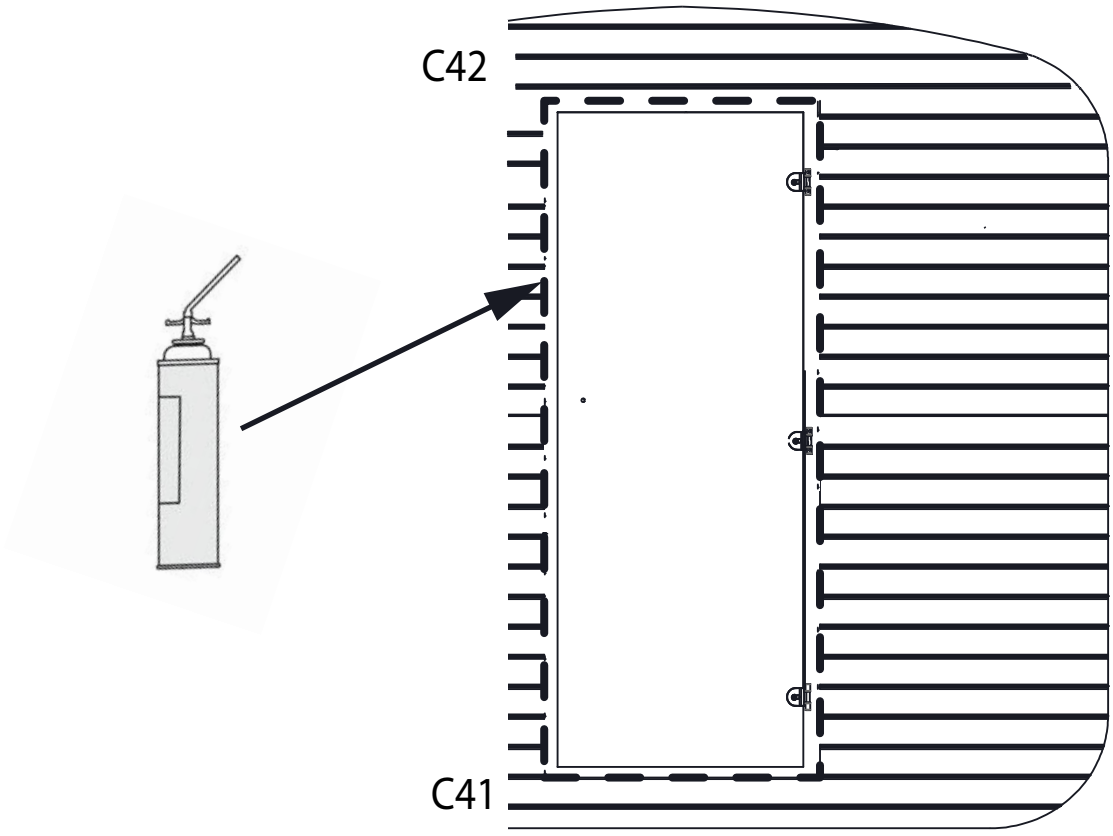

W1800 - 2
W840 - 1
4345 - 16

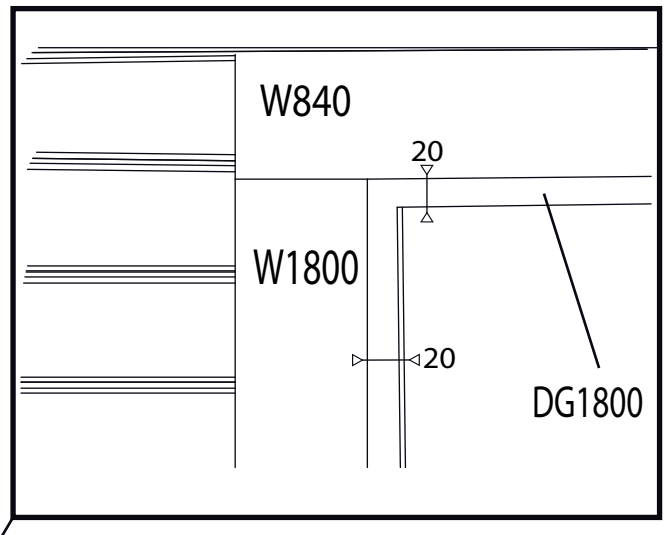


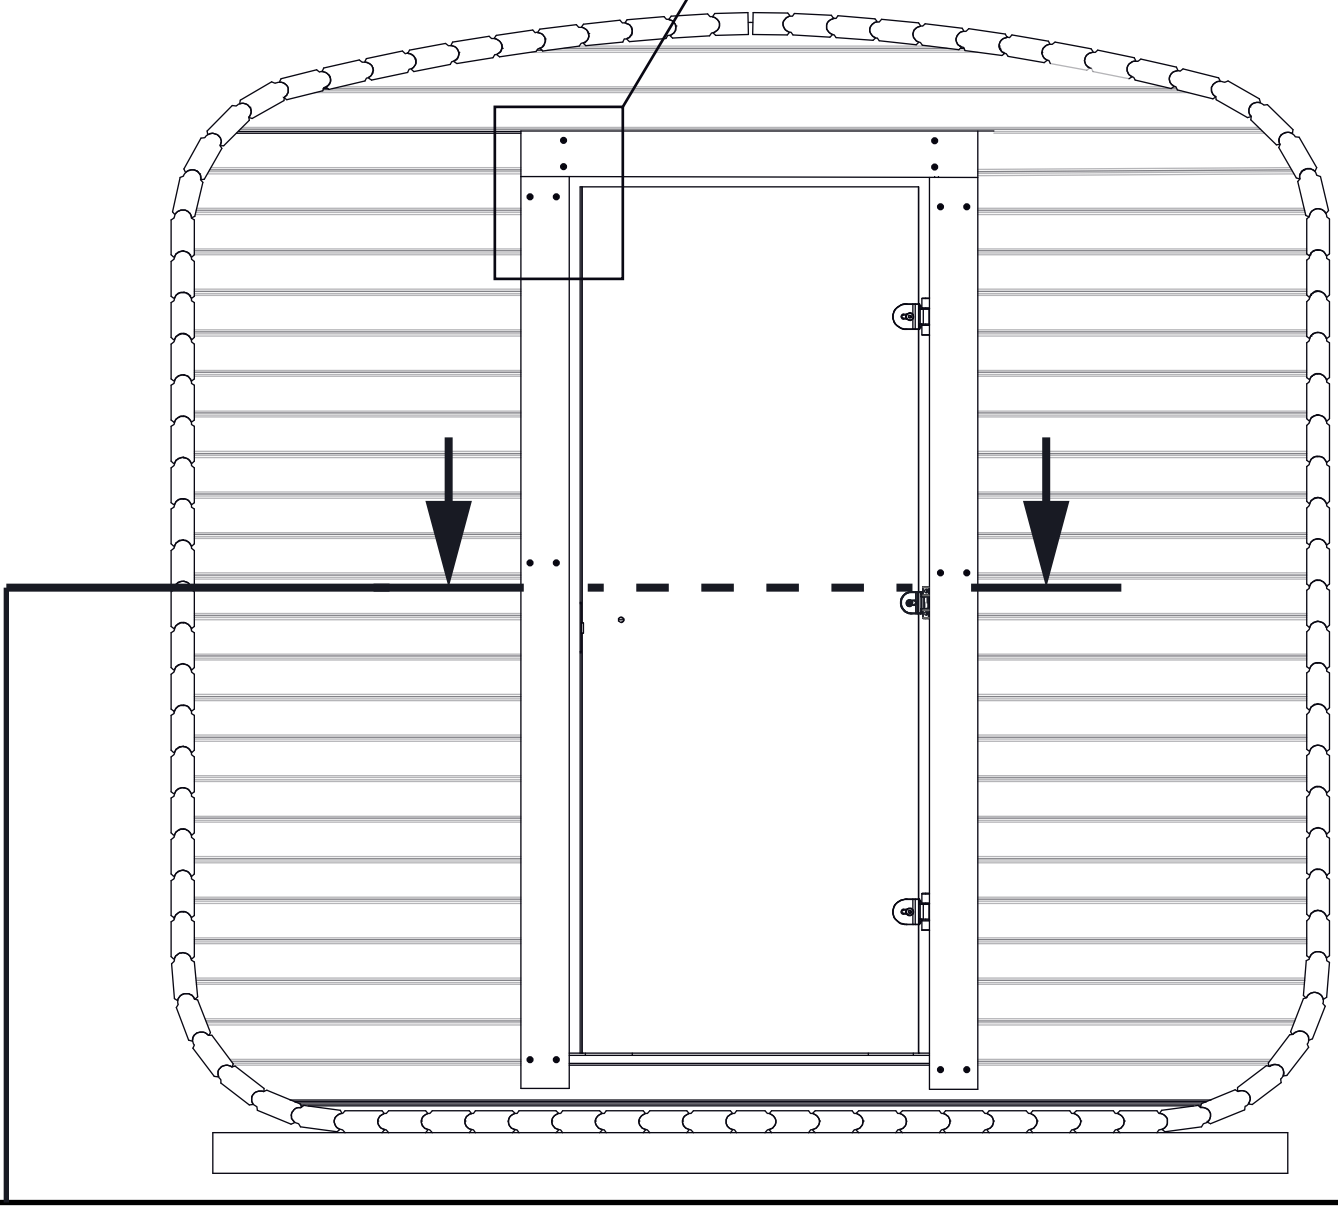

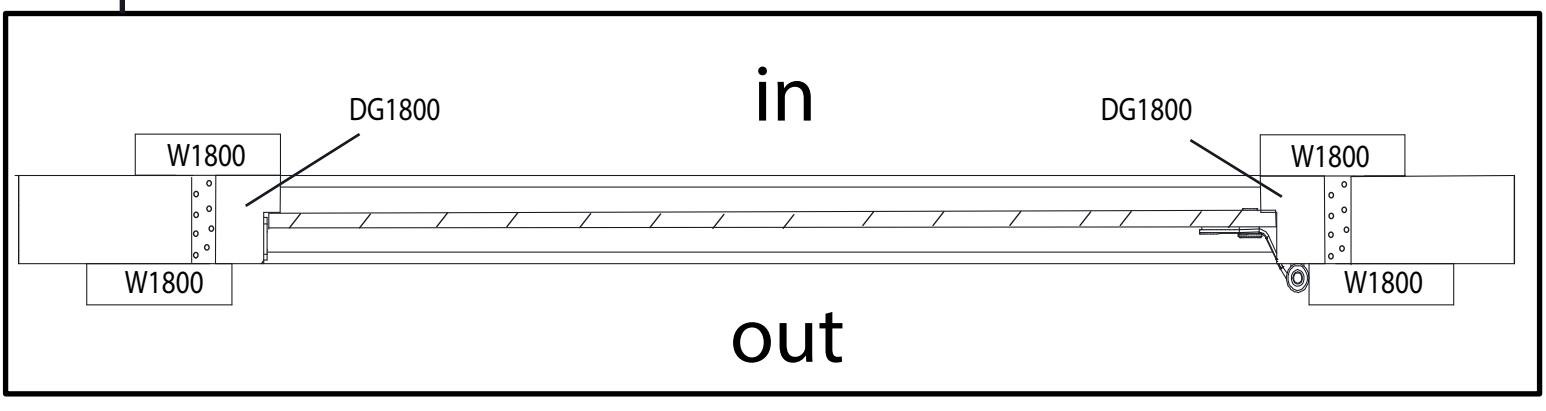



W840 - 1
W1800 - 2
4345 - 16


DOOR INSTALLATION
inside view

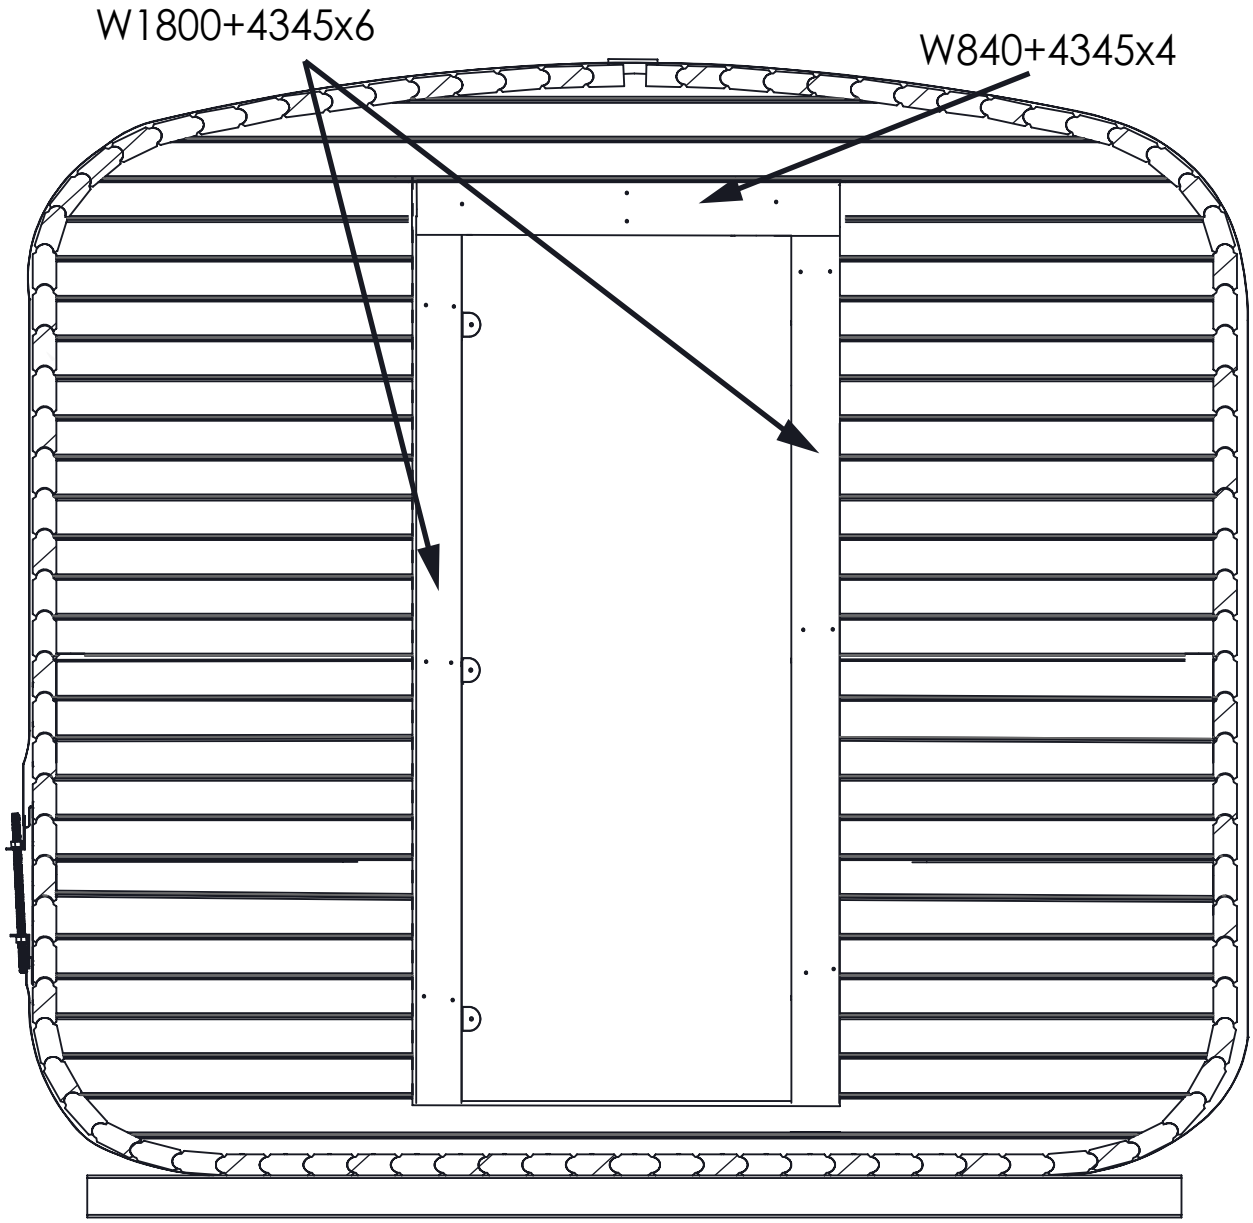


SET 2

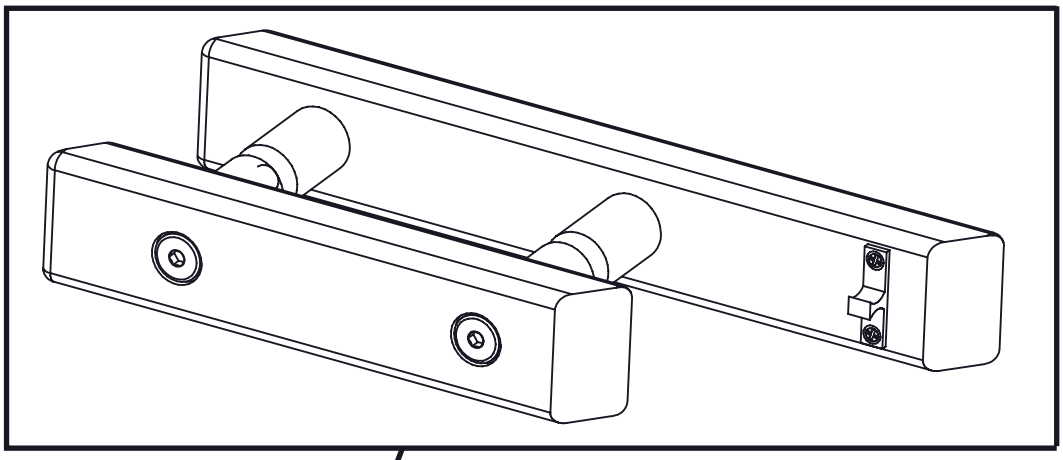


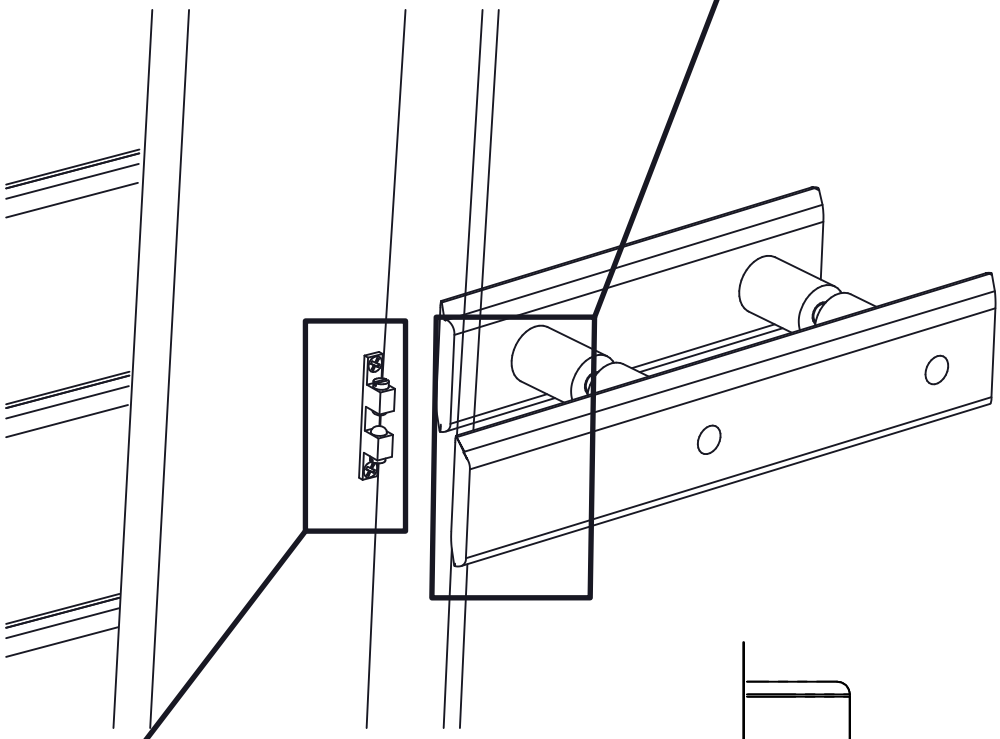


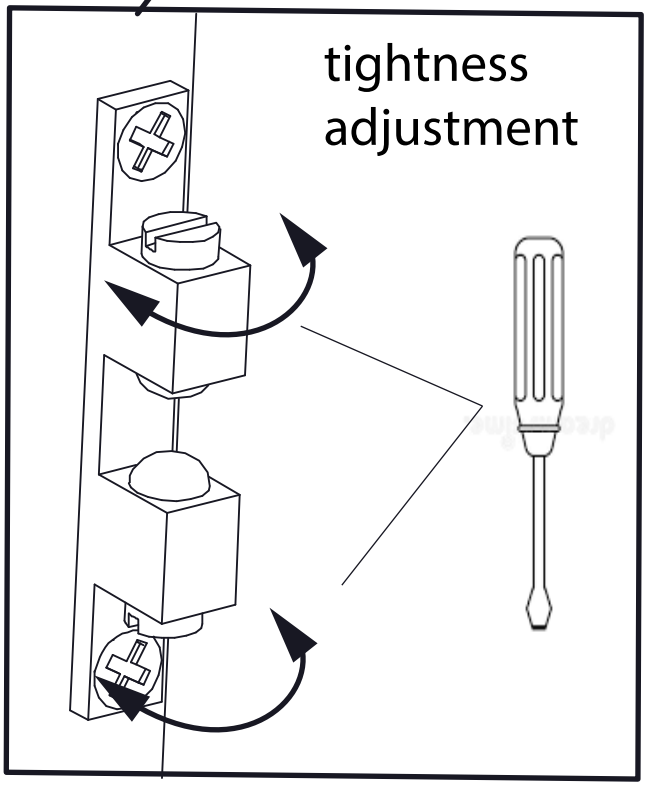


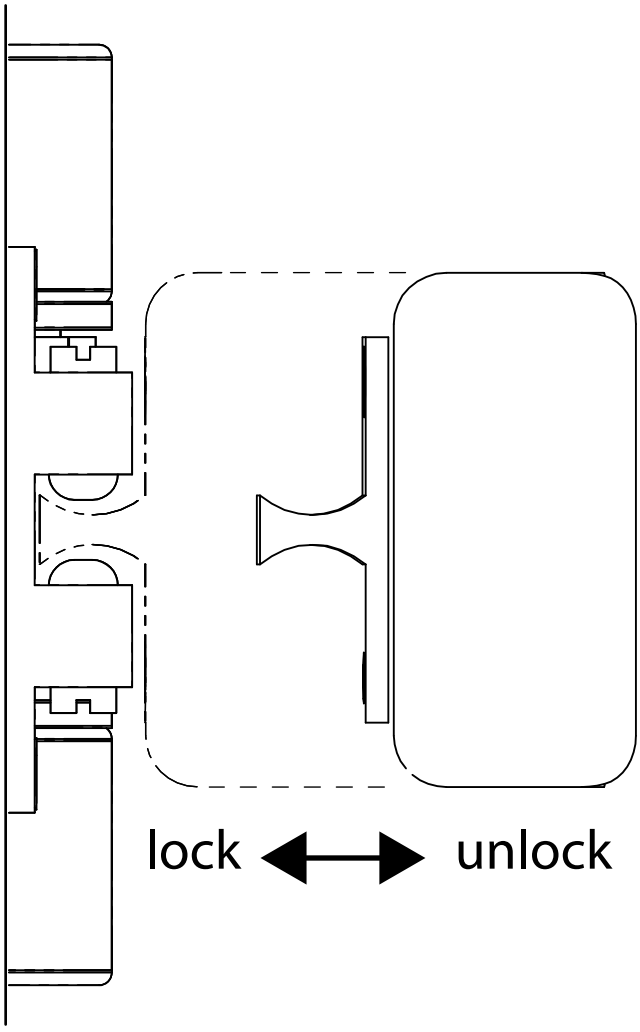


Appendix 1
ROOF FASTENING

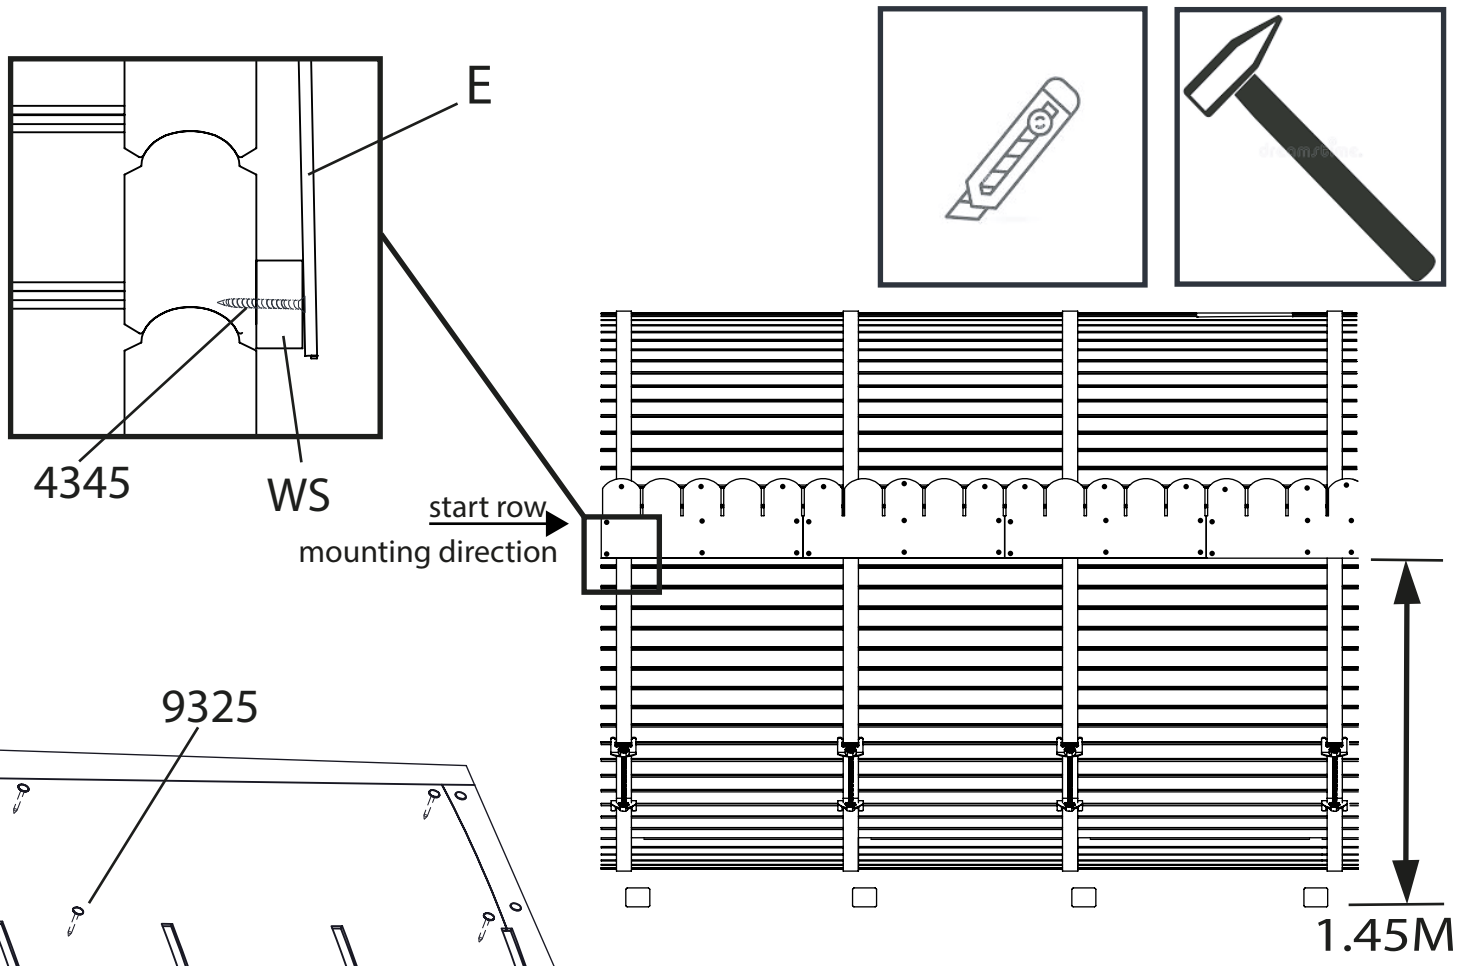


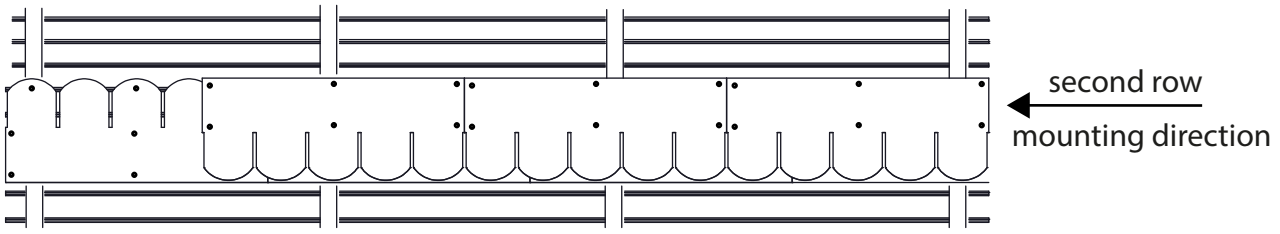

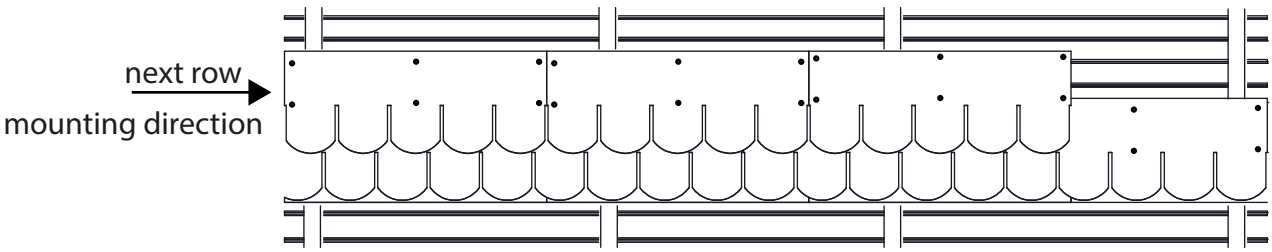


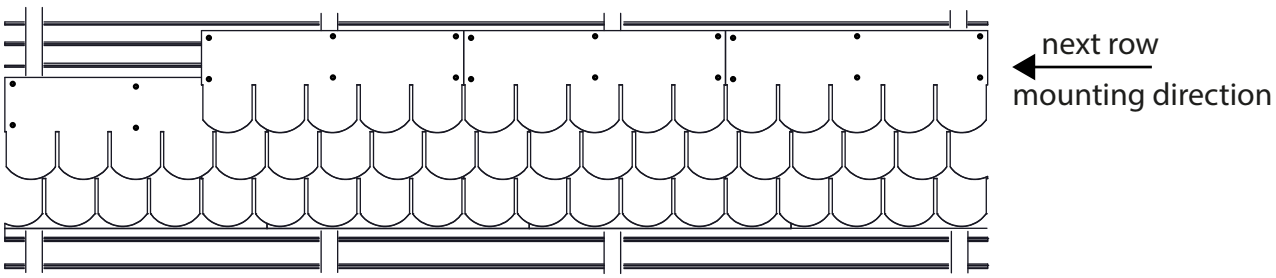


ROOF COVERING

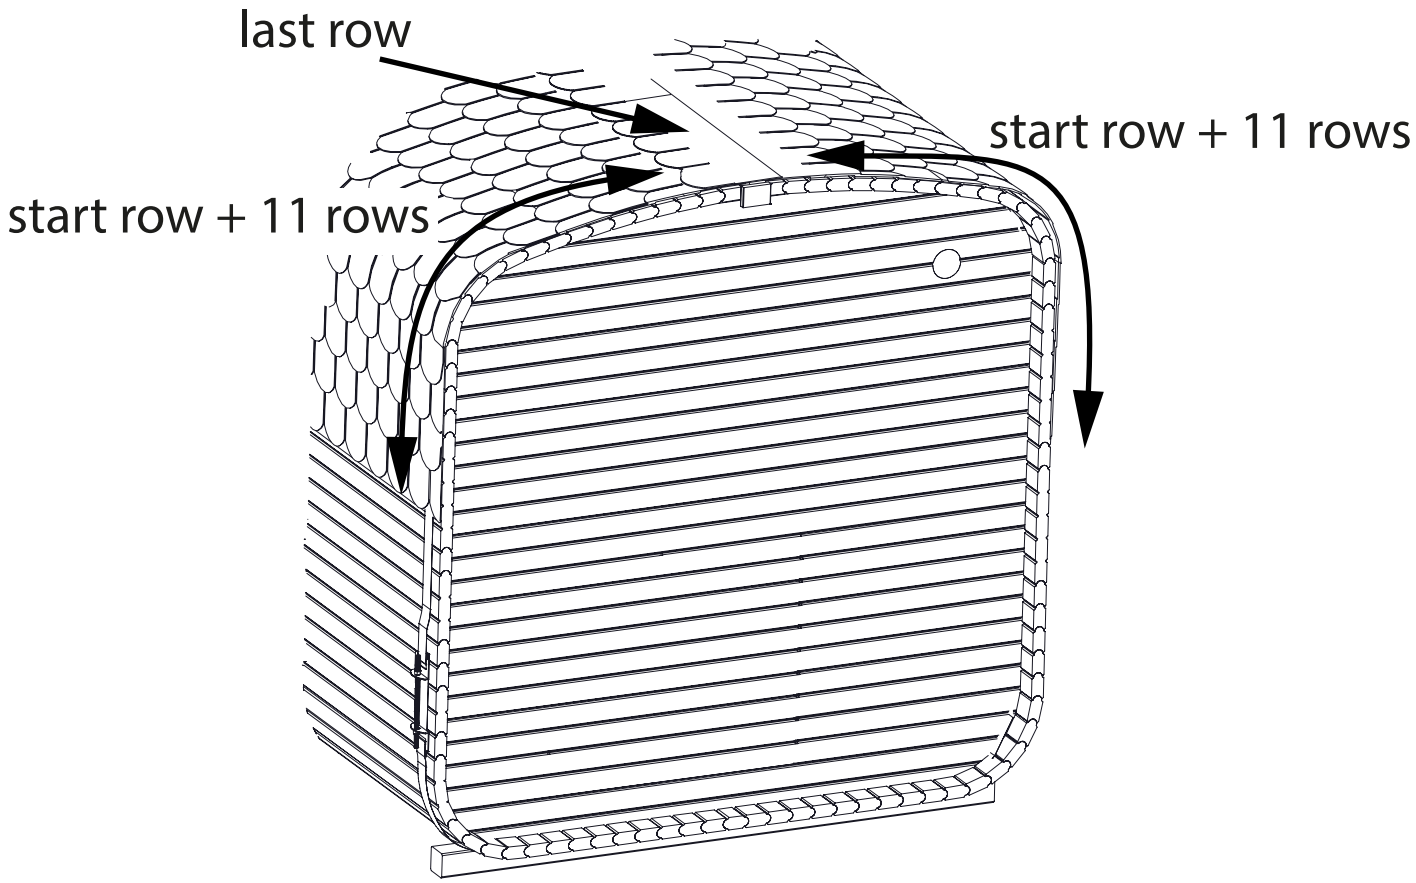



SEALING THE JOINTS

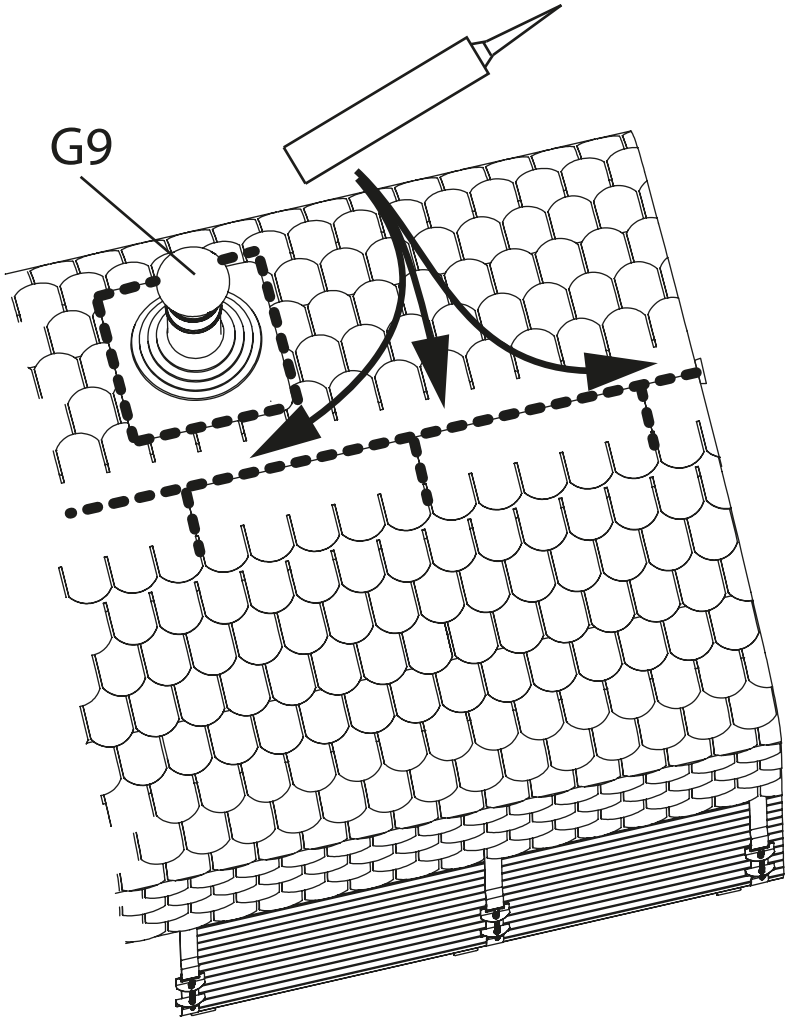


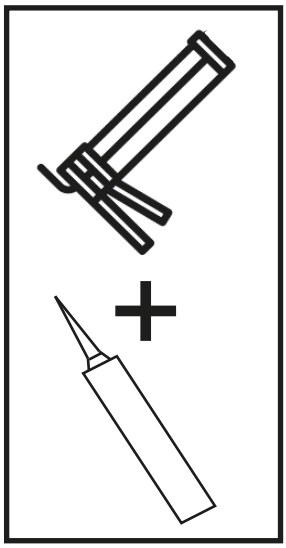



Appendix 2
PANORAMA INSTALLING

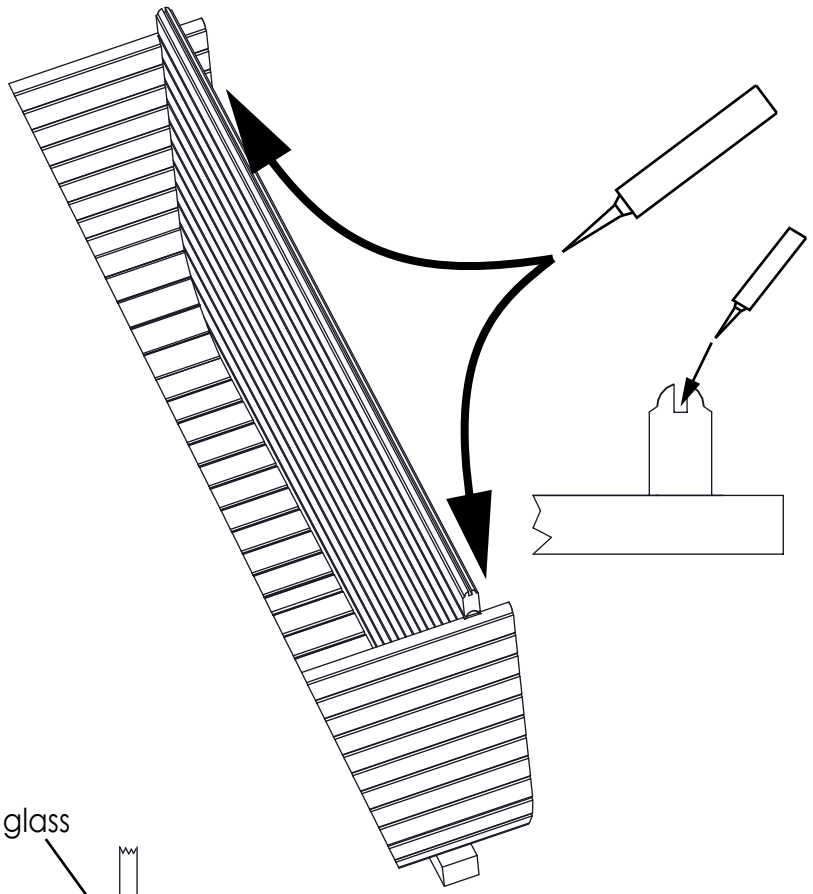


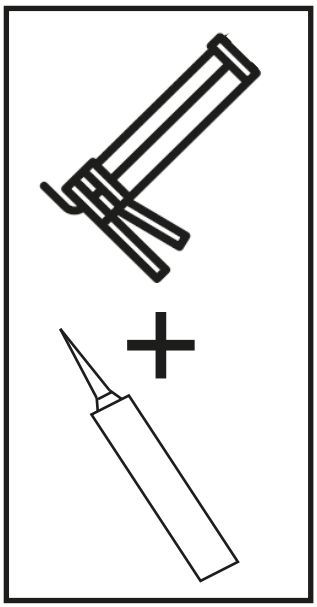


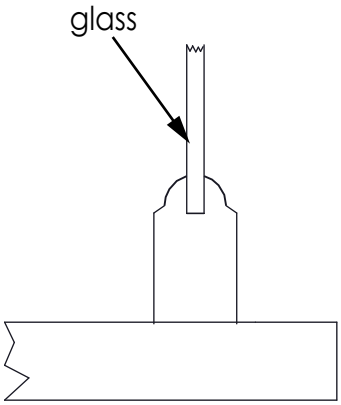


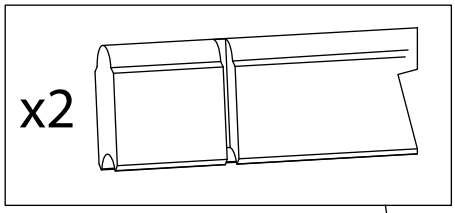


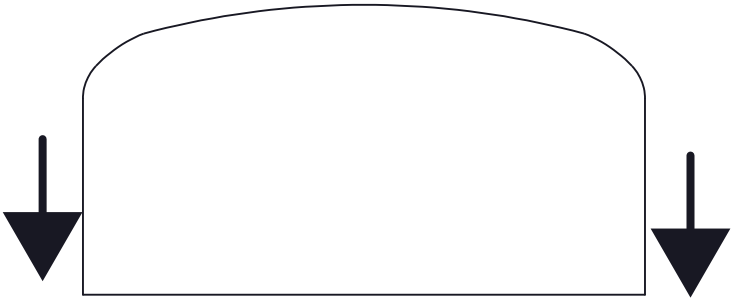


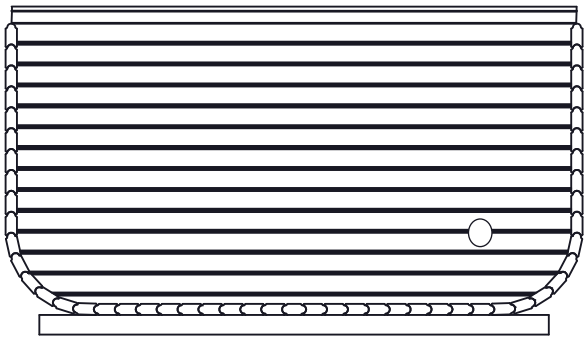


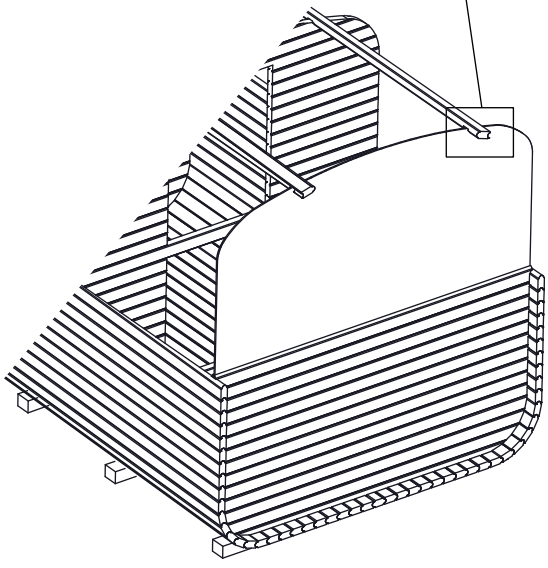

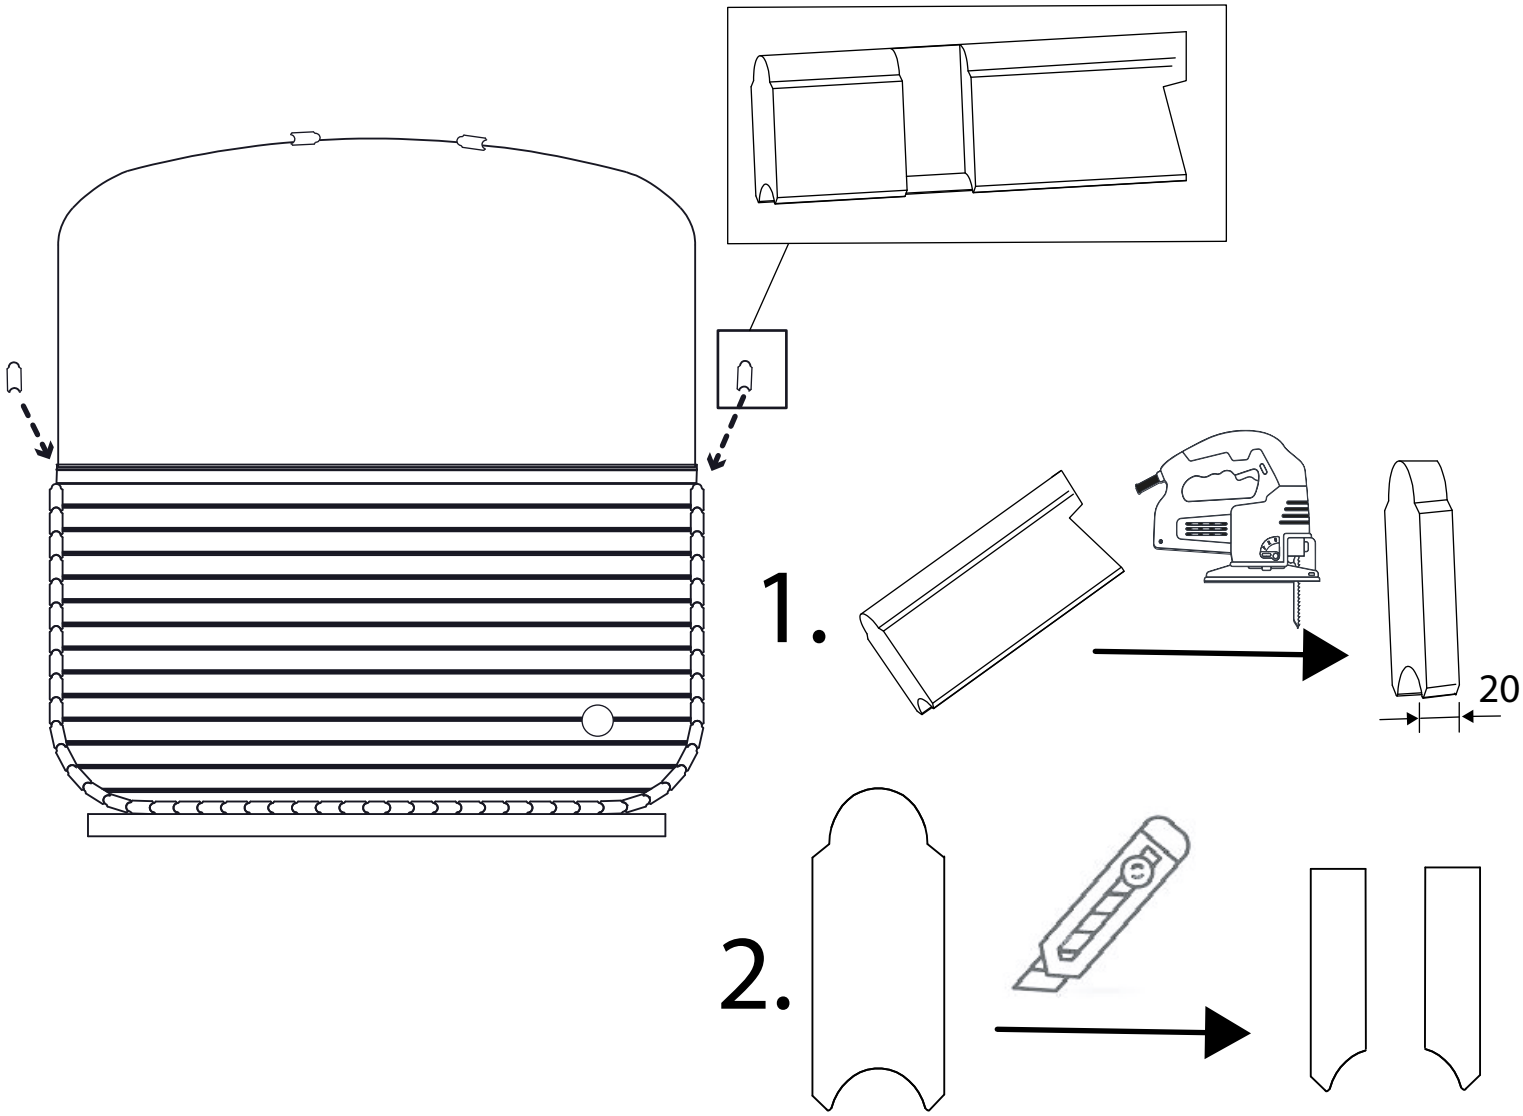
1.
20
2.

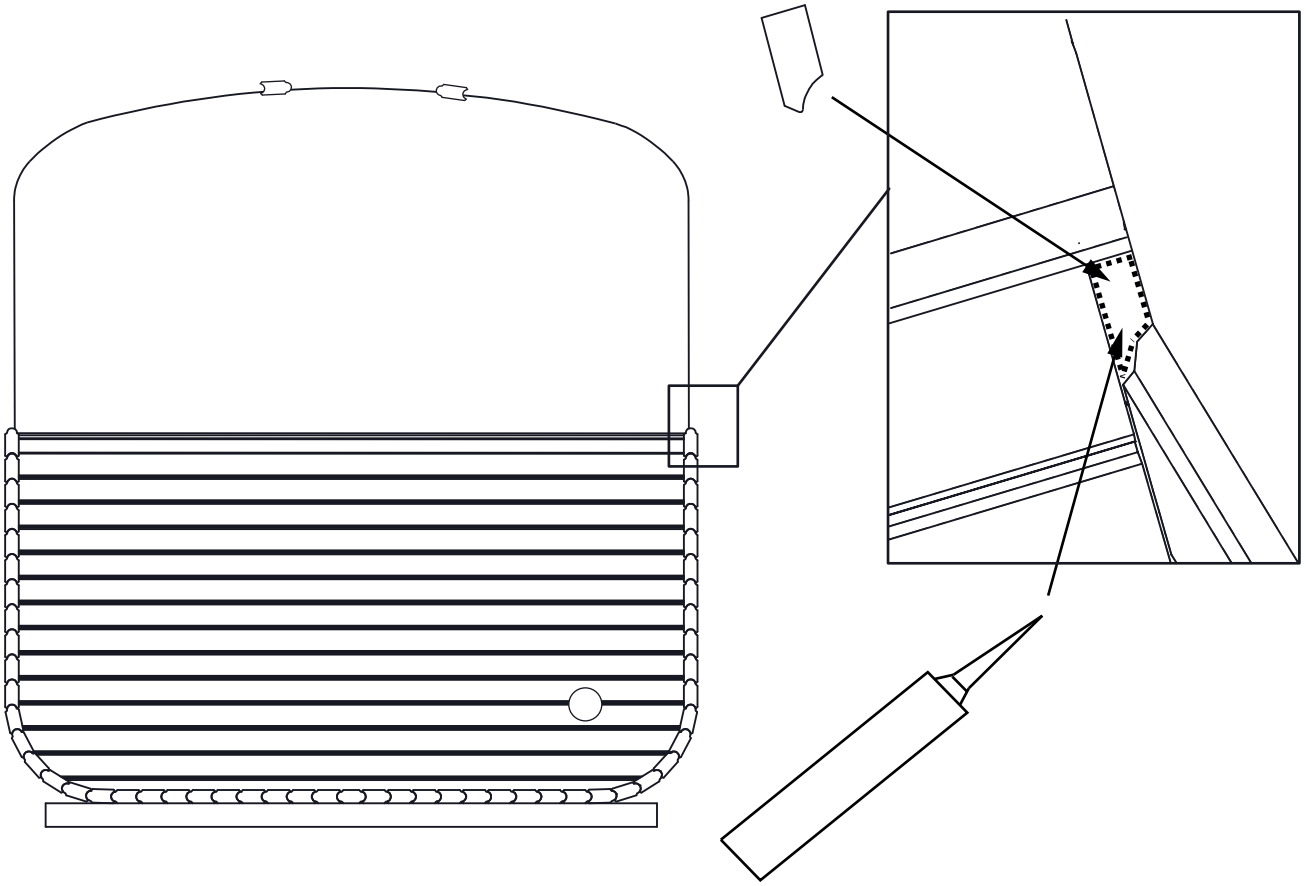

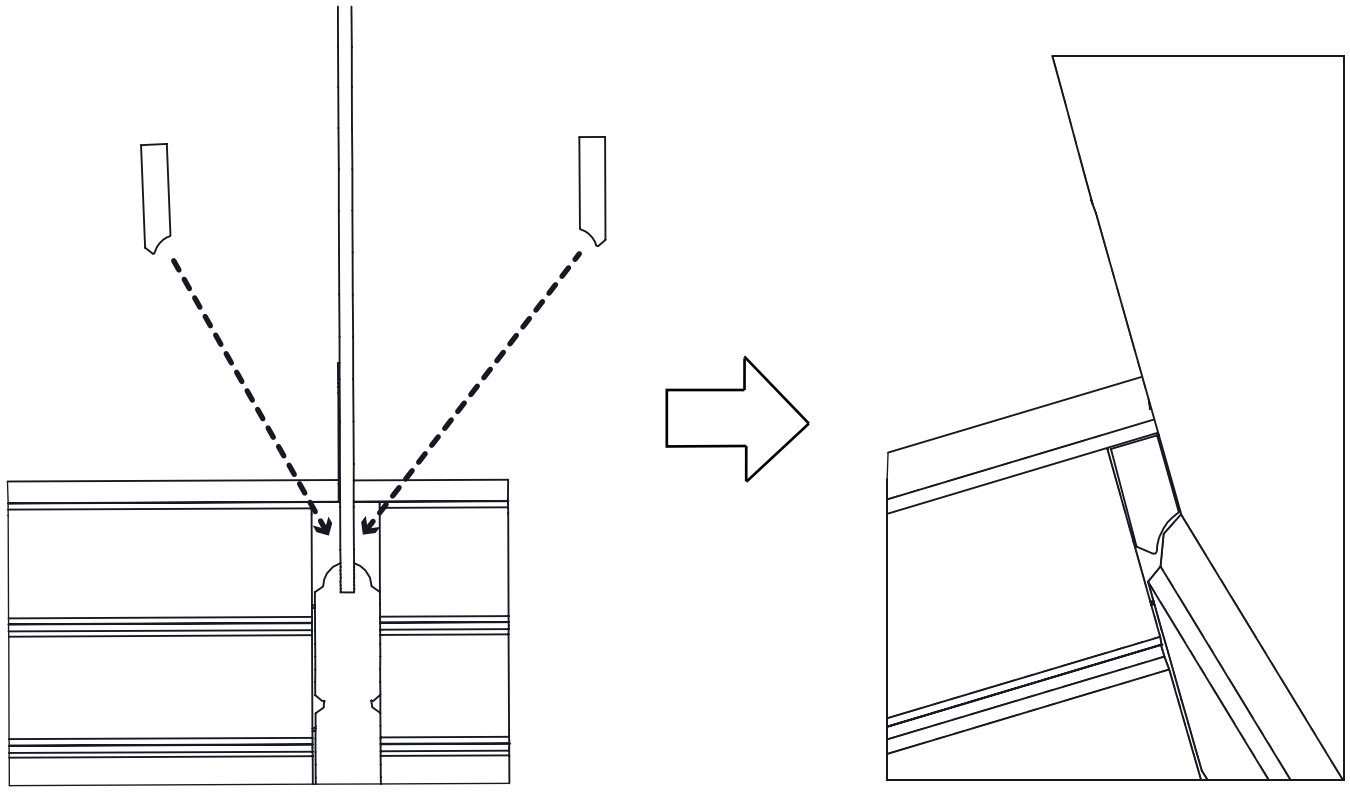

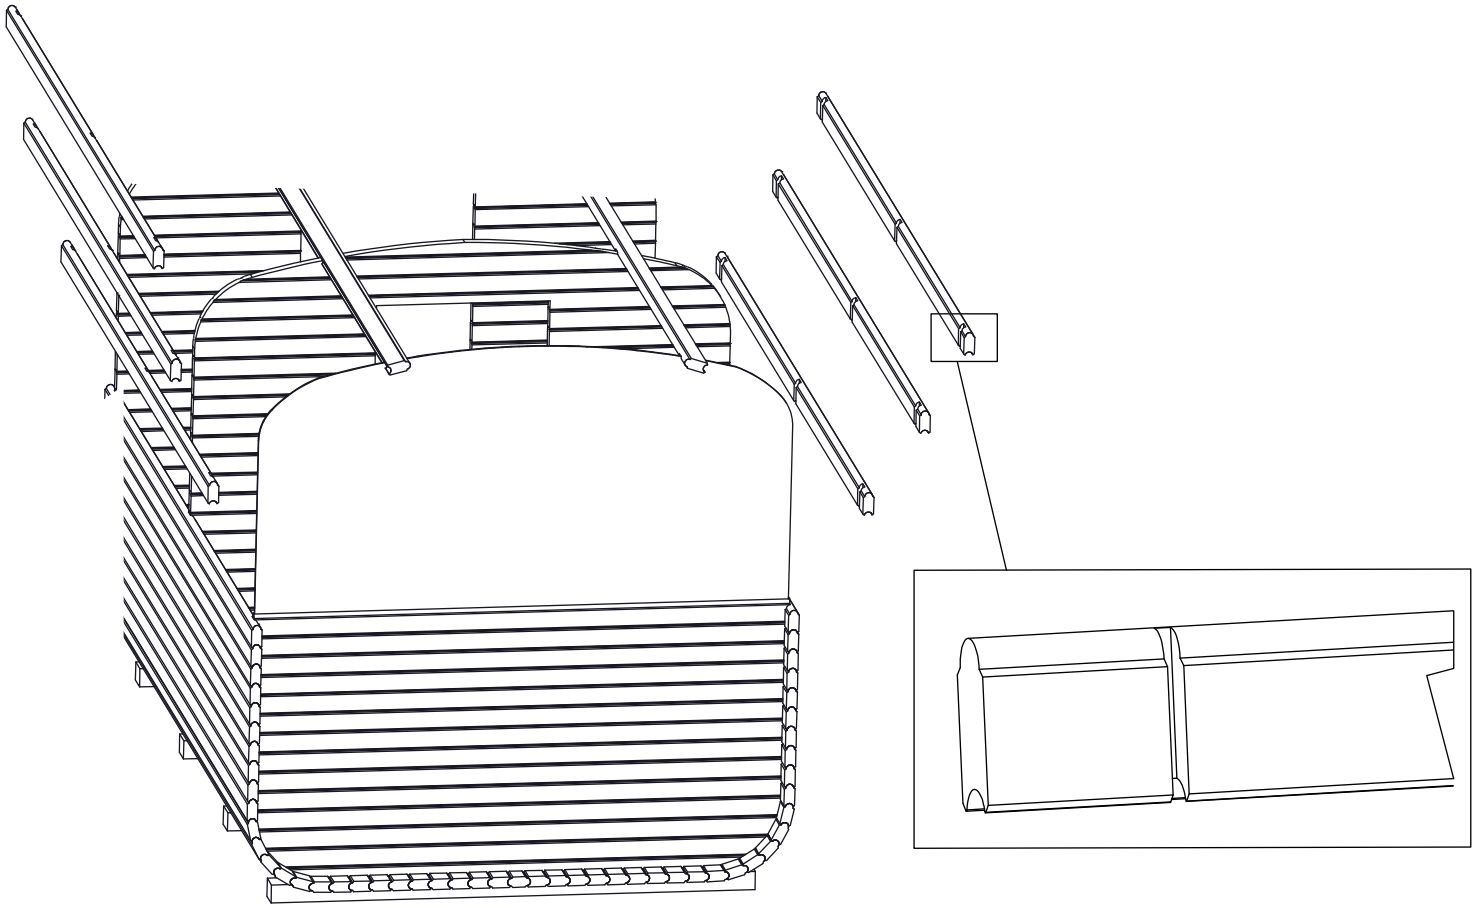



Appendix 3


WOOD-BURNING STOVE AND ELECTRIC STOVE INSTALLING


for set stove only!


COMMON STOVE ASSEMBLING

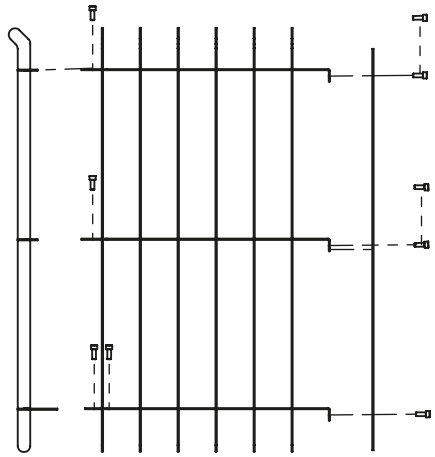

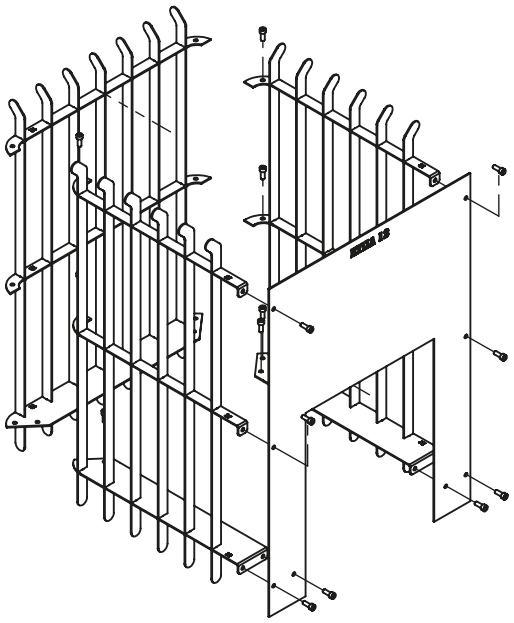


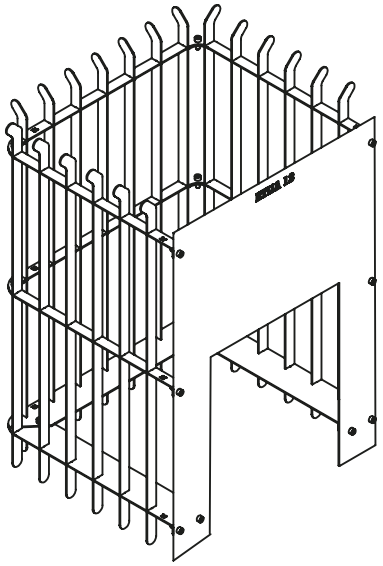

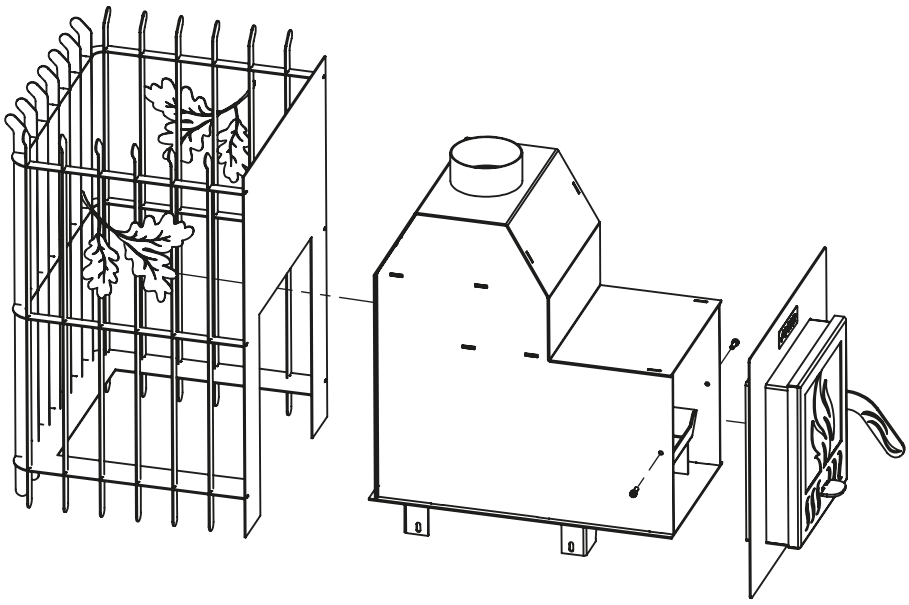

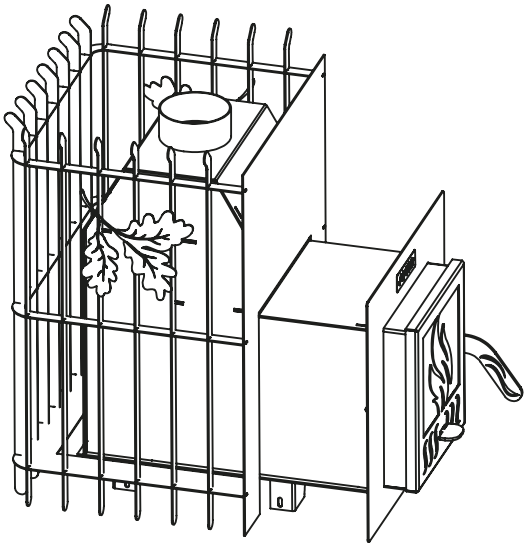


B300 - 2
W400 - 2
4570 - 4

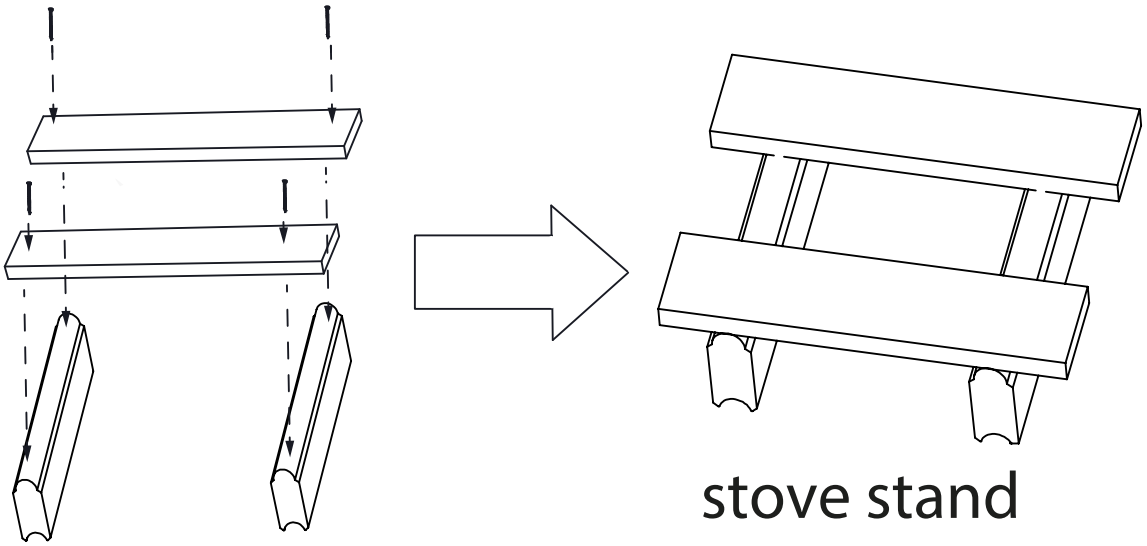


stove stand


ELECTRIC STOVE


G1

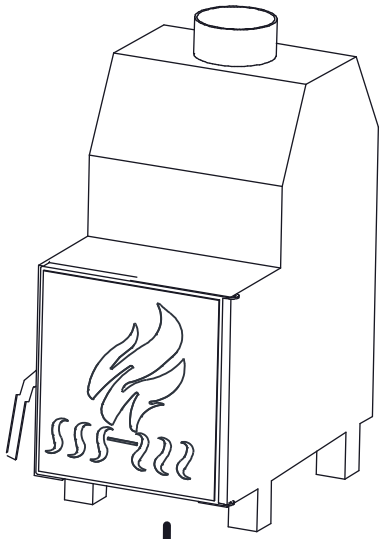


G5

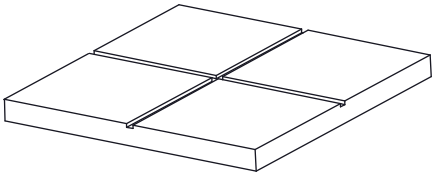


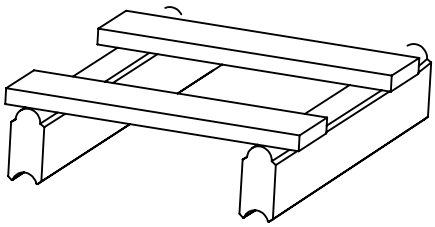

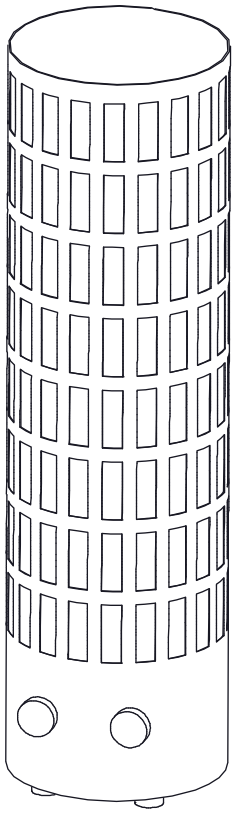

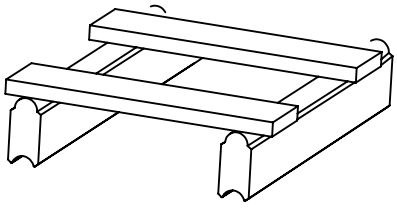



PIPE HOLE

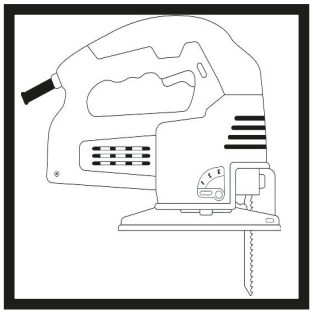


Q2 - 1
4216 - 8


for inner stove door

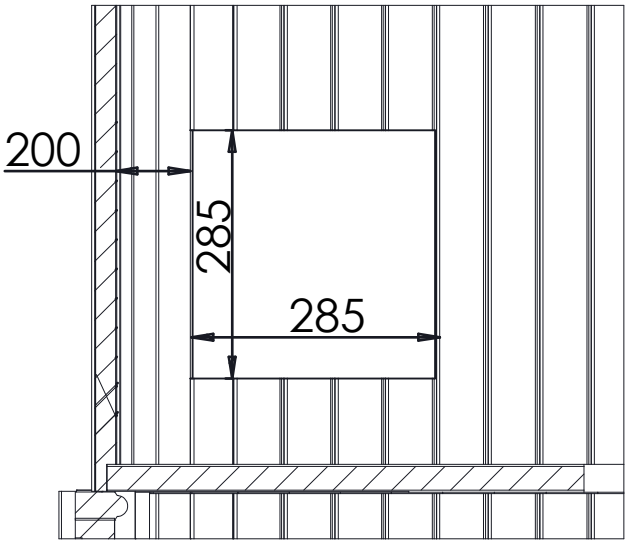


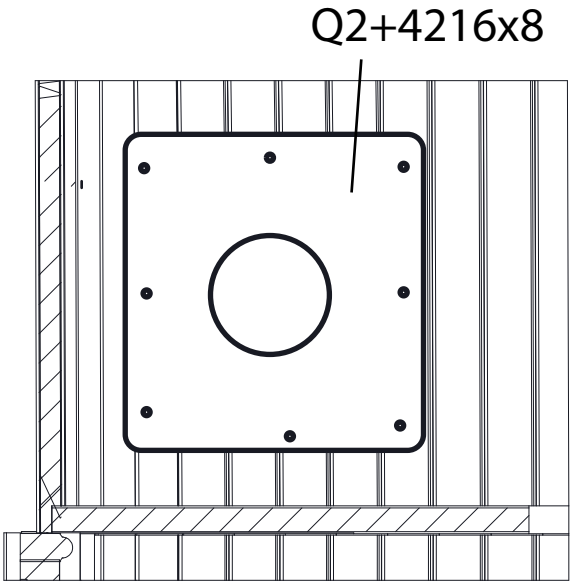

for outer stove door

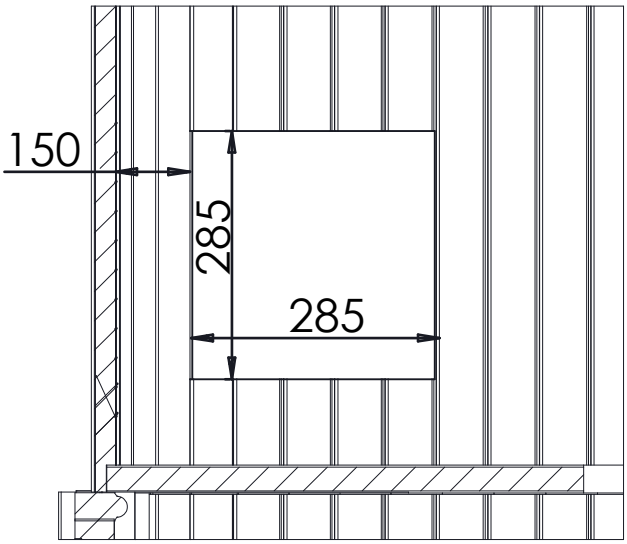


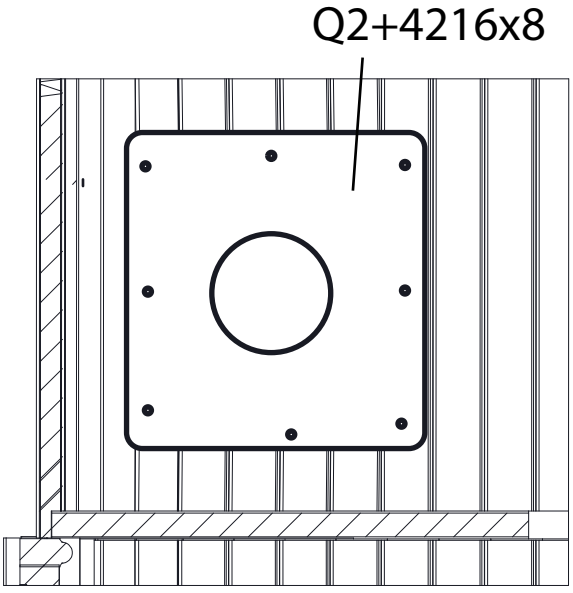


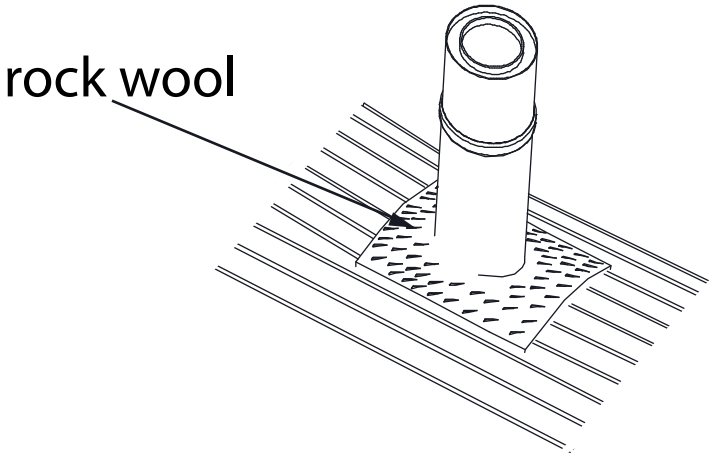

STOVE OPENING
FOR STOVE WITH OUTER DOOR
for set stove only!




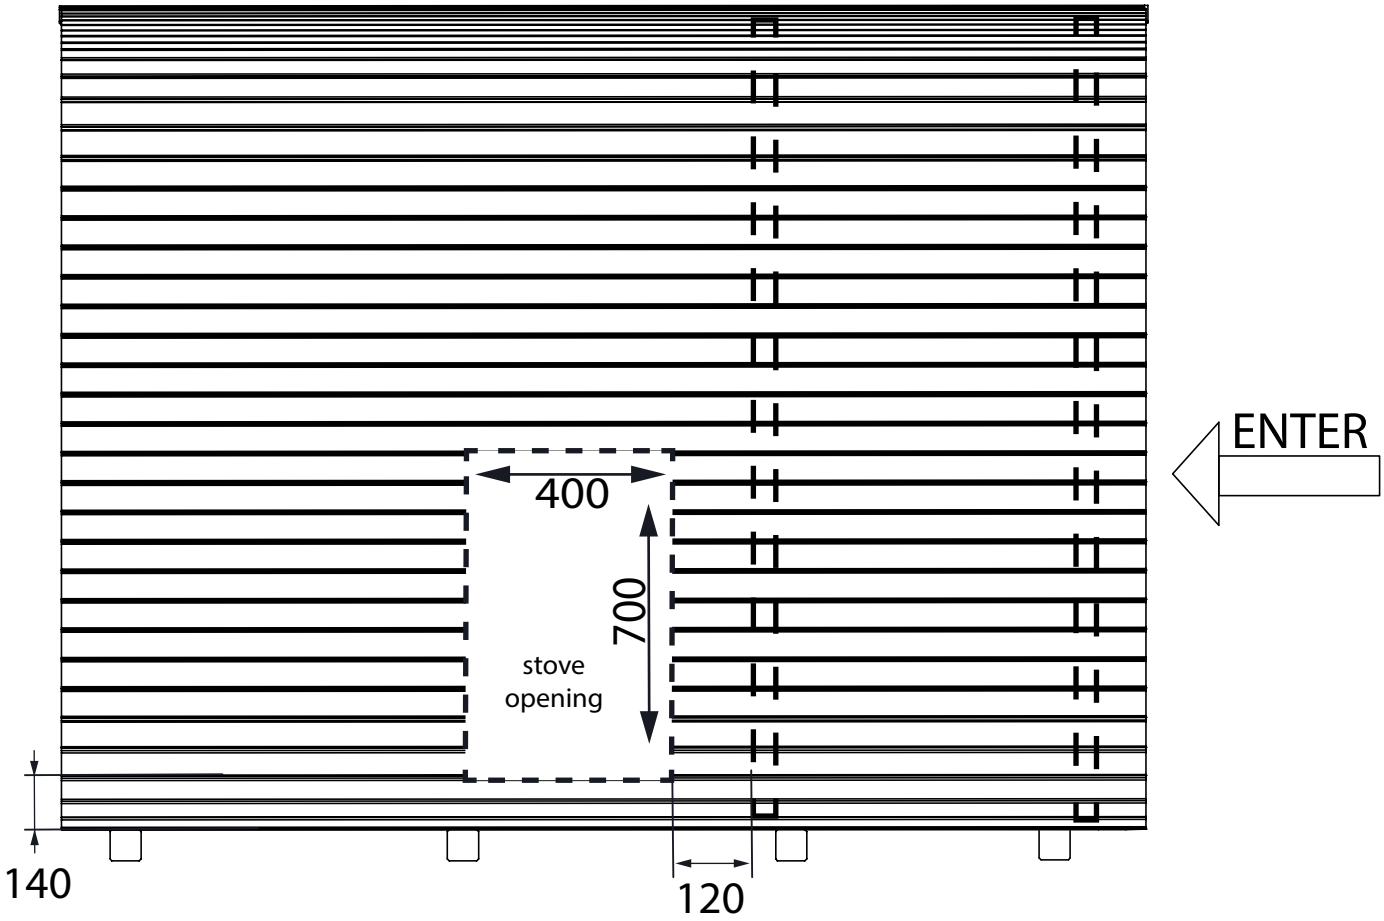

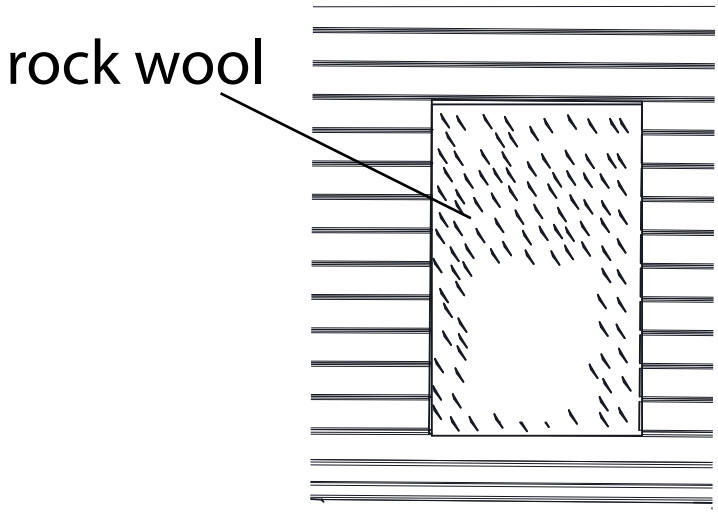


INSIDE VIEW


Q3 - 2
4216 - 20

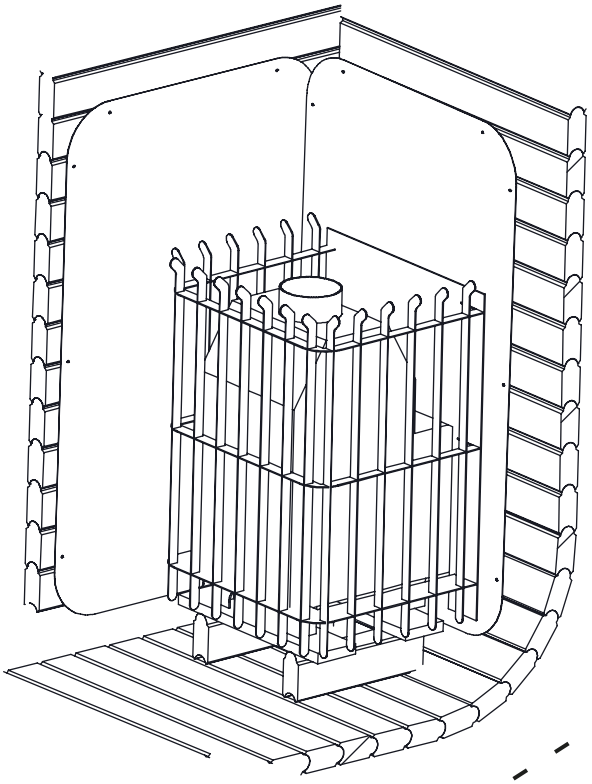

for outer door

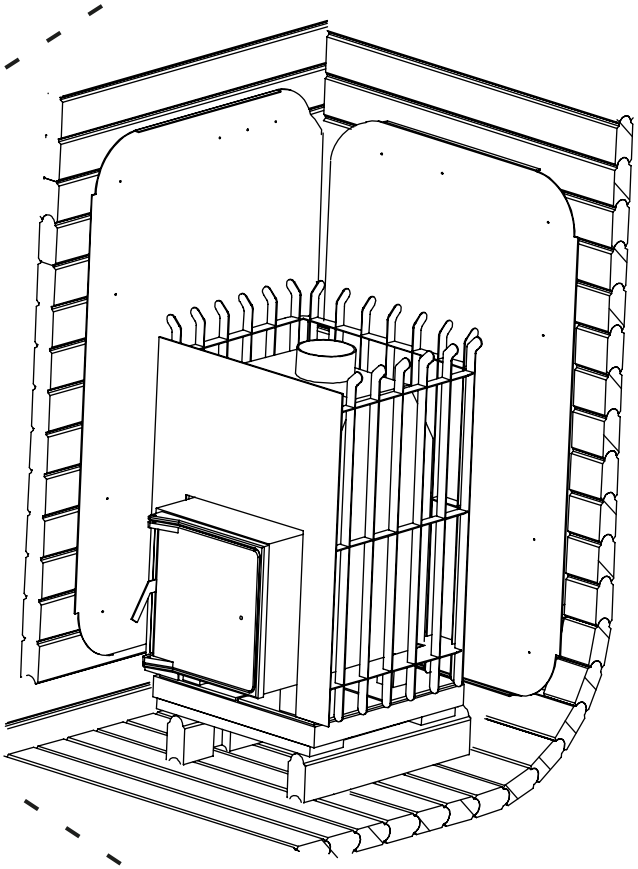


for inner door

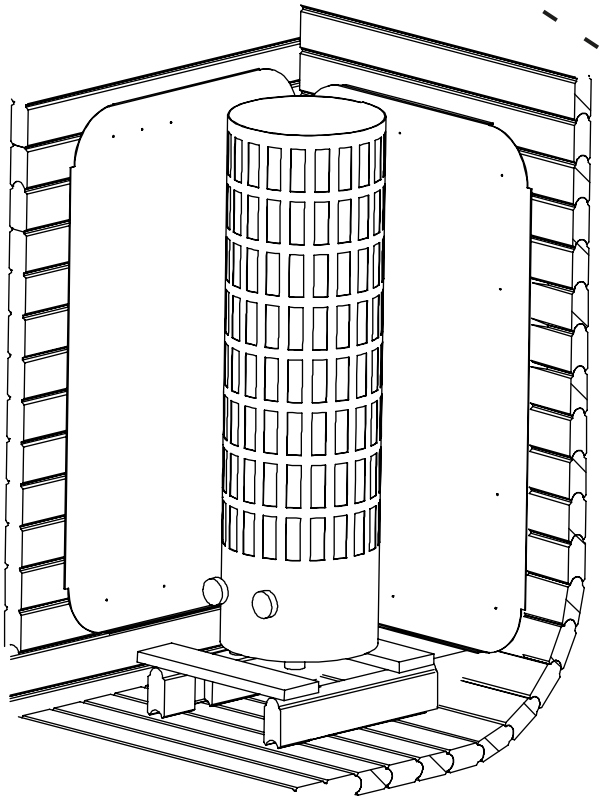


for electric stove

G6 - 1
G7 - 1
G12 - 1

G8 - 1
9325 -12

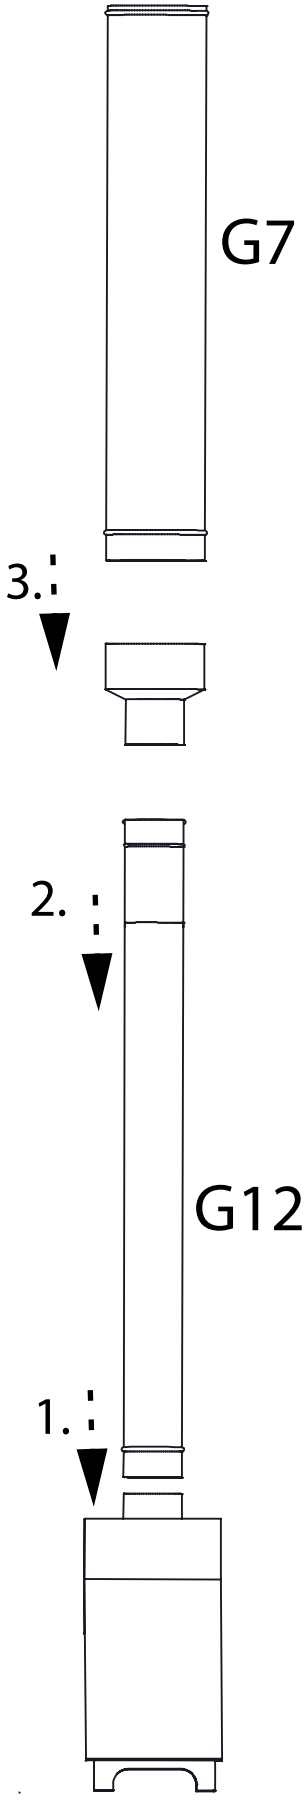

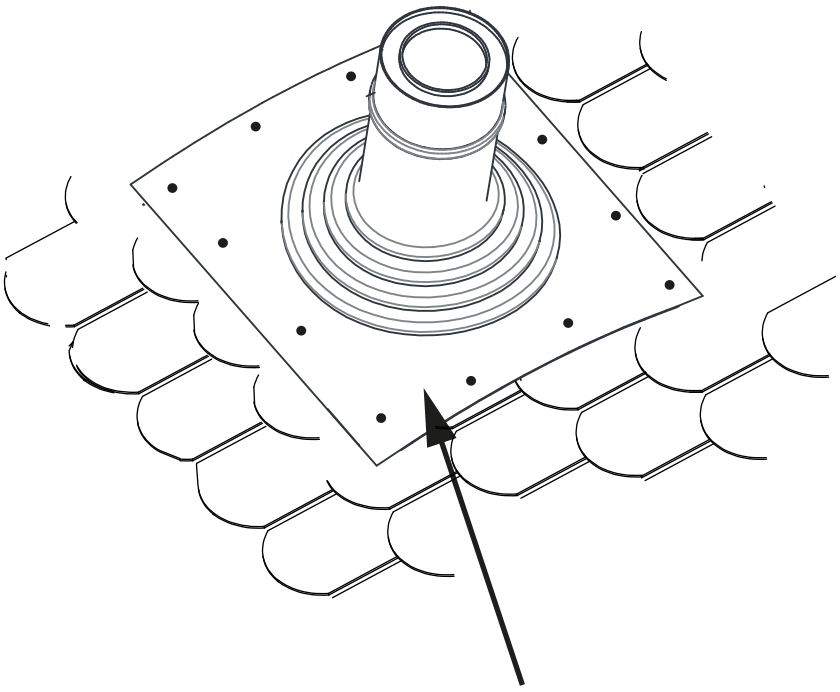

G8 + 12x9325

metal side to down!

The Cabin Six Compact

Assembly instructions · Waldenhaus

Missing or damaged on arrival

Photograph it before you sign for the delivery, then email support@waldenhaus.uk with your order number, the part code from this guide and the photo.

Parts

Every part has a code (C41, S550, R520 …). Quote the code and we send that part.

Treat the outside

The cabin arrives untreated. Treat the outside walls before the first session and before the first winter, then at least every two years.

Questions while you build

Email support@waldenhaus.uk or message us on WhatsApp from waldenhaus.uk.